


# AIRDOPES PULSE

## SMART GUIDE

### PACKAGE CONTENTS

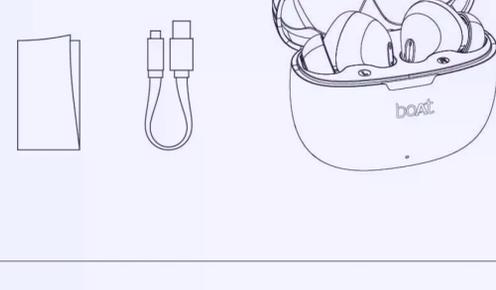


### PRODUCT LABELLING



CTC  
(CAPACITIVE TOUCH CONTROL)



### SMART POWER ON/OFF

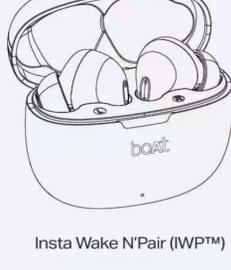


Insta Wake N'Pair (IWP™)



### MANUAL POWER ON/OFF

Long Touch (3s)  
Long Touch (5s)

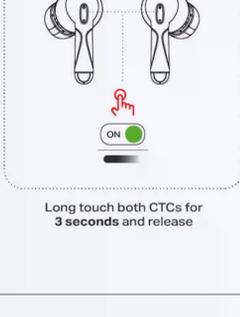


Long touch both CTCs for 3 seconds and release




Long touch one CTC at a time for 5 seconds and release



### BLUETOOTH PAIRING

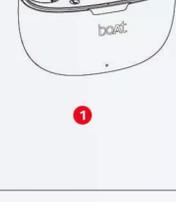

1

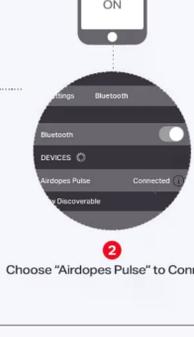

2


Choose "Airdopes Pulse" to Connect



### FUNCTIONS (CALL/MUSIC)

Tap Once  
Tap Twice  
L Left Earbud  
R Right Earbud

#### TOUCH FUNCTIONS

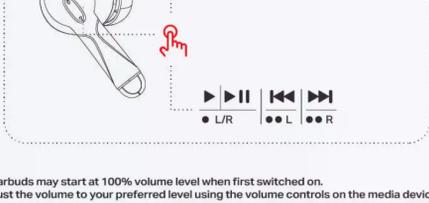


Note: The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.




### FUNCTIONS (VOICE ASSISTANT/ BEAST™ MODE)

Long Touch (3s)  
L Left Earbud  
R Right Earbud

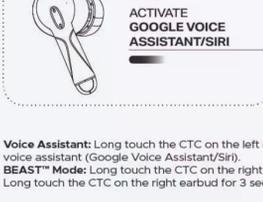

ACTIVATE GOOGLE VOICE ASSISTANT/SIRI

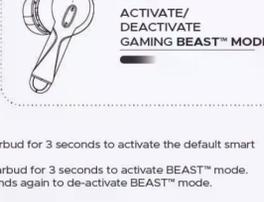

ACTIVATE/ DEACTIVATE GAMING BEAST™ MODE

**Voice Assistant:** Long touch the CTC on the left earbud for 3 seconds to activate the default smart voice assistant (Google Voice Assistant/Siri).  
**BEAST™ Mode:** Long touch the CTC on the right earbud for 3 seconds to activate BEAST™ mode. Long touch the CTC on the right earbud for 3 seconds again to de-activate BEAST™ mode.

Note:  
• boAt Signature Sound remains on by default.  
• If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.  
• The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the media device.



### RESET AIRDOPES

- FORGET THE DEVICE FROM THE LIST OF PAIRED DEVICES.
- TAKE OUT THE EARBUDS FROM THE CASE. LONG TOUCH THE CTC ON BOTH EARBUDS FOR 5 SECONDS.
- PLACE THE EARBUDS BACK INTO THE CASE. WAIT FOR A FEW SECONDS AND OPEN THE CASE LID TO PERFORM A FRESH CONNECTION.

Congratulations! Your Airdopes Pulse has been reset.  
Note: Red LED blinks 5 times on both earbuds to indicate successful reset.



### LED STATUS GUIDE

<30% : WHITE LED BLINKS FOR 8 SECONDS	LOW BATTERY
WHITE LED FLASHES SLOWLY	CHARGING
100% : SOLID WHITE LED	FULLY CHARGED



<10% : RED LED BLINKS 3 TIMES EVERY 30 SECONDS	LOW BATTERY
SOLID RED LED	CHARGING
100% : SOLID BLUE LED FLASHES FOR 10 SECONDS & THEN TURNS OFF	FULLY CHARGED



### SPECIFICATIONS


Headphone Type	TWS
Bluetooth Version	5.4
Music Playtime	Up To 50 Hours (At 60% Volume)
Number Of ENx™ Equipped Mics	2
IWP™ Tech	Yes
BEAST™ Mode	Yes, 45ms Low Latency
Transmission Range	10 m
Driver Size	10 mm*2
Supported Codec	AAAC/SBC
Frequency	20 Hz-20 kHz
Battery	320 mAh (Case); 35 mAh*2 (Earbuds)
ASAP™ Charge	Yes, 10 Mins Charge= 140 Mins Playback
Charging Time	35 mins (Earbuds); 1hr 45 mins (Case)
Charging Interface	USB Type-C
Water Resistance	IPX4



### CHARGING GUIDELINES

- Charging norms & Precautionary Guidelines: -
- Charger/Brick/Adapter : 5V/2A
  - Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

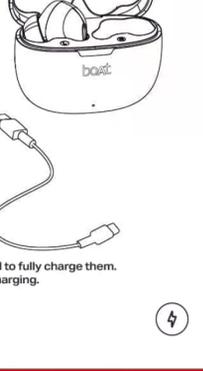

USB-C PORT

Note: (1) Before using the earbuds for the first time, it is recommended to fully charge them. (2) Please note that the earbuds cannot be used / switched on while charging.



### LEARN MORE ABOUT YOUR PRODUCT



Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information