



BRING YOUR HOME TO LIFE



USER MANUAL

BLUETOOTH PAIRING

1. Turn the soundbar on and switch it to Bluetooth mode.
2. Activate your media device's Bluetooth functionality and search for "Aavante Bar 550". As soon as it gets selected by you and paired, music can be played wirelessly.



Note:
*The soundbar can automatically reconnect to the last paired device whenever switched on in BT mode.

AUX/USB/TF MODES

1. Turn on the soundbar and switch it to the desired mode
2. Connect the respective mode (AUX/USB/TF) and start the playback

RECEIVING CALLS

It only works in BT mode and only if the media device can perform this operation

CHARGING

- Connect one end of the provided charging cable to the charging input and the other end to a standard 5V/2A wall adaptor
- While getting charged, the LED stays red
- Once the speaker gets fully charged, the LED turns off



AAVANTE BAR 550

Thank you for purchasing the Aavante Bar 550. You are now just a step away from the realm of audio bliss. Please follow this user manual carefully in case of any doubt that may arise. You can stay plugged into the sound via Bluetooth wireless technology, USB, TF Card and AUX modes. This portable soundbar has been designed for smooth interface that requires minimal of efforts. Let's seize the day with an awesome sound!

Package Contains:

- 1x Wireless Soundbar
- 1x Type-C Charging Cable
- 1x Warranty Card
- 1x Remote Controller
- 1x Audio Cable
- 1x User Manual
- 1x Catalogue

SPECIFICATIONS

Speaker Type	Portable Soundbar
Bluetooth Version:	V5.0
Net Weight:	0.8kg
Working Range:	10m
Driver Size:	50mm*2
Supported Profiles:	A2DP, AVRCP, HFP
Frequency:	82Hz-20kHz
Input Voltage:	DC 5V/2A
Output Power:	16W RMS
Charging Time:	4±1 hours
Charging Interface	Micro USB
Playing Time:	Up to 4.5HRS (at 60% volume)
Talktime	Up to 4HRS
Battery:	2200mAh

PRODUCT OVERVIEW



REMOTE CONTROLS

1. Standby: Switch between standby mode and operational mode
2. Mode: Change the mode
3. Mute: Mute / Unmute the soundbar
4. EQ: Single press to switch between EQ modes – Deep Bass and Balanced Sound modes
5. Volume +/-: Change the volume levels
6. Play/Pause: Play or pause songs in USB / TF / Bluetooth mode
7. Prev/Next: Change tracks
8. BT: Change mode to Bluetooth
9. Voice Assistant: Push to wake up the default smart voice assistant and place your commands/queries
10. 0-9 Keys: Select the desired track in USB/ TF mode



SOUNDBAR CONTROL PANEL

1. Power Button: Turn the soundbar on / off
2. '-' Button: Short press in steps to decrease the volume in any mode. Long press in USB/ TF modes to return to previous song
3. '+' Button: Short press in steps to increase the volume in any mode. Long press in USB/TF modes to skip to next song
4. Play/Pause button: Single press to play/pause tracks in USB/TF/BT mode. Single press to mute/unmute in AUX mode. Single press to receive /end call. Long press to reject calls.
5. Bluetooth/Mode Button: Single press to switch among USB, TF Card, AUX and Bluetooth modes. Long press to disconnect existing Bluetooth connection and start search for a new connection.
6. AUX: To connect the AUX cable as source input
7. USB: To connect USB device as source input
8. TF: To connect TF card as source input
9. Charging LED
10. DC 5V: To charge the soundbar via 5V/2A adapter



SAFETY PRECAUTIONS

- Please note that the battery life of the soundbar varies with the volume music is being played at. If at a lower volume, the battery life will be longer than when the speakers are playing at full volume
- If the speaker requires cleaning please ensure that it is done with the utmost of care. Furthermore, make sure it is turned off and disconnected from all Bluetooth devices. Do not use alcohol, benzene and other chemicals to clean the speaker. Instead, use only a soft cloth. Do not allow the speaker within range of extremely hot or cold substances.
- Try to ensure that no physical damage comes to the speaker via falling, or coming into contact with hard surfaces or sharp edges.
- Do not dismantle the speaker or handle the battery in any way. If any issue arises with the speaker, please enlist the aid of a manufacturer. The battery must not be mishandled or replaced as it can result in explosions or fire hazards. Therefore, please ensure that any servicing of the speaker is done through the service provider or manufacturer.
- If the speaker gets wet, please ensure that it is dried quickly and completely after coming into contact with water. Please do not allow the speaker to get wet at any cost.

Charging norms & Precautionary Guidelines:-

1) Charger/Brick/Adapter	: 5V 2A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

