


ACWO



MagSafe Speaker

CARNIVAL Fire

Manual

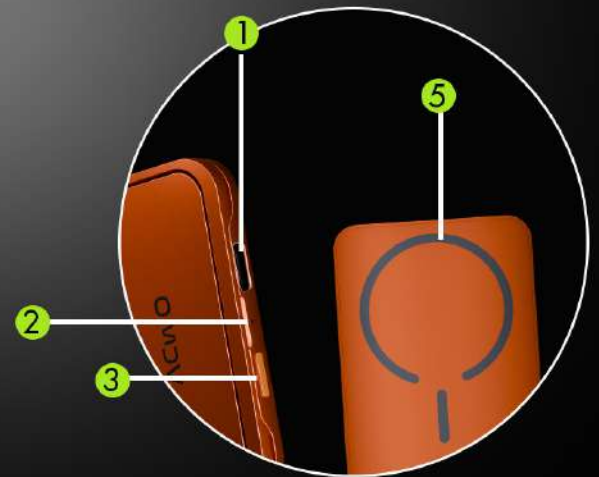

Appearance:

- Type-C Charging Port
- LED Light Indicator
- Power Button
- Built-In Stand
- Magnetic Mounting Surface

Function:

POWER ON:

- Press and hold the power button located next to the light indicator for 3 seconds to switch on the device. Once powered on, a steady blue light will appear, followed by a voice prompt saying "Power On." After this, the blue light continues to blink.

POWER OFF:

- Press and hold the power button located next to the light indicator for 3 seconds to switch off the device. The lights will turn off, and you will receive an audio confirmation indicating that the device has been switched off.
- * **NOTE:** The power button also works as play & pause button , just press it to control your music easily.

BLUETOOTH CONNECTION:

- When the speaker is switched on, it automatically enters Bluetooth mode. Open the Bluetooth settings on your device and search for "ACWO CARNIVAL FIRE" to connect. Once paired successfully, the speaker will automatically reconnect to your device the next time it is turned on, provided the Bluetooth pairing memory has not been deleted from your device.

CHARGING:

- Use the provided Type-C charging cable to charge the speaker.
- During charging, the red indicator light will remain on. Once the speaker is fully charged, the indicator light will turn off.
- Repeated charging and discharging over time may gradually reduce battery performance, which is a normal characteristic of all rechargeable batteries.

LED LIGHT INDICATOR STATUS:

- Steady Red Light - Charging
- Light Off - Fully Charged
- Blinking Blue Light - Power On
- Blue Light Off - Power Off

MAGNETIC MOUNTING SURFACE INSTRUCTIONS:

- Attach the speaker gently to compatible magnetic surfaces.
- Make sure the surface is clean and stable before use.
- Remove the speaker carefully without pulling forcefully.
- Keep away from cards, pacemakers, and sensitive electronic devices.
- Use only on suitable magnetic surfaces for secure attachment.

SAFETY GUIDELINES:

- Keep the speaker away from water, excessive moisture, and direct sunlight.
- Do not expose the speaker to high temperatures, fire, or heat sources.
- Avoid dropping, crushing, or applying excessive pressure to the device.
- Do not attempt to open, disassemble, or modify the speaker.
- Disconnect the charger once the device is fully charged.
- Keep metal objects away from the magnetic surface to avoid unwanted attachment or damage.
- Clean the speaker with a soft, dry cloth only. Avoid using chemicals or liquids.
- Store the product in a cool and dry place when not in use.
- Keep the speaker out of reach of small children to prevent accidental damage or misuse.