



ACWO®



HEADPHONES

TWISTER_313

Manual

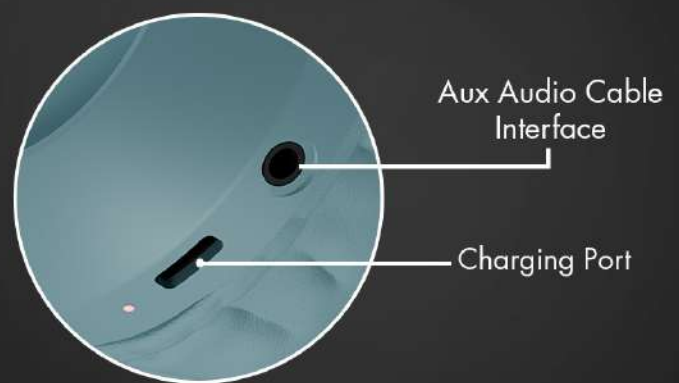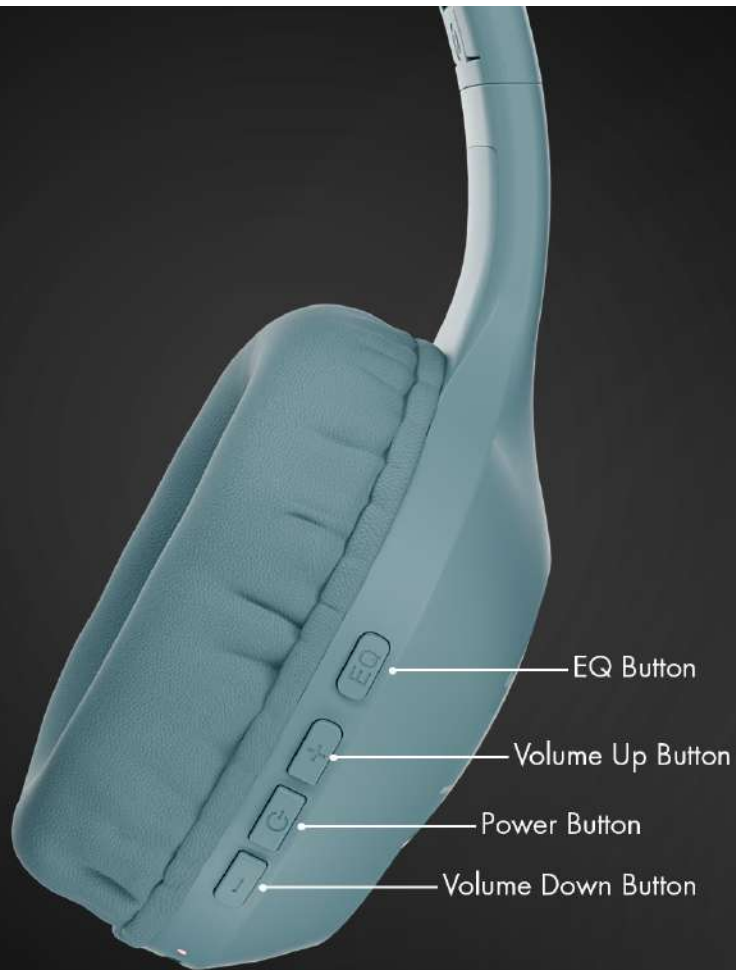

Appearance:

- ① Flexible Design
- ② EQ Button
- ③ Volume Up Button
- ④ Power Button
- ⑤ Volume Down Button
- ⑥ Charging Port
- ⑦ Aux Audio Cable Interface

What You Will Find In The ACwO Box?

- ① Wireless Headphones
- ② Type-C Charging Cable
- ③ Scan Card

Product Features:

- ① 40mm Bass BoomX™ Drivers
- ② AI-ENC Technology
- ③ 50 Hours Music Playtime
- ④ Ultra-Low 45ms Latency
- ⑤ Matte Finish Design
- ⑥ IPX5 Water & Sweat Resistant
- ⑦ Instant Auto Connect
- ⑧ Bluetooth v5.4
- ⑨ Dual Device Connectivity
- ⑩ Voice Assistant
- ⑪ Boom Mic with DSP
- ⑫ Dual EQ Modes: Gaming & Cinematic
- ⑬ ACWO Signature Sound

Safety Precautions for Using Wireless Headphones:

- Keep volume at moderate levels to protect your hearing.
- Do not use headphones while driving or in situations requiring full attention.
- Avoid using headphones for extended periods to prevent ear fatigue.
- Keep the headphones and charging cable away from water or moisture.
- Do not disassemble or modify the headphones.
- Keep out of reach of small children to avoid choking hazards.
- Stop using immediately if you experience discomfort or irritation.
- Charge in a cool, dry area away from direct sunlight or heat.
- Unplug the charger once the battery is full to prevent overheating.

Charging Instructions:

Use the Type-C charging cable provided in the box.

Plug one end of the cable into the charging port on the headphones.

Connect the other end to a USB power source (like a laptop or wall adapter).

While charging, the LED indicator will turn red.

Once fully charged, the LED will turn blue or turn off.

Bluetooth Connectivity:

Press and hold the Power Button until the LED light flashes indicating pairing mode.

Open Bluetooth settings on your phone, or laptop and turn Bluetooth ON.

From the list of available devices, tap on TwiSTER 313 to pair.

A confirmation tone (or voice prompt) will play once connected.

Once paired, your headphones will automatically connect to the same device when turned on (if Bluetooth is enabled on the device).

Power On:

Press and hold the power button for 1–2 seconds. A blue light will flash, followed by a voice prompt saying "Power On."

Power Off:

Press and hold the power button for 1–2 seconds. A red light will flash, followed by a voice prompt saying “Power Off.”

Button Functions:

Play / Pause:

Press the Power Button once to play or pause your music.

Volume Up:

Press and hold the ‘–’ button for 1–2 seconds to gradually decrease the volume.

Previous Track:

Press the ‘–’ button once to return to the previous track.

Voice Assistant

Triple press the Power Button to activate voice assistance.

Answer a Call:

Press the Power Button once to answer an incoming call.

End Call:

Press the Power Button once again to hang up the call.

Reject Call:

Press and hold the Power Button for 1 second to reject an incoming call.

Redial:

Press the Power Button twice to quickly redial the last number called.