


ACWO®



EARBUDS

DWOTS BLING

Manual

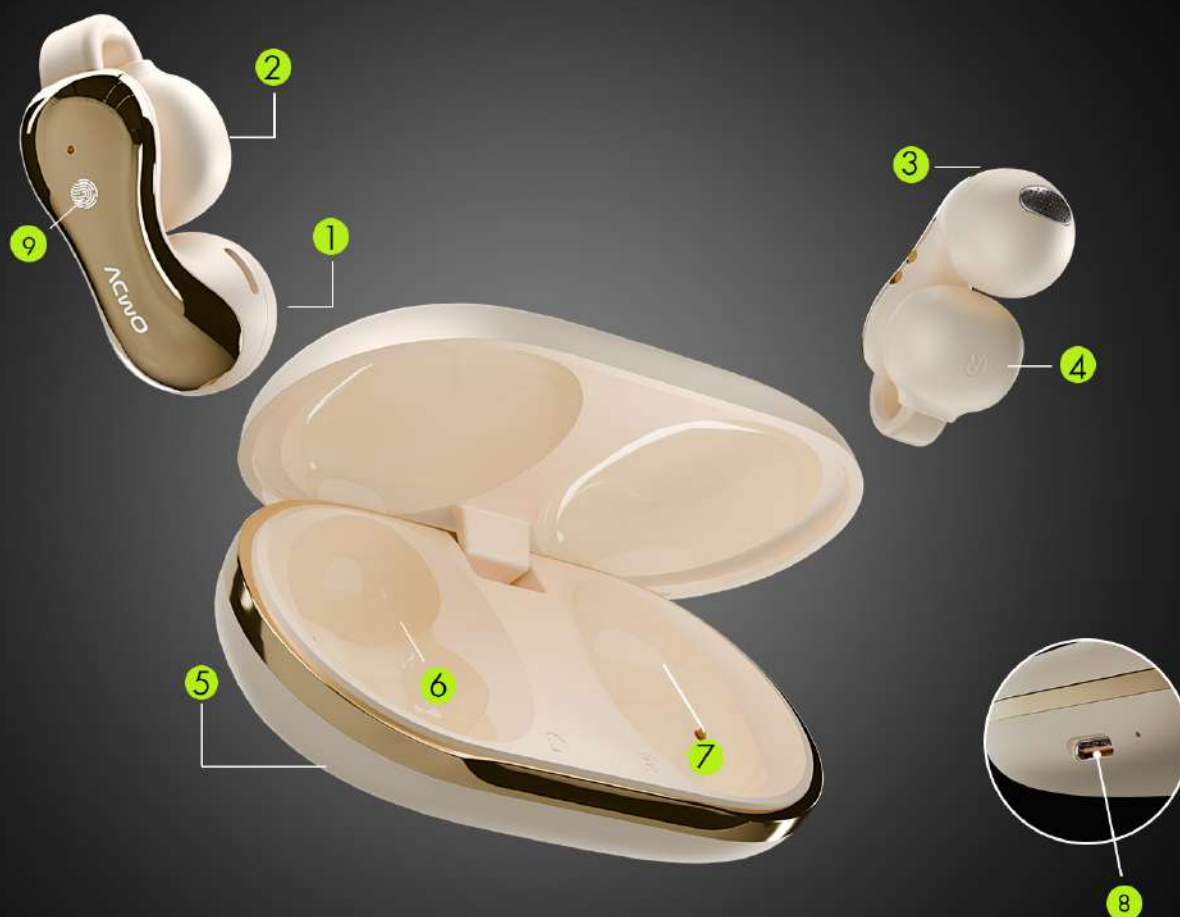

Appearance:

- ❶ Left Earbud
- ❷ Left Earbud Extension
- ❸ Right Earbud
- ❹ Right Earbud Extension
- ❺ Charging Case
- ❻ Left Earbud Charging Slot
- ❼ Right Earbud Charging Slot
- ❽ Type-C Charging Port
- ❾ Multi-Function Touch Control Area

What You Will Find In The ACwO Box?

- ① Charging Case
- ② Pair of OWS Earbuds
- ③ Type-C Charging Cable
- ④ Scan me Card

Product Features:

- ① Open-Ear OWS Earbuds
- ② 40 Hours Total Playtime
- ③ Dual Connectivity (Two Devices at Once)
- ④ Quad ENC Microphones for Clear Calls
- ⑤ 3 Preset EQ Modes - Cinematic, Normal & Bass
- ⑥ All-Around Awareness for Ambient Sound
- ⑦ Weightless Comfort for All-Day Wear
- ⑧ Bluetooth v5.4 for Stable, Fast Connection
- ⑨ IPX5 Water & Sweat Resistant
- ⑩ Full Charge in Just 1 Hour
- ⑪ Voice Assistant Support – OK Google & Hey Siri
- ⑫ SBC & AAC Codec Support for Enhanced Audio Quality

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or manufacturer for any necessary maintenance or repairs
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.
- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.
- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS Bling

Kindly Note -

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS BLING Wireless Earbuds at least 70% before the first usage.

Charging:

- **Charging Case:**
Connect the type-c charging cable to the charging case to charge your ACwO DwOTS BLING Wireless Earbuds
- **Earbuds:**
Before use remove the blue protective film on the earbuds
Place the earbuds in the charged Charging Case to charge the ACwO DwOTS BLING Wireless Earbuds.

Bluetooth Pairing Process:

1. Take out the ACwO DwOTS BLING Earbuds from the Charging Case and place them in your ears.
2. Go to the Bluetooth settings of your device and switch it on.
3. Scan available devices.
4. Search For " ACwO DwOTS BLING " from the list of available devices.
5. Pair " ACwO DwOTS BLING " from the list and your Earbuds will be connected

Once you've completed the initial pairing process, the ACwO DwOTS BLING will connect seamlessly to your device every time you open the charging case

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS Bling

1. In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
2. Clear all Bluetooth data named " ACwO DwOTS BLING" from your device and disable Bluetooth.
3. Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

How To Use Your ACwO DwOTS Bling ?

ACwO DwOTS BLING: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the both the earbuds.

Smart Functions ACwO DwOTS Bling

Play/Pause:

- Tap once on the Multi-Function Touch Area of either earbud extension.

Next Track:

- Double Tap on the Multi-Function Touch Area of the left earbud extension.

Previous Track:

- Double Tap on the Multi-Function Touch Area of the right earbud extension.

Switch Between Modes:

- Press and hold the Multi-Function Touch Area on the left earbud for 3 seconds, then release.

Activate Voice Assistant::

- Tap five times on the Multi-Function Touch Area of either earbud extension.

Increase Volume:

- Triple Tap on the Multi-Function Touch Area of the right earbud extension.

Decrease Volume:

- Triple Tap on the Multi-Function Touch Area of the left earbud extension.

Answer Calls:

- Single Tap on the Multi-Function Touch Area of either earbud extension.

Hang Up Calls:

- Single Tap & Hold on the Multi-Function Touch Area of either earbud extension.

Decline Calls:

- Tap & Hold on the Multi-Function Touch Area of either earbud extension.

One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances, no matter how noisy your environment is.