

boAt

Manual

Thank you for choosing boAt Rockerz 255 Neo. This manual is meant to guide you through to the shores of audio bliss without difficulty. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for steering this boAt. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty.

**ROCKERZ
255 NEO**



Package Contents

- 1 x Rockerz 255 Neo
- 1 x USB Type C charging cable
- 2 x Pairs of additional earmuffs (Small & Large)
- 1 x Manual
- 1 x Warranty Card

Product Overview

- 1) Ear cap
- 2) Silicone ear hook
- 3) Headphone cable
- 4) Neckband
- 5) Multi-function button
- 6) Volume - \ previous song
- 7) Volume + \ next song
- 8) LED indicator
- 9) Microphone
- 10) Charging port



Power On: When switched off, separate the earbuds to power them on. Our Magnetic Smartbuds turn on automatically once the earbuds are separated from each other and vice-versa. The blue and red LEDs start flashing alternatively after the initial blue LED flash for a second.

Power Off: Unite the earbuds to power them off. Red LED blinks once to indicate the device getting switched off.

Bluetooth Connectivity

1. Turn on the Bluetooth functionality on your phone and switch on Rockerz 255 Neo
2. The neckband's indicator starts blinking in blue and red alternatively to indicate that the earphones have gone into pairing mode
3. Then, select 'Rockerz 255 Neo' from the list of available devices after search
4. If asked for a passkey, confirm the passkey '0000' on phone
5. Once confirmed, the neckband and phone get connected via Bluetooth indicated by a voice prompt

Note: If there's a connection history between the phone and the neckband, then they automatically get reconnected in a working range whenever the neckband gets switched on while the phone's Bluetooth mode is turned on.

Front

Basic Functions

- Play :** Short press the MFB (Multifunction Button) once to play
- Pause :** Short press the MFB once to pause
- Volume Up :** Short press the Vol + button in steps to increase volume
- Volume Down :** Short press the Vol - button in steps to decrease volume
- Next Track :** Press and hold the Vol + button for 2 seconds to skip to next track
- Previous Track :** Press and hold the Vol - button for 2 second to return to previous track
- Answer Incoming Calls :** Short press the MFB once
- Hang Up Ongoing Calls :** Short press the MFB once
- Reject Calls :** Double press the MFB
- Wake up Smart Voice Assistant :** Long press the MFB for 2 seconds to wake up default voice assistant

Note:

If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings.

Charging

- Connect one end of the provided cable to the USB Type C port on the headset and the other end to a wall adapter or laptop
 - While charging, the indicator LED turns into steady red
 - Once the headphone gets fully charged, the indicator turns into solid blue
- Note:
- Use only authorized/company chargers for the headset, as unauthorized ones may damage the same and invalidate the warranty on the headset as well
 - The earphones cannot be utilized for listening purposes while it is in charging mode

BEAST™ Mode

Double press the MFB to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Double press the MFB once again to turn it off and return to Music Mode. *Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.*

Dual Pairing

To connect Rockerz 255 Neo to two devices simultaneously, firstly connect the earphone to one of the devices. Then, switch both the earphone and the device's Bluetooth off. Thereafter, connect the earphone to the second device, and again switch the first device's Bluetooth on. The earphone gets connected to both devices. If not, connect the first device manually once again to activate dual pairing.

ENx™ Tech

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default. *Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!*

Other Functions

- If there's no connection established when the Bluetooth is switched on then the device powers off automatically after a while
- If you receive an incoming call during playing music, the music automatically disconnects. When the call is done and disconnected, the music starts to play automatically from where it left

Specifications

Headphone Type	Bluetooth Neckband
Driver Size	12mm*2
HD Sound	Yes
THD	≤5%
Frequency Range	20HZ-20KHZ
Bluetooth Version	V5.2
Bluetooth Profile	a2dp/avctp/avdtp/avrcp/gavdp/hfp/hid/spp/lept/vfcomm
Bluetooth Range	10m
Battery Capacity	180mAh
Playing Time	Up to 25 Hours (At 60% vol approx.)
Charging Time	45min
Standby Time	130HRS
Charge Interface	USB Type C
Mic Sensitivity	-42dB±1
Charging Voltage	5V 2A
Water Resistance	IPX6

Charging norms & Precautionary Guidelines:-

1) Charger/Brick/Adapter	: 5V 2A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

ANOMALIES & Solutions

- A. Mobile can't search the headset**
- Check if the Bluetooth headset is powered on or off (When powered on, the LEDs blink with red and blue colours alternatively)
 - If it is powered on and the device still can't connect, then please reboot the Bluetooth device and the phone
- B. After connecting the headset with the phone, disconnection or noise occurs**
- This may be due to the low power of the headset. Please charge the Bluetooth headset
 - There might be obstruction between the headset and the phone or the distance between them exceeds the maximum range for signal reception
- C. If the Voice Assistant support doesn't respond**
- If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device's settings.

Safety Cautions

- This is not a toy. The children are advised to use this under adult supervision.
- Avoid exposing the device to extremely hot or cold temperatures.
- Avoid using the neckband for listening to full volumes in order to protect from hearing damage.
- Please do not use the device under thunder storms.
- Don't dismantle the product in any way.
- Please don't clean the product using oily volatile liquid.

Back