

Thank you for choosing the bold Rocker 2.4592. This manual is meant to guide you through to the shores of Nirvana without too much difficulty. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for the steering of this bold. Therefore, we strongly advise that this manual is thoroughly read before beginning of use, and referred to when in times of difficulty. Are you ready to Flug into Nirvana?

# Package contents

- 1 x boAt Rockerz 245v2
- x Micro USB charging cable
- 2 x Pairs of additional earbuds (Small & Large)
- 1 x Manual
- 1 x Warranty Card



### To Pair with Bluetooth:

When switched off, press the multifunction button for 5 seconds to enter pairing mode. The earphones will automatically enter pairing mode with a prompt and the LED light will flash white and blue lights flash to indicate this.

- (1) Open Bluetooth on your device and search for "boAt Rockerz 245v2" in the list of
- (2) Choose "boAt Rockerz 245v2" from the list and enter the pairing password "0000" to establish Bluetooth connectivity.
- (3) A voice prompt "You're now connected to boAt Rockerz 245v2" will be heard to confirm the connection. The blue LED light flashes twice every 4 seconds when connected.

### Functions:

- (1) Power on: When switched off, press and hold the multifunction button for 3 seconds. A voice prompt "power on" will confirm the same. The red and blue LEDs will flash.
- (2) Power off: In any mode, press and hold the multifunction button for 5 seconds. A voice tone "power off" will confirm the same. The red and blue LED's will flash for 1 second before the device will turn off.
- (3) Play/Pause: Tap the multifunction button once to play/pause music.
- (4) Volume up: Tap the volume "+"buttons in steps to increase the volume. A beep will indicate maximum volume.
- (5) Volume down: Tap the volume "..."button in steps to decrease the volume. A beep will indicate minimum volume.
- (6) Answer/End call: Tap the multifunction button once when answering or ending a call to complete the action.

- (7) Reject call: Press and hold the multifunction button for 2 seconds when receiving a call to reject it. A beep will indicate this.
- (8) Previous Track: To go to the previous track, press and hold the "-" button for 2 seconds.
- (9) Next Track: To skip to the next track, press and hold the "+" button for 2 seconds (10) Voice Assistant: Click the Multi-function Button for 3 times to activate Voice Assistant

#### To Charge

- Use a micro USB charging cable to charge the earphone through either a laptop or an adaptor.
- Low Battery: The remaining talk time is less than 10 minutes. There will be a 'tone' and a reminder every minute.
- (2) Charging: The red light is steady (please note that the earphone cannot be turn on when charging).
- (3) Fully charged: the blue light is steady

pecifications: Buetooth version:	5.0	Transmission distance	about 10m
Speaker ster.	12mm	Battery use:	Polymer lithlum bettery 3.7V/100mAh
Frequency range:	20~20000Hz	Charging time:	about 1.5 hours
Impedance	32Ω±15%	Play/talk time:	about 6 hours
Sensitivity:	105±3dB	Standby time:	about 180 hours
Microphone Sensibility:	-42±3db	Magnetic suction:	back suction

## Trouble-Shooting:

Problem description	cause problem	problem solution
Not booting	Battery is exhausted	Fully charge with the charger
	Long press the power button for too short.	Pressandhold the main button for 3 seconds to restart
Not charging	Charging plug is not plugged in	Remont the charging plug
Not shut down	Misoperation caused the headset program to gowrong	Charge reset with the charger
Unable to search or pair talked	The headset did not enter	Put the headset into the pairing state
	Paing status	reset
	Mobile phone Bluetooth application error	Turn of the phone and reboot

## Safety Cautions:

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturary.
- Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are Plugging into Nirvana. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

