






Package Contents

- 1 1x Rockerz 265v2
- 4 1 x Manual
- 2 1 x USB Type C charging cable
 - 5 1 x Warranty Card
- 3 2 x Pairs of additional earmuffs (Small & Large)

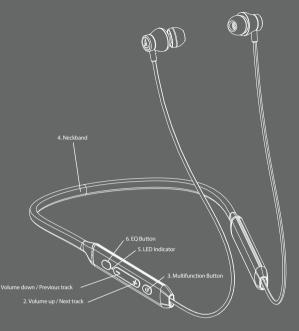

• Answer/End call: Tap the MFB once when answering or ending a call to complete the action

Separate the earbuds to pick up calls / unite earbuds to end calls

- Reject call: Press and hold the MFB for 2 seconds during an incoming call to reject the call
- Previous Track: To go to the previous track, press and hold the "-" button for 2 seconds.
- Next Track: To skip to the next track, press and hold the "+" button for 2 seconds.
- Reset Device (Clear Paired List) : Press and hold the "+" and "-"buttons simultaneously for 5 seconds to clear the previous list of connected devices. The red and blue LEDs will flash 3 times to indicate the
- Dual Pairing: To connect Rockerz 265v2 to two devices simultaneously, firstly connect the earphone to one of the devices. Then, switch both the earphone and the device off. Thereafter, connect the earphone to the second device, and again switch the first device on. The earphone will get connected to both devices. If not, connect the first device manually once again to activate dual pairing..

- Voice Assistant: Long press the MFB for 2 seconds to wake up smart voice assistant
- Redial: Triple tap the MFB for redialing the last contacted number
- EQ Modes: You can switch between Signature Sound mode (Bass Mode) and Balanced Mode by short pressing the EQ button. Signature Sound Mode is boAt's default bass mode, while Balanced Mode is more suitable for podcasts, news and voice based mediat

To Charge:

Use a USB Type C charging cable to charge the earphone through either a laptop or an adaptor.

- Low Battery: When the remaining talk time is less than 10 minutes, there is a 'low battery' prompt and red LED flashes quickly to indicate the same
- Charging: Solid red LED indicates that the earphone is being charged (please note that the earphone cannot be turned on while charging).
- Fully charged: Solid blue LED indicates the same.

- When switched off, press and hold the MFB (*multifunction button) for 3 seconds to switch the earphones on. The earphone will automatically enter pairing mode with a prompt, the blue and red LEDs flash alternatively to indicate the same.
- Open Bluetooth on your device and search for
- asked enter the pairing password "0000" to establish Bluetooth connectivity.
- Once successfully connected, the blue LED same

To Pair with Bluetooth:

- "Rockerz 265v2" in the list of available devices.
- Choose "Rockerz 265v2" from the list and if
- flashes once every five seconds to indicate the

Note: The neckband automatically turns off if there is no pairing established in 5 minutes.

Specifications:

Bluetooth Version	V5.0
Operating Range:	10m
Frequency:	20Hz~20000Hz
Driver Size	10mm*2 Drivers
Battery:	200mAh
Talk time:	Up to 20 hours
Music time:	Up to 20 hours
Charging Time :	About 40 Min
Charging Technology	ASAP Charge Technology
Driver Impedance	16Ω
Dual Pairing	Yes
Water Resistance	IPX5
Charging Port	USB Type-C

2A Indard Cable (35 strands 1.10mm diameter/ strand)
â

long as the specifications are as per above norms.

Basic Functions:

• Power on: When switched off, press and hold the MFB for 3 seconds. A voice prompt will confirm the same. The red and blue LEDs will flash to indicate the same.

OR

You can separate the magnetic earbuds to power

• Power off: In any mode, press and hold the MFB for 5 seconds. A voice prompt will confirm the same. The red LED will flash for 1 second before the device turns off.

You can unite the magnetic earbuds to power off

• Play/Pause : Single tap the MFB to play/pause

OR

Separate the earbuds to play music / unite earbuds to pause music

- Volume up : Tap the volume "+"buttons in steps to increase the volume. A beep will indicate maximum volume.
- Volume down: Tap the volume "-"button in steps to decrease the volume. A beep will indicate

Safety Cautions:

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.
- Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.