

BLAUPUNKT
ATOMIK SERIES
 BLUETOOTH SPEAKER



Enjoy it.

To ensure correct operation and avoid damage, please read this user manual carefully before using this product.

Features:

- 2.0CH portable Bluetooth fabric speaker
- Water resistant IPX5, splash-proof, rainproof, perfect for beach, poolside and more outdoor activities
- TWS function, achieve true wireless Bluetooth playing with double enhanced stereo sound
- Optimized Google Assistant and Siri voice control
- Hands-free Mic for easy picking up the call
- RGB Lighting
- With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
- Bluetooth operating range 10 meters
- USB support
- FM radio
- Line-in function, suitable for PC, MID, TV and other audio devices
- Built-in lithium rechargeable battery 7.4V 3600mAh
- Carry handle, easy to take out


Specifications:

Bluetooth version: V5.0+BR+EDR+BLE
 Speaker Size: 3 inch*2
 Battery Capacity: 7.4V, 3600mAh
 Frequency Response: 80HZ-16KHZ
 Product size: 354(L)*144(W)*187(H)MM

Package Contents:

- 1xPortable Bluetooth Speaker
- 1xCharging cable
- 1xAudio cable
- 1xUser manual

Product Details:

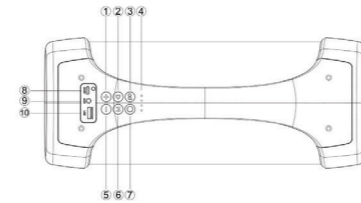

- | | |
|--|------------------|
| 1. Forward/Volume Up | 7. Power On/Off |
| 2. Play/Pause | 8. Charging Jack |
| 3. TWS Button | 9. AUX Port |
| 4. Battery Indicator | 10. USB Port |
| 5. Backward/Volume Down | |
| 6. Mode Button (turn among Bluetooth, USB disk, FM radio and AUX-IN) | |

Power On/Off

Long-press the Power button to turn the speaker on, short-press the Power button to turn the speaker off.

Bluetooth:

- Turn the power button to "ON", the speaker will make a tone, the Power button turn blue and blink quickly.
- The speaker enter Bluetooth mode automatically.
- Activate Bluetooth of mobile phone and search for device name "Blaupunkt BTS" then connect it. The power button stop blinking and make a tone once connected.
- Play the music from your mobile phone and enjoy.
- Long-press Forward or Backward button on the device or operate on Mobile phone to select songs you like.
- Short-press Forward or Backward button to adjust volume up and down. Or adjust the mobile phones' volume.
- Short-press Play/Pause button on the device or operate on Mobile phones to play/pause the music.
- Long-press Play/Pause button to activate voice assistant SIRI/GOOGLE ASSISTANT.
- If need to disconnect the current Bluetooth connection, long-press TWS button to disconnect.

TWS Function:

- Turn on two identical speakers you want to pair, both under BT mode. Only need to set one of the two units.
- Short-press the TWS button, speaker will make a tone and start to pair, a tone will be audible again and TWS button will keep lighting after paired successfully.
- Make Bluetooth connection with your mobile phone to play music by the two paired Speakers to create more powerful surround sound effect.
- When you want to exit the TWS mode, short-press the "TWS" button again.

- Once two units paired with TWS, when they both are turned on next time within effective range, they will be automatically paired again(When two units TWS connected, if you manually operate to disconnect the TWS connection, next time when you turn on the two units, they will not automatically paired again).

Playing music from USB disk:

- Turn the Power button to "ON".
- Insert USB flash disk into slot, the speaker will play the stored music automatically.
- Under playing mode, long-press Forward or Backward button to select songs you like, short-press to adjust the volume up and down.
- Short-press Play/Pause to play or pause.

Remark: Under Bluetooth playing mode, insert USB disk will disconnect the Bluetooth and switch to play the USB disk. You can short-press the MODE button to switch to Bluetooth mode again.

FM Radio:

- Under FM radio state, the audio cable provided treat as antenna. Please Insert the audio cable to get best FM signal before using.
- Turn the power button to "ON", short-press the "MODE" button to enter radio state.
- Under radio mode, Long-press "Play/Pause" button to auto search the FM Channel and store it automatically.
- Short-press "Play/Pause" button to mute the speaker.

- Long-press Forward or Backward button to change the stored FM channel, short-press to adjust the volume up and down.

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device, then Enjoy...
 When using an external device, all functions can be controlled by the external device.

RGB Lighting:

When the speaker is turned on, the RGB light is on automatically, user can long-press the Mode button to switch the RGB light on and off.

Remarks:

- When Bluetooth connection with your mobile phone, there will be a battery icon indicating the speaker battery volume on your phone.
- Default volume is at 50% status of max volume.
- Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call; When want to end a call, user can short-press Play/Pause button or operate on mobile phone to end the call. During the call, user can long-press Play/Pause button to switch to talking on the phone.
- Play time may vary depending on volume level & music style.

How to charge:

- The charger is not included in the package. Please use a standard 5V/1-2A charger to charge this device.
- User may also charge the speaker via a PC, put the provided charge cable into the charge slot of unit, connect the other end to the PC.
- Charge time should be 3-4 hours. After full charging, the 4 LEDs keep lighting.
- When battery voltage is low, the speaker will prompt for recharging.
- The unit does not have power bank function, it is forbidden to charge other device via this unit or to connect other device via a USB cable.

IMPORTANT:

When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.

Warning:

- Don't use/store this product in extreme temperatures.
- Please keep the product away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume.
- When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Warranty Information 1 Year

If you have issue with our product please contact our service center Authorized Service Centre Blaupunkt Speakers

Address: Envent World Wide Pvt Ltd.

Khasra. No- 15/15(4-16), Village Samalkha, Tehsil Vasant Vihar, New Delhi- 110037 Tel. 18008434333

Please prepare & submit the following information during the telephone or e-mail notification to facilitate the process.

-Serial Number -Date of purchase

-A copy of proof of purchase in case of warranty

Note- Important Information

Please use the original packaging or other suitable packaging to protect the unit in transit.