

Instruction Manual

2.1 Multimedia Speaker

 




 


Important - Please read these instructions fully before installing or operating

Power source



The appliance must be connected to a 110-240 volt 50/60Hz AC supply by means of a three pin socket.



To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.

The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.

If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.

In order to disconnect the apparatus from the mains completely, switch off the outlet and remove the mains plup completely.

Do not bend, stretch or pull the supply cable in order to avoid electric shock.

When installed, the power socket must be within easy reach.

Do not install the unit in a confined space. Allow adequate ventilation to prevent heat build-up.



Heat build up

During use the unit will heat up, this is not a malfunction. If the unit is used continuously at hiph volume levels, the unit temperature will rise considerably. Do not touch the unit to avoid potential burns.

Moisture and water

Do not use this apparatus near water or moisture.

Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.

Heat sources and flames



 Batteries shall not be exposed to excessive heat such as sun, fire or the like To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

Servicing and repairs

Refer all servicing to qualified service personnel

Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally. or has been dropped.



Technical Specifications

PACKAGE CONTENT	
	1 UNIT
	2 UNITS
	1UNIT
	1 UNIT
1	
	1 UNIT
	1 UNIT
(witchot included, you have to	buy it separately)
4'0	
10 MILITARS	
120 V 220 V 125 mm	
32 x 03 x 130 IIIIII	
2.24 kg	
·	
	PACKAGE CONTENT SUBWOOFER SATELUTE REMOTE AUX TO AUX CABLE AUX TO ZRC CABLE USER MANUAL (Mic not included, you have to) 4 ™ 4 ™ 40 ← 4 ™ 40 ← 20kHz ≥ 80dB ≥ 45dB MP3 2ch RCA 32 GB 87.5 MHz - 108 MHz BLAUPUNKT 10 METERS 120 X 230 X 135 mm 92 x 65 x 130 mm 2.24 kg 227g x 2 2.69 kg



Care & Maintenance

After using the Multimedia Speaker

- · Set to Standby
- Switch the unit off at the mains & unplug it if you are leaving it unattended for a long period
- Avoid leaving the battery fitted in the remote control if you leave the unit unattended for long periods. It may leak and damage the remote control.

Care & cleaning

All care and cleaning operations should be carried out with the unit unplugged from the mains power.

Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

Warranty Information 1 Year

If you have issue with product please contact our service center. Authorized Service Center Blaupunkt Speakers

Address: Envent World Wide Private Limited

E-Mail: wecare@blaupunktaudio.in

- Please prepare and submit the following information via e-mail notification to facilitate the process.
- Date of purchase
- A copy of proof of purchase in case of warranty
- Serial number

Note: Important Information

 Please use the original packaging or other suitable packaging to protect the unit in transit