

Thank you for purchasing Stone 180. You are now just a step away from the realm of Nirvana. Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that play time varies depending on the selected volume level. You can stay plugged into the sound with Bluetooth wireless technology & aux wire compatibility. This portable speaker has been designed for smooth interface that requires

the minimal of efforts.

Please avoid using the speaker while it is in charge as it may decrease the battery's

Portable Wireless Speaker

Bluetooth V5.0+BR+EDR+BLE

About 145q

10m

performance

SpeakerType

Net Weight

Working Range

Speaker Size

Water Resistance

Supported Profiles

Specifications:

Bluetooth Version



80dB

5V/2A

70Hz - 20kHz

Up to 10 hours

Up to 20 hours

1.5 - 2 hours

3.7V / 800mAh

Yes

Package Contents

1x Bluetooth Speaker

• 1x Charging Cable

• 1x Audio Cable

• 1x User Manua

1x Catalogue

Frequency

Input Voltage

Output Power

Charging Time

AUX Compatibility

Play Time

Talk Time

Battery

TWS

• 1x Warranty Card

You may long press the power button to switch the speaker ON/OFF.

Functions:

- Answer Incoming Calls : Short press the MFB (*Multifunction Button)

- End Calls : Short press the MFB once to end calls
- Reject Incoming Calls: Long press the MFB for 2 seconds
- Redial : Double press the MFB to redial the last contacted number
- Switch Modes: Short press the power button to select modes (Bluetooth/AUX)
- Volume Increase: Short press the "+" button in steps for increasing the volume
- Volume Decrease: Short press the "-" button in steps for decreasing the volume
- Play/Pause: Short press the MFB to play or pause the tracks
- Previous Track: Long press the "-" button for returning to the previous track
- Next Track: Long press the "+" button for skipping to the next track

Bluetooth Connectivity:

- Turn the speaker on. Its LED indicator blinks blue until the pairing is done • Activate the phone's Bluetooth function and search for "Stone 180". As soon as the
- speaker gets selected and paired by you, the connection gets indicated by a sound prompt. Note:
- The speaker can automatically reconnect to the last paired device
- If you are having connection troubles, then remove Stone 180 from the list of paired devices on your phone, keep the phone closer to the speaker and try pairing again

AUX Mode:

STONE

- You can switch to AUX mode by using the AUX cable to connect the phone and the
- speaker, and then short pressing the Power button • In the AUX mode, you can control the audio playback via the media device/ phone

boat

STYLE

- Warning:
- Please charge the speaker according to the charging norms mentioned on

• Don't t

- packaging to protect the battery
- Do not disassemble the product
- Do not submerge the product inside water.
- Please keep this product safe from coming in contact with any liquid. Don't use/store this product in extreme temperatures
- Please keep the product away from anything that generates heat, such as
- radiators, stoves, etc. peaker life, avoid listening

 In order 	to have	hearing p	rotection	i and an e	xtende	d s

	um volume
y to disma	ntle/repair the product on your own.

mantle/repair the product on your own.
Charging norms & Precautionary Guidelines: -

Charging norms & Precauti	onary Guidelines: -
1) Cl	

Standard Cable (35 strands @0.10mm diameter/ strand

Any other accessory can be paired up with the product as ng as the specifications are as per above norm

pairing

TWS:

Charging:

You can connect two Stone 180s and virtually forge them into one speaker for a

• Press and hold MFB on one of the two speakers for about 2 seconds until you hear a

After releasing MFB, it may take a few more seconds for the speakers to connect

Activate the phone's Bluetooth function and search for "Stone 180" to establish

Stone 180 beeps once every 5 minutes when the battery is low. After three such

greater impact. For TWS connection:

Turn on both the speakers

- indications, the speaker automatically turns off
- Utilize the provided charging cable to charge the speaker

• The LED indicator turns into steady red while charging; the same goes off as soon as

the speaker gets fully charged