

**PARTYPAL 185**



**USER MANUAL**



## **PARTYPAL 185**



Thank you for purchasing the boAt PartyPal 185. You are now just a step away from the realm of pure audio bliss. Please follow this user manual carefully in case any doubts and difficulties that may arise.

Please note that play time will vary depending on the selected volume level. You can stay plugged into the sound with Bluetooth wireless technology, USB and aux compatibility. This Portable Party Speaker has been designed for smooth interface that requires the minimal of efforts.

## PACKAGE CONTAINS:

- 1x Portable Bluetooth Speaker
- 1x Microphone
- 1x Type-C Charging Cable
- 1x User Manual
- 1x Audio Cable

## PRODUCT OVERVIEW

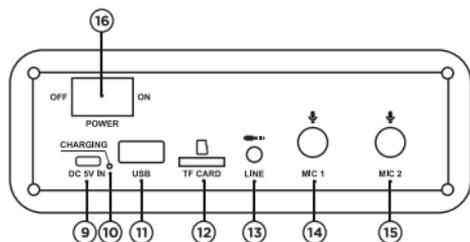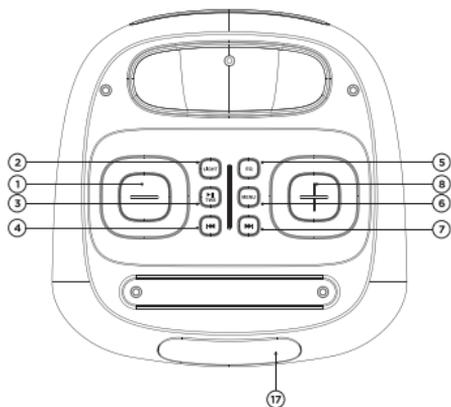

- 1 VOL “-” Button
- 2 RGB Light
- 3 Play / Pause / TWS Button
- 4 Backward and Fast Reverse Key
- 5 EQ key / Bluetooth reset Button
- 6 MENU key
- 7 Forward / Fast Forward Button
- 8 VOL “+” Button
- 9 DC 5V - 2A charging jack
- 10 Charging LED
- 11 USB port
- 12 microSD card slot
- 13 Aux Input
- 14 Microphone Input port 1
- 15 Microphone Input port 2
- 16 Power on/off button

## **BATTERY CHARGING**

The product has a built-in rechargeable battery that can be recharged using the supplied power supply. Before use, it is recommended to fully charge the battery. During the recharging phase, the status of LED will be on ( the device will fully recharge in about 7-8 hours). When the device is fully charged the LED indicator will turn off.

**Note : If the battery is completely Discharge, then leave the device off and recharge it for at least an hour before using it.**

Battery life ( up to 4 hours with use at medium volume) may vary depending on the listening volume, based on the type of song being played, depending on the selected source, whether or not the RGB lights are used and the state of wear of the battery.

Recharge times may vary depending on the state of charge of the product and the characteristics of the charger used.

When the battery is low, the product will periodically emit a warning tone.

## **OPERATIONAL INSTRUCTION**

### **On/Off/Standby**

Slide the On/Off switch to the ON position to turn the product on and back to the OFF position to turn it off.

The product will automatically enter Standby mode if left idle for about 20 minutes.

### **Mode Change:**

Long Press the Menu button on the product several times to change the modes choosing between Bluetooth / USB / microSD and Aux Mode.

### **Volume adjustment**

Press the VOL+ and VOL- buttons on the remote control or the product to adjust the volume.

### **Equalizer**

Press the EQ key on the remote several times to choose the equalization mode among the 6 available presets.

## **MENU function**

Short Press the MENU key and use the VOL + and VOL - keys to adjust respectively:

u --> Main volume.

b --> Bass

t --> Treble

## **LED light effects selection**

After turning on the product, you can short press the "LIGHT" key to change the effect of the LED lights. There are 7 different effects available. Long press the "LIGHT" key to turn off the LED lights.

## **Bluetooth function**

The product supports music playback via wireless connection to a Smartphone or other compatible device.

***NOTE : Compatibility with allva devices on the market cannot be guaranteed.***

## **Bluetooth connection**

- Turn on the speaker, select the Bluetooth Mode (the display will show BLUE) by using the MODE key on the remote control or on the product and activate the relative function on the external device.
- Search for the name " PartyPal 185 " from your external device and choose it to pair (enter "0000" if requested).
- Once paired, you can start playback from the external device.
- During music playback, you can press the Play/Pause button to pause playback. To resume playback, press the Play/Pause button again.

## **TWS FUNCTION (TRUE WIRELESS STEREO)**

If you have two PartyPal 185s, you can activate the TWS function which allows you to pair two speakers together and obtain stereo audio reproduction (the speakers will reproduce the same audio at the same time).

***Note: in order to use the TWS function, the two speakers must have a maximum distance of about 5 meters from each other in open spaces.***

## **TWS function activation (how to associate two Party Pal 185 together)**

- Make sure the speakers are not paired with any external devices.
- Turn on the two speakers and select Bluetooth mode (BLUE on the display) .
- Long press the “Play/Pause/TWS” button on the speaker to start the TWS pairing, a sound will confirm the pairing.
- Once paired, the speakers will automatically pair with each other if turned on at the same time.
- To deactivate the TWS function and unpair the speakers, long press the "Play/Pause/TWS" button on the speaker after pairing.

## **USB/MICROSD FUNCTION**

Insert a USB stick/MicroSD card (containing songs in MP3 format) into the slot after turning on the speaker, playback will start automatically.

Short Press “Play/Pause” button to pause/resume playback.

Short Press the “Forward” / “Backward” button to go to the next track / return to the previous track.

Long press the “Fast Forward” or “Fast Reverse” buttons on the product to fast forward / fast reverse through the currently playing song.

***Note: Compatibility with all commercially available storage devices cannot be guaranteed.***

External USB devices that require a voltage rating greater than 5V and a current rating greater than 200mA are not supported.

If you use a USB extension cable, the connected storage device may not be recognized or function properly.

Use only storage devices formatted with FAT16/FAT32 file system.

## **AUX FUNCTION**

To play audio via the AUX input connect one end of the appropriate cable to the 3.5mm AUX input of the speaker and the other to the external device. Select the correct source by pressing the MODE button several times then start playback directly from the connected external device.

***NOTE: in AUX mode it is not possible to pass to the next/previous track with the "Next Track" / "Previous Track" buttons but it is necessary to carry out the operation directly from the connected external device.***

## USING MICROPHONES

Connect the microphones via the appropriate input then turn them on by moving their switch to the ON position.

Short press the MENU key while at least one microphone is connected and select:

N --> to adjust the volume of the microphones;

E --> to adjust the echo effect.

Use the VOL- / VOL + buttons to choose the desired level.

Double click on EQ button to activate the Microphone priority function, you can activate/deactivate the function that allows you to speak with bigger volume that decrease the volume of the track being played when the microphone is used.

**Note: Display will show ON/of when you on or off this function**

## TECHNICAL SPECIFICATIONS

Model Name	PartyPal 185
Bluetooth Version	5.0
Dimension	300x245x255mm
Net Weight	3.1kgs
Working Range	Upto 10m
Driver Size	6.5"+ 40mm
Compatibility	BT, USB, Aux
Frequency	30HZ-20KHZ
Output Power	50W
Charging Time	Upto 4 hours
Playing Time	Upto 6 hours @ 60% volume
Battery	3600 mAh @7.4V

boAt



**PARTYPAL 185**

USER MANUAL