

PARTYPAL 300



USER MANUAL



PARTYPAL 300

Thank you for purchasing the boAt PartyPal 300. You are now just a step away from the realm of pure audio bliss.

Allow this User Manual to guide you through in case of any doubts and difficulties and to continue smooth sailing. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via Bluetooth wireless technology, USB, TF, FM, and aux wire compatibility. This portable wireless speaker has been designed for a smooth interface that requires a minimum of effort.

PACKAGE CONTAINS:


- 1x Portable Bluetooth Speaker
- 1x User Manual
- 1x Microphone
- 1x Audio Cable
- 1x Type-C Charging Cable

PRODUCT OVERVIEW

POWER ON/OFF:

Utilize the power switch to turn the speaker on or off.

Note: Playtime varies according to the level of volume.

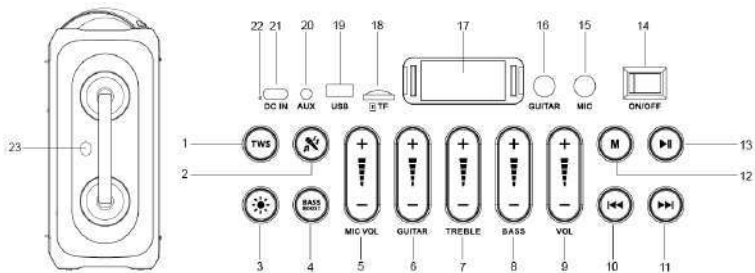


BASIC FUNCTION:

1. TWS Key: Short press the TWS button to turn on/off the TWS mode.
2. KAR (Voice Cancelling) Key: Short press the KAR button to reduce/delete the vocal track from the song.
3. LED Key: Short press the LED button to switch on the LED or change the LED pattern. Long press the LED button to turn off LED mode.
4. BASS BOOST Key: Short press the BASS BOOST button to turn on the bass boost mode.

6. Volume Control Keys: Press the '+' or '-' button to adjust the volume.
7. Treble Tone Adjustment Key: Press the '+' or '-' button to adjust treble.
8. Bass Tone Adjustment Key: Press the '+' or '-' button to adjust the bass.
9. Volume Adjustment Key: Short press the button to adjust the volume.
10. Previous Track / Fast Back button: Short press the Previous Track button for the previous track or fastback the current track.
11. Next Track / Fast Forward button: Short press the Next Track button for the next track or fast forward the current track.
12. MODE key: Short press the Mode button to switch among playing modes: BT (Bluetooth) / USB / TF / FM / LINE (AUX)
13. Play/Pause key: Short press the Play/Pause button to play or pause a track.
14. On/Off switch: Slide the on/off switch to the ON position to turn the product on and back to the OFF position to turn it off.
15. Mic Input: Connect the microphone cable here.
16. Guitar Input: Connect the Guitar cable here.
17. Display: The current playing mode will be displayed over here.
18. microSD input: Insert the SD card in this slot.
19. USB input: Insert the USB in this slot.
20. AUX input: Connect the AUX cable here.
21. Charging: Connect the C-Type charger over here.
22. Charging LEDs: Check the charging LEDs light.
23. IR Sensor: Face the remote control towards the IR Sensor for better functionality.

REMOTE CONTROL FUNCTIONS

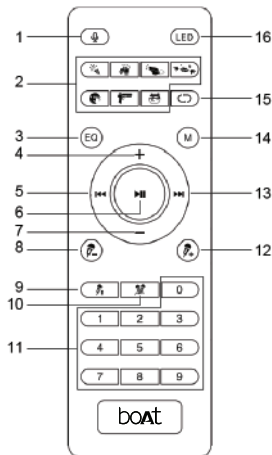

1. MIC MUTE key: Short press the MIC MUTE key to mute the microphone or karaoke.
2. Sound effects playback key: Short press the Sound Effects Key to change the sound effect of the track.
3. EQ Key: Short press the EQ Key to adjust the treble or bass sound.
4. VOL + adjustment key: Press the '+' button to increase the volume.
5. Previous Track / Fast Back key: Short press the Previous Track button for the previous track or to fastback the current track
6. Play/Pause key: Short press the button to pause/play the current track.
7. VOL adjustment key -: Press the '-' button to reduce the volume.
8. VOL - / Eco - MIC adjustment key: Press the '-' key to reduce the microphone volume.
9. MIC Priority key: Press the key to enhance the microphone sound.
10. KAR key: Short press the KAR button to reduce/delete the vocal track from the song.
11. Number keys: Press the number key to shuffle the song in USB mode.
12. VOL + / Eco + MIC adjustment key: Press the '+' button to increase the volume of microphone.
13. Next Track / Fast Forward key: Short press the Next Track button for the next track or to fast forward the current track.
14. MODE key: Short press the Mode button to switch among playing modes: BT (Bluetooth) / USB / TF / FM / LINE (AUX)
15. RPT key: Short press the RPT key to repeat the same song.
16. LED light key: Short press the LED button to switch on the LED or change the LED pattern.

OPERATING INSTRUCTIONS

SOURCE CHANGE

Short press the MODE button on the product or on the remote control to change the source between Bluetooth / USB / MicroSD / AUX.

BASS BOOST

Press the BASS BOOST button on the product to change the equalization by activating/deactivating the function which allows you to increase the level of bass tones.

LED EFFECTS SELECTION

After turning on the device, you can press the "LED" button on the product or on the remote control to choose the effect of the LED lights and to turn them off/on. There are 8 different effects available.

SOUND EFFECTS

The product has 7 sound effects that can be played by pressing the relevant buttons on the remote control.

VOICE CANCELLING

The effects of deleting the vocal track vary from song to song: depending on the song being played, it may not be possible to completely delete the vocal track, or the effect may be of poor quality.

BLUETOOTH CONNECTIVITY:

- Turn the speaker on and short press the Mode button in case the playback mode is non-Bluetooth, the blue LED flashes quickly
- Activate the phone's Bluetooth functionality and Search for the name "Party Pal 300" from the external device and choose it to carry out the Bluetooth pairing (enter "0000" if requested).
- Once paired, you can start playback from the external Bluetooth device.
- During music playback, you can briefly press the Play/Pause button to pause playback. To resume playback, press the Play/Pause button again.

Note:

- *The speaker can automatically reconnect to the last paired device.*
- *The speaker gets automatically turned off if there's no pairing established for 5 minutes.*

TWS CONNECTION:

1. Turn on the two PartyPal 300 speakers that you require to be forged into one, both under Bluetooth mode. You only need to set one of the two units.
2. Short press the TWS button on the selected speaker
3. It searches for the other speaker (primary, left channel) for a few seconds.
4. Once both the speakers get connected via TWS mode, it gets indicated by a sound prompt and both the speakers display 'TWS'.
5. Perform a Bluetooth connection as mentioned in the user manual to play music via the two paired speakers simultaneously.

Note:

- *Once two units execute TWS function, they automatically get paired again if next time they are turned on within effective range.*
- *Short press the 'TWS' button to disconnect TWS mode.*
- *In order to use the TWS function, the two speakers must have a maximum distance of about 5 meters from each other in open spaces.*

AUX MODE

- Connect one end of the appropriate cable (to the 3.5mm AUX input of the speaker and the other to the external device.)
- Select the correct source by pressing the MODE button several times then start playback directly from the connected external device.

NOTE: In AUX mode it is not possible to pass to the next/previous track with the “Next Track”/ “Previous Track” buttons but it is necessary to carry out the operation directly from the connected external device.

USB / TF MODE

Insert a USB stick/MicroSD card into the slot after turning on the speaker, playback will start automatically.

- Press the “Play/Pause” button to pause/resume playback.
- Briefly press the “Next Track” / “Previous Track” buttons to skip to the next track/return to the previous track.
- You can rewind/fast forward while playing a song by long pressing the “Fast Rewind/ Fast Forward” buttons.
- Using the numeric keys on the remote control it is possible to enter the number of the track to be played.
- You can press the RPT button on the remote control to switch repeat modes to play the same track or all tracks.

Note:

- *Compatibility with all commercially available storage devices cannot be guaranteed.*
- *External USB devices that require a voltage rating greater than 5V and a current rating greater than 200mA are not supported.*
- *If you use a USB extension cable, the connected storage device may not be recognized or function properly.*

MICROPHONE / KARAOKE MODE

1. Attach the microphone to the speaker.
2. Short press the MIC PRI button to suppress the playback volume and prioritize the mic.
3. The mic echo can be adjusted via the ECHO Control.

RECORDING

1. Insert USB or TF card to save the files. Also Insert the microphone in the provided slot to start recording.
2. Short press the recording button on the remote to start recording & short press recording button again on remote to play the recorded file.
3. Short press M button on the speaker or remote to save the recording files.
4. If you want to play recorded files in USB or TF card, long press the recording button on the remote to play, if you want to delete the recording files, long press the recording button again, the display will show "dEL"

Note: In BT mode, the recorded files would get saved in the inserted TF card or USB. In order to play the recorded content, you will have to switch the mode to either USB or TF card.

CHARGING

- Connect one end of the provided charging cable to the charging input and the other end to an adaptor of 5V/2A.
- During charging, the LED indicator stays solid red; once the charging gets completed the indicator turns off (the device will fully recharge in about 7 hours).

Note: If the speaker doesn't turn off or doesn't respond, you could use the Reset functionality.

- Please don't use the speaker while it is in charging as it may decrease the battery's performance.
- If the battery is completely discharged, speaker may restart leave it off and recharge it for at least an hour before using it.
- Battery life (up to 4 hours with use at medium volume) may vary depending on the listening volume, based on the type of song being played, depending on the selected source, whether the LED lights are used, and the state of wear of the battery.
- Recharge times may vary depending on the state of charge of the speaker and the characteristics of the charger used.
- When the battery is low, the speaker will periodically emit a warning tone.

RESET FUNCTIONALITY

Press the Bass Boost Button for 3 seconds to clear Bluetooth memory & pair to a new device.

Note: If the speaker doesn't turn off or doesn't respond, you could use the Reset functionality.

SPECIFICATIONS:

Bluetooth Version	V5.3
Dimension	26.8*24.6 *60 (H) cm
Net Weight	5.7 kg
Working Range	10m
Driver Size	2* 6.5", 1*1.5"
Supported Profiles	FAT16/FAT32
Compatibility	AUX, USB, TF, Bluetooth
Frequency	30HZ-20KHZ
Input Voltage	DC 5V/2A
Output Power	80W
Charging Time	4 Hours
Playing Time	Up to 7 Hours (at 60% volume)
Battery	6000 mAh@7.4V

WARNING

- Please keep this product safe from coming in contact with any liquid.
- Don't use/store this product in extreme temperatures.
- Please keep the product away from anything that generates heat, such as radiators, stoves, etc.
- In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume.
- Don't try to dismantle / repair the product on your own.

boAt



PARTYPAL 300
USER MANUAL