




User Manual

Thank you for purchasing the boAt Stone 1508. You are now just a step away from the realm of Nirvana. Please follow this user manual carefully in case of any doubt that may arise. You can stay plugged into the sound with Bluetooth wireless technology, AUX and TWS mode. It is equipped with DSP. There are two EQ modes: for indoor and outdoor fun! This portable speaker has been designed for smooth interface that requires minimal of efforts. It's time to delve deeper into Nirvana.

Package Contents:

- 1x Speaker
- 1x Type-C Cable
- 1x Aux-in Cable
- 1x User Manual
- 1x Catalogue
- 1x Warranty card

Product Overview -

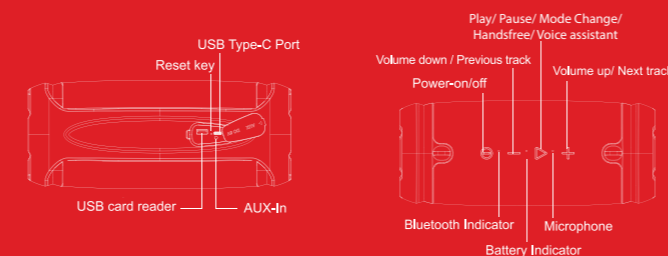

Basic Functions

Items	Instructions	LED status
Power On	Long press "⏻" for 2-3 seconds	Blue LED Turns On
Power Off	Long press "⏻" for 2-3 seconds	Blue LED Turns Off
Pairing	Auto Pairing Mode	Blue LED starts flashing
Successful pairing	Select Stone 1508	Blue LED stays steady
Disconnect	Press "+" and "-" together	Blue LED starts flashing
Receive a call	Short press "▶" to receive incoming calls Under TWS, only the Main device will work for calls)	/
Reject the call	Long press "▶" for rejecting incoming calls	/
Hang up the call	Short press "▶" to hang up an ongoing call	/
Activate Voice Assistant	Long press for 1-2 seconds "▶"	Blue LED stays steady

Aux in Mode	Insert the aux cable into the aux jack	Indoor mode: Green LED stays solid Outdoor mode: Green LED Flashes.
USB Reader Mode	Insert USB disk to the USB Jack	Indoor mode: Green LED stays solid Outdoor mode: Green LED Flashes.
TWS Pairing	Double press the ⏻	Blue and green LED flash alternatively
Disconnect TWS	Press "+", "-" buttons together	Main device: blue LED flashes slowly Auxiliary device: blue LED stays solid
Volume Up	Short press "+"	/
Volume down	Short press "-"	/

Next track	Long press "+"	/
Previous Track	Long Press "-"	/
Play/Pause/Mute	Short press "▶" (Mute in Aux Mode)	/
Outdoor Mode EQ	Double Press "▶"	Blue Led flashes (BT mode)
Indoor Mode EQ	Double Press "▶"	Blue LED stays steady (BT mode)
Charging	Insert 5V Type-C USB Cable	1st White LED flashes: 30%charged 2nd White LED flashes: 30%-70% charged 3rd White LED flashes: 70%-99% charged
Charging Finished	/	All three White LEDs turn on
Reset	Insert sleek and pointed insulator (e.g.- toothpick) into the Reset Key Hole	LED turns off

Bluetooth Connection

Turn the speaker on by keeping the power button pressed for a few seconds, then the blue LED starts flashing quickly. The speaker has now entered pairing mode.

Connecting your device:

1. Activate your phone's Bluetooth.
2. Go to your phone's Bluetooth settings, scan for new Bluetooth devices.
3. Once the device "Stone 1508" has been found, please click on the same.
4. In case your phone asks for a pairing code, please enter "0000".
5. After successful pairing, your speaker indicates the same with a sound prompt and the LED flashes blue.

Note: Pairing time varies according to different mobile phones. The speaker can remember the last 8 paired devices name.

Toggle EQ

1. Outdoor Mode: To switch the EQ to outdoor mode, kindly double press "▶".
2. Indoor Mode: To switch the EQ to indoor mode, please double press "▶".

USB Reader Mode

To play songs in the USB mode, you may plug the USB Flash Drive into the USB jack provided on the speaker.

NOTE: The mode and volume work according to the memory function. Once the speaker is switched on, the volume and mode will adjust themselves to the settings prior to the speaker getting switched off.

TWS

1. Turn on both the devices, blue LED will flash to indicate the same.
2. Select one of the devices and double press the power "⏻" button. Both the devices will pair with each other. While in the process, the main device will flash with blue and green LED alternatively.
3. After successful pairing, blue LED indicator of the primary (selected) device will start to flash slowly and blue LED of the secondary speaker will stay solid
4. In your phone, search for "Stone 1508" and click on the same. Once the connection has been established the two devices can play music simultaneously.
5. To disconnect TWS, kindly press '+' and '-' buttons together. The blue LED will flash rapidly to indicate the same

Note: TWS works only in Bluetooth mode. In the TWS mode, only the main speaker can receive calls. When the speaker doesn't seem to connect with the phone, just press '+' and '-' buttons together and disconnect from the TWS Mode.

To Charge

- Use type-C USB cable to charge the speakers
- Charging: 3 white LED's blink periodically
- Fully charged: All 3 white LED's steady

Note: It is recommended that the speakers are not used while they are being charged, as it is not good for the battery.

Troubleshooting

A.

- Question: The device cannot find "Stone 1508" on Bluetooth?
- Reason: The speaker may not be in pairing mode.
- Solution: Restart the speaker to search again.

B.

- Question: The speaker is taking very long to charge?
- Reason: The adapter's power output is too low, and the charging cable's consumption is too high.
- Solution: Please choose the adapter with an output that is not less than DC 5V/2A and use the original charging cable.

Specifications

Product size	Diameter 134 * Height 320 mm
RMS Output Power	40W
Music Format	MP3, WAV, WMA, APE, FLAG
Bluetooth Version	Version 4.2
Supported functions	USB, Bluetooth, Hands-free, AUX IN, TWS Connection
Operating Range Device	10 meters

THD	≤10%
SNR	≥80Db
Charging Voltage	Type C DC 5V /2A
Battery Info	7.2V/4000mAh
Charging time	4.5 Hours
Playing time	Up to 15 Hours (Varies according to level of volume)
IP Rating	IPX6
Over Current Protection	Yes
Over Voltage Protection	Yes
TWS Feature	Yes
EQ Modes	Indoor & Outdoor

Safety Precautions

- Please note that the battery life of the speaker varies with the volume music is being played at. If at a lower volume, the battery life will be longer than when the speakers are playing at full volume
- If the speaker requires cleaning please ensure that it is done with the utmost of care. Furthermore, make sure it is turned off and disconnected from all Bluetooth devices. Do not use alcohol, benzene and other chemicals to clean the speaker. Do not allow the speaker within range of extremely hot or cold substances.
- Try to ensure that no physical damage comes to the speaker via falling, or coming into contact with hard surfaces or sharp edges.
- Do not dismantle the speaker or handle the battery in any way. If any issue arises with the speaker, please enlist the aid of a manufacturer. The battery must not be mishandled or replaced as when it can result in explosions or fire hazards. Therefore, please ensure that any servicing of the speaker is done through the service provider or manufacturer.
- If the speaker gets wet, please ensure that it is dried quickly and completely after coming into contact with water. Please do not allow the speaker to be submerged into water at any cost.

Charging norms & Precautionary Guidelines: -

- 1) Charger/Brick/Adapter : 5V 2A
- 2) Cable/Wire: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

