


Airdopes 441 Pro

Twin Wireless Ear-buds

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 441 Pro. Please consider this manual as your guiding map towards the shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

- In the box**
- 1 1x pair of Ear-Buds
 - 2 1x Charging Case
 - 3 2x Pairs of Ear Caps
 - 4 1x Charging Cable
 - 5 User Manual

Product Overview

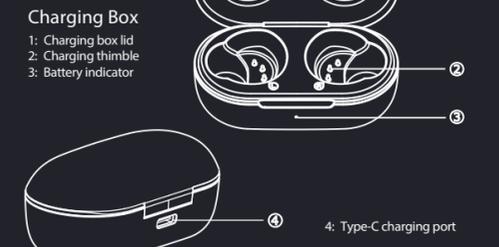

Power On (First Time User)

Step 1: To automatically switch the earbuds on (Smart Power On) simply take them out from the charging case OR To manually switch the earbuds on (Manual Power On), long touch the Capacitive Touch Control (*CTC) for 3 seconds on both Left and Right earbuds until the LED light begins to flash in blue

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode, indicated by alternate green and blue LED flashes

Connection Mode

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 441 Pro' and pair accordingly. Enter '0000' as the passkey if asked.

Congratulations! Your earbuds are now connected successfully via Bluetooth

Power On (Subsequent Usage)

The next time when you open the lid of the case, our IWP (Insta Wake N' Pair) Technology enables the earbuds to power on automatically and get connected to the previously paired device.

- Notes:
- Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above mentioned procedure.
 - Airdopes 441 Pro remembers previously connected devices; once switched on, the ear-buds automatically reconnect to the previously connected devices




Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use either of the two options; Smart Power On or Manual Power On for switching on the desired earbud

Step 2: The selected earbud will automatically enter the connection mode indicated by alternating green and blue LED flashes


Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 441 Pro' to connect

- Notes:
- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.
 - You cannot skip tracks or return to the previous tracks in Mono mode.

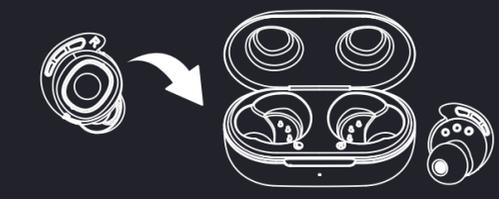

LED Indicators / Functionalities

- 2 Seconds**: Long touch the Capacitive Touch Control (*CTC) on either earbud for 2 seconds, to activate the voice assistant / Reject incoming calls
- 3 Seconds**: Manual Power ON: Long touch the CTC for 3 seconds on both Left and Right earbuds for switching them on until the LED light begins to flash in blue
- 5 Seconds**: Manual Power OFF: Long touch the CTC on either earbud for 5 seconds until the green indicator LED blinks before earbuds getting turned off
- Triple Tap**: Factory Reset: Triple tap the CTC on both earbuds to do Factory reset, which is indicated by the blinking of green and blue Led lights

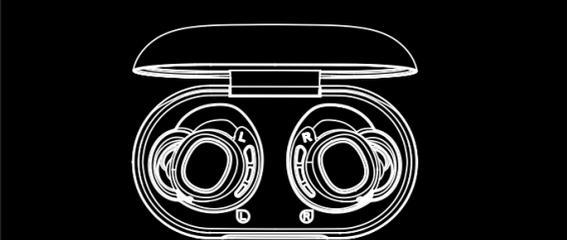


Charging The Earbuds

Step 1: Please insert the earbuds back inside the charging case in correct orientation.

Step 2: A green LED will indicate that the earbuds are being charged. Once fully charged the LED turns into blue

Step 3: Once the earbuds are fully charged, the charging case automatically switches off to save power.

- Note:
- Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging
 - When the earbuds are in low power, flashing green LED indicates the same

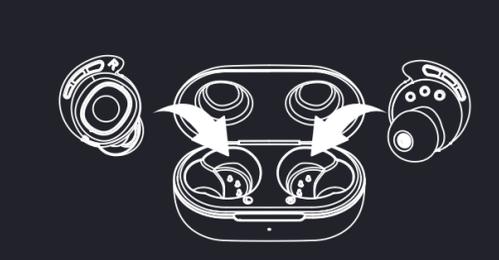


Charge The Case

Step 1: To charge the case, plug one end of the Type-C cable into the case and connect the other end to a computer or a wall adapter.

Step 2: The indicator in the case blinks with blue light for representing 75%-100% power; it blinks with purple light for 35%-75% power while it blinks with red light for representing 0%-35% power. When the case gets fully charged, the blue light stays solid

Note: The LED lights located on the charging case indicate the battery status of the case.

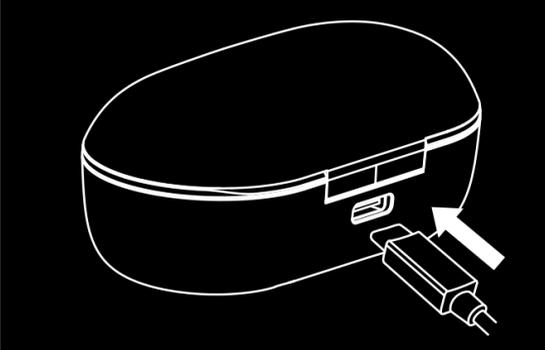

Basic Functions

- Voice Assistant: Long touch the capacitive touch control on either earbud for 2 seconds to activate voice assistant
- Answer/Hang Up Call: Single tap the capacitive touch control on either earbud to answer an incoming call and once again to hang up an ongoing call
- Reject Call: Long touch the capacitive touch control on either earbud for 2 seconds in order to reject an incoming call
- Play/Pause Music: Single tap the capacitive touch control on either earbud to play a song or to pause one
- Next Track: When playing music, double tap the right earbud's capacitive touch control in order to skip to the next song on the playlist
- Previous Track: When playing music, double tap the left earbud's capacitive touch control in order to return to the previous song the playlist

Note: Volume cannot be controlled via earbuds and can only be adjusted via phone/media device.

- Power Bank function: In case of emergency, for instance when your phone runs out of battery, you may utilize the 2600mAh Case for charging your device for some time.

Note: It is advisable not to use the Carry cum Charging Case as a Power Bank unless there's an emergency.

Voice Assistant

Step 1: Long touch the capacitive touch control on either earbud for 2 seconds to activate voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

- Tips: You may try the following commands,
- What is the weather?
 - Play a song
 - Where are The Pyramids located?



Smart Power Off

Step 1: After usage, remove both the earbuds from your ears


Step 2: Place the earbuds back into the charging case in correct orientation

Step 3: The earbuds will automatically switch off (and enter into charging mode)

Manual Power Off

Step 1: Long touch the CTC on either earbud for 5 seconds until the green indicator LED blinks before earbuds getting turned off, in order to manually switch off the earbuds. Please note that this powers off both the earbuds

Step 2: Please keep the earbuds back into the charging case to charge the earbuds

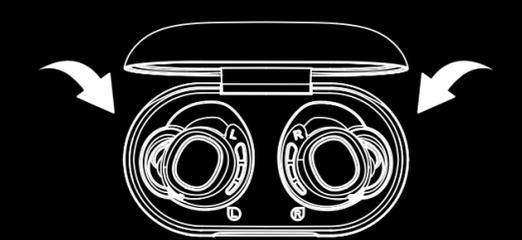

Factory Reset

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 441 Pro


Step 1: Place both the earbuds back into the charging case in correct orientation to switch them off

Step 2: Triple tap the capacitive touch control on both earbuds to perform the Factory Reset. Once done, it gets indicated by alternate red and blue LED flashes

Step 3: Shut the lid of the charging case and then re-open it again

Step 4: Once you take the earbuds out from the charging case, they automatically restart

Congratulations! Your Airdopes 441 Pro has been Reset

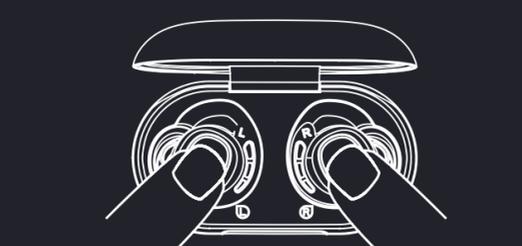

Common Problems with Solutions

If only one earbud is functioning:

- If one earbud is not working: Perform the Factory Reset
- If earbuds are not in connection/scan mode: Perform the Factory Reset
- If earbuds disconnect during phone call: Charge the earbuds or perform the Factory Reset
- If there are other exceptions in usage: Place the earbuds back into the charging case and try using them again or perform the Factory Reset

If earbuds are not in scan mode (No alternating green and blue LED flashes on the earbuds)

- If earbuds are not in scan mode (No alternating green and blue LED flashes on the earbuds): Simply insert the earbuds back into the case and take them out or perform the Factory Reset

Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switch on at first. This can be done by using the volume control on the phone/ media device.

Charging norms & Precautionary Guidelines:	
1) Charger/Brick/Adapter	: 5V/2A
1) Cable/Wire	: Standard Cable (35 Strands @0.10mm diameter/strand)
Any other accessory can be paired up with the product as long as the specifications are as per above norms.	

Specifications

Bluetooth Version	V5.0
Water Resistance	IPX7
Music Playtime	Up to 5 Hrs Playback per Charge and Additional 150Hrs with Case
Standby Time	70 Hours
Transmission Range	10m
Driver Size	6mm
Bluetooth Profile	HFP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20KHz
Battery Earbuds	35mAh x2
Battery Charging Case	2600mAh
Charging Time	1.5 Hours
Product Weight	48.5g

Warning

- Please follow the instructions to operate
- Please charge the ear-buds according to the charging norms mentioned on the packaging & manual
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the volume control on the phone/ media device.

