

Airdopes 🖺 Twin Wireless Ear-buds

Get ready to ride the waves of Nirvana with your all new boAt Airdopes 381. Please think of this manual as your map. Knowledge of Bluetooth and device connection is essential for the steering of this boAt. Therefore, we strongly advise that this manual is thoroughly read before beginning use, and referred to when in times of difficulty. We hope you're ready to Plug Into Nirvana.



In the box

3 1x USB charging cable

4 2x pairs of additional earmuffs (S & M & L

5 User Manual











Power ON (First time user)

Take the Earbuds out of the Charging Case.

Wait for BLUE / RED LIGHTS on the left earbud.

the CTC for 3 seconds.

or to manually turn them on, press and hold

Please wait, Both Earbuds will automatically pair to each other. They will blink for 3 seconds & automatically connect to each other.

This "BLUE / RED LIGHTS" means that it has gone into Connection

For first time use BLUE / RED LIGHTS will blink on the Left Earbud.



Factory Reset/Solution:

Note: For pairing to the Earbuds for the first time RED/BLUE Lights will only blink on the left earbud

For next time pairing procedure RED/BLUE LIGHTS will blink on either left or right earbud. This appens after the earbuds remembers the device.

Turn on bluetooth on your device & then scan.

Connection Mode LED Indicators / Functionalities

2 Seconds

3 Seconds

5 Seconds

10 Seconds

Search for "boAt Airdopes 381" and pair accordingly. Congratulations, your earbuds are now connected succesfully.

your device.



You may now enjoy your music or any other entertainment form factor

Enter the password "0000" if asked

for, and connect the earbuds to

"CTC" Stands for Capacitive Touch Control.

NOTE: If the earbuds don't automatically Power On when taken out of charging case. NOTE: Factory Reset will remove all device profiles STEP 1: Long Press CTC on both Right and left earbud for 3 seconds, and then remove saved on the Airdopes 381, Refer To Page 12. your finger. Wait for BLUE / RED LIGHTS on the left earbud or right earbud. This "BLUE / RED LIGHTS" means that it has gone into Scan Mode.

STEP 1: At this stage your earbuds are in stereo mode & connected Activate Google/Siri

voice assistant

Scan Mode

Factory reset.

Capacitive

Touch Control

Rapidly

Manual Power ON/

OFF: RED lights will blink 3 times

RED & BLUE lights will blink

Factory Reset Device Profile:

PURPLE & RED Lights will flash

rapidly. Blue light will blink once

Place the earbuds in the charging


case and then try using them again

to your bluetooth device. STEP 2 : Simply remove right or left earbud from your ear. STEP 3: Place the right or left Earbud back into the Charging Case.

STEP 4: Congratulations, you are now using mono/solo mode.

NOTE: There is no Master Earbud

Single Earbud Use

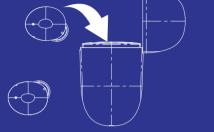

NOTE: To switch to stereo mode, simply take the earbud (L/R) out of the case & place it in your ear. The earbud will automatically power on & pair with each other hence enabling it for stereo usage.

Charge The Case

Charge The Earbuds

• To charge the case, plug in the USB cable and connect it to any USB port.

- charged red light will go off.
- It will take 1.5 hrs to completely charge.

• The earbuds can be charged a total of 3 times if the case is at full battery.

Basic Functions

Voice Assistant- Press the Capacitive Touch Control for 2 seconds to activate voice assistant. Answer/Hang up phone call- Tap the Capacitive Touch Control once to answer any incoming call and once again to hang up once done talking.

Rejecting phone calls - Double tap the Capacitive touch control to reject an incoming call Play/Pause - Tap the Capacitive Touch Control to play/pause music at your

Next Track - When playing music in stereo mode, double click the right earbuds Capacitive Touch Control to play the next track.

Previous Track - When playing musicin stereo mode, double click the left earbuds Capacitive Touch Control to play the previous track. Volume up / Volume down- The volume cannot be changed from the

earbuds, the volume will have to be adjusted via the connected device. Please Note: You cannot change tracks when in mono mode. (Next/ Previous Track)



Voice Assistant

STEP 1:

Assistant.

Long Press the CTC on either Left or Right Earbud for 2 Seconds to Activate Google / Siri Voice



Google / Siri Assistant Screen will

pop up & you may command at ease.

TIPS: You may try the following commands



Smart Power Off

Your Earbuds will automatically Power On

once taken out of the Charging Case, To Power Off follow below steps.

STEP 2: Place & put back both the earbuds into the Charging Case. STEP 3: If Red LED is showing, it means it is charging.

Manual Power Off:

STEP 1: If both earbuds are on, long Press the CTC on both left and right earbuds for 3 Seconds to manually power off the Earbuds.



STEP 2: Place them back into the charging case to charge the earbuds.

NOTE: Single Earbud Use can function on both Right/Left earbuds.

STEP 1: After use, remove both left and right earbuds from your ear.

Perform below tasks if you

ever face any difficulties with

vour Airdopes 381.



Ensure The earbuds are inside the case.

Congratulations, factory reset is completed.

 Long press the CTC for 10 seconds while the earbuds are inside, and wait till purple and red led flashes.



 Proceed to put the earbuds back again in the case. Red led should ignite, indicating that it is charging.

To pair with your smartphone, simply take them out of the case and follow the pairing procedures.

Common Problem With Solution

If one side working only:



If one side only working, then simply put back both earbuds in the case or perform "Factory Reset". (Page 12)



If Earbuds not in scan mode:





Red/Blue LED blink on left or right Earbuds) Simply put back both the earbuds in case and take out again or perform "Factory Reset". (Page 12)

If Farbuds not in Scan mode (No

Right Earbud disconnects during

Potential Problem

Troubleshooting

It will connect automatically. Left & Right Earbuds are not pairin Try re-setting the device. About 20 seconds delay or easy Power off, then switch on once disconnect for Right earbud Power off, then switch on once Occasional disconnect and recover minutes later Place the earbud's in the charging If there are other exceptions in use case and then try using them again If this does not work, try re-setting

Specifications

Model No.	Airdopes 38 I
Bluetooth version	V5.0
Earphone battery capacity	3.7V, 50mAhx2
Earphone weight	5g each
Charging case weight	40g
Charging case battery capacity	500mAh
Working range	10M
Talk time	3.5 hours
Earphone standby time	40 hours
Charging case size	65x50x30mm
Sweat and Water Resistant	IPX5

the device

Cautions: Please think of this manual as your map. Knowledge of Bluetooth and device

Please do not let the earbuds come into contact with sharp edges, uneven surfaces, and metal parts, in a manner that can lead to some form of permanent external

qualified service provider/manufacture

4. Please do not remove the battery by yourself, this is a task meant to be managed by a

cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that

at an appropriate level when you are plugging into Nirvana. After wearing the earbud gradually turn up the volume until you reach a comfortable listening level. Exposure

8. Do not use earbuds when it is unsafe to be wearing them, such as while operating a

Advisable: The earbuds will start at a 100% volume, and may need to be reduced

• A red light on the earbuds will indicate they are still being charged. This light will go off once the earbuds have been completely charged. · When both two earbuds are fully charged, the carrying case will switch off to save power.

• Put the boAt Airdopes 381 back into the charging case in their correct



Charging norms & Precautionary Guidelines:

Any other accessory can be paired up with the product specifications are as per above norms.

Warning: please do not charge the carrying case with "9V" or "12V" output. Otherwise, it may cause damage to the case.

• The circle LED will flash red when on charging, after it is completely

connection is essential for the steering of this boAt. Therefore, we strongly advise that this manual is thoroughly read before beginning use, and referred to when

or internal damage. 3. Please don't dismantle the product in any way, it can lead to a fire or electrical breakdown and even completely damage the product. As this is extremely unsafe, we ask that any maintenance of servicing of the headphones is done only through a

service provider/manufacturer. Replacing the current battery with an ill-fitting set can result in a fire or electric hazard, therefore it is strongly advised against.

5. Please clean the earbuds with the utmost of care with only a damp soft cloth, if the Headsets are kept away from extremely hot or cold substances. 5. To avoid damage to your hearing, make sure that the volume on your music player is

to any noise levels at or above 85 dB can gradually lead to a loss of hearing. Therefore, listening sessions that are at higher volumes should not be for too long. If you are planning to use the earbuds for extended periods of time, it is safer to keep the volume at a low level Any damage to the earbuds that is NOT a manufacturing issue will make the products

warranty null and void. Please take the greatest care of your headphones to ensure that no such occurrences take place.

vehicle, crossing a street, or during any activity where full awareness of your surroundings is required. This is because it is dangerous to drive while wearing headphones as it decreases your ability to hear sounds like another car's horn or an emergency vehicle's sirens. Therefore, please avoid wearing your Headsets

when first switched on. This can done using the volume control on your bluetooth



