



boat

AIRDOPES 71

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 71. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times whenever you face any sort of difficulty.




PACKAGE CONTENTS

- 1 1x Pair of TWS Earbuds
- 2 1x Charging Case
- 3 1x Type-C Charging Cable
- 4 1x User Manual
- 5 1x Warranty Card
- 6 1x Catalogue
- 7 2x Pairs of Additional Earmuffs
- 8 1x FAQ Card

OVERVIEW

- 1 CTC (Capacitive Touch Control) / Power Button

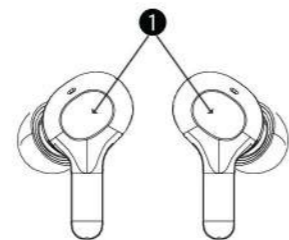

POWER ON (FIRST TIME USER):

Step 1: To switch the earbuds on (Smart Power On), simply open the lid of the charging case (when the earbuds are inside). Courtesy of our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically. This is indicated by the blue LED light flashing for 2 seconds followed by a voice prompt.

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds.

Step 2: After powering on, the earbuds are ready to be paired and enter the Connection mode. This is indicated by alternate red and blue LED flashes on the primary earbud.

CONNECTION MODE

Step 1: Turn on the Bluetooth functionality on your phone/media device and scan.

Step 2: Select 'Airdopes 71' from the list of available devices to pair.

Congratulations! Your earbuds are now connected successfully via Bluetooth indicated by solid blue LED light for 2 seconds.

Note :

- Pairing mode lasts for 5 minutes after which the red LED flashes once and the earbuds turn off automatically.
- If the pairing duration is missed, you will have to reconnect the earbuds and follow the steps again.
- Airdopes 71 remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices within the working range.



SINGLE EARBUD USAGE (MONO MODE):

Step 1: Please note that both the earbuds can be used in Mono mode. Use Smart / Manual Power On option for switching on the desired earbud.

Step 2: The selected earbud automatically enters pairing mode. This is indicated by red and blue LED lights flashing alternately.

Step 3: Turn on Bluetooth on your phone/media device and start scanning.


Step 4: Select 'Airdopes 71' from the list of devices. The earbud is now connected via Bluetooth.

Note :

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.
- You cannot skip tracks or return to the previous tracks in Mono (single earbud) mode.

QUICK GLANCE ON FUNCTIONALITIES

- 3 Seconds Long touch left CTC for 3 seconds to activate voice assistant
- 3 Seconds Long touch both CTCs for 3 seconds to manually power on
- 5 Seconds Long touch Left/Right CTCs for 5 seconds to manually power off
- 5 Seconds Long touch both CTCs for 5 seconds to reset the two earbuds

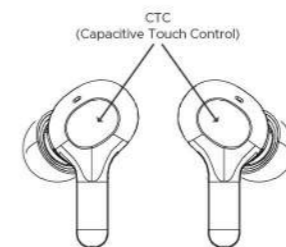


CHARGING THE EARBUDS

Step: To charge the earbuds, please place them inside the charging case in the correct orientation and close the lid. White LED light on the case remains on while charging the earbuds and turns off when the earbuds are fully charged.

| | |
|--|--|
| Low earbud battery level (less than 20%) | 'Battery Low' prompt gets triggered every 5 minutes. Red LED quickly flashes 3 times every 30 seconds. |
| Earbuds are charging | Solid red LED |
| Earbuds are fully charged | Red LED turns off |

Note :

- Before using the earbuds for the first time, it is recommended to fully charge them. Also, please keep the lid of the charging case closed while charging.
- Please note that the earbuds cannot be switched on while charging.

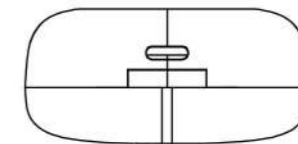

CHARGE THE CASE:

Step: To charge the case, plug one end of the provided USB Type-C cable into the case and connect the other end to a computer, wall adapter, power bank, etc.

| | |
|-------------------------|--------------------------|
| Case is on charging | White LED flashes slowly |
| Case gets fully charged | Solid white LED |

BASIC FUNCTIONS

- Answer Calls: Single tap the CTC on either earbud to answer an incoming call.
- Hang Up / Reject Call: Double tap the CTC on either earbud to end / reject a call.
- Play/Pause Music: Single tap either earbud's CTC to play or pause music.
- Next Track: When playing music, double tap the right earbud's CTC to skip to the next song.
- Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song.

Note: Volume can be controlled only via the media device.

VOICE ASSISTANT:

Step 1: Long touch the CTC on the left earbud for 3 seconds to activate the smart voice assistant.

Step 2: The respective voice assistant screen pops up along with a sound prompt and you can give your commands easily.

Tips: You can try out the following commands-
 •What is the weather today? •Play a song •Set a reminder



Note: If the voice assistant is not triggered, then the functionality needs to be first enabled via your media device settings.

BEAST™ Mode

Long touch the right CTC for 3 seconds to switch to Low Latency gaming mode, also known as the BEAST™ Mode. Once switched on, it is notified via a sound prompt. Long touch the right CTC for 3 seconds again, to turn it off and return to standard Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

ENx™ Tech

Our ENx™ (Environmental Noise Cancellation) tech algorithm cancels out the background noise so that you can be heard crystal clear on voice calls. You don't have to switch on ENx™ separately as the 2x mics are already equipped with the same and activated by default.

Deliver your voice without interruptions wherever you are – traffic, railway stations, airports, workspace, literally everywhere!

POWER OFF

Step 1: After usage, remove both earbuds from your ears.

Step 2: Place the earbuds back into the charging case in the correct orientation and close the lid.

Step 3: Red LED light flashes for 2 seconds followed by a voice prompt. The earbuds automatically switch off (Smart Power Off) and enter charging mode.

OR

Step 1: Long touch both CTCs for 5 seconds (one at a time) to manually power off the earbuds.

Step 2: Once the earbuds switch off, place them back inside the case and close the lid.

FACTORY RESET

Perform the factory reset in case you face difficulties while operating your Airdopes.

*NOTE: Before performing the reset, please clear "Airdopes 71" from the pairing device history by forgetting the device.

Step 1: Open the lid of the charging case and take out two earbuds from the case.

Step 2: Long touch both CTCs for 5 seconds to reset the two earbuds. This is indicated by the red LEDs on both the earbuds rapidly flashing 5 times.

Step 3: Close the case lid and wait for 5 seconds.

Step 4: Take out the earbuds from the charging case and perform a fresh connection.

Congratulations! Your Airdopes 71 have been reset.

Charging norms & Precautionary Guidelines: -

| | |
|--------------------------|--|
| 1) Charger/Brick/Adapter | 5V 2A |
| 2) Cable/Wire | - Standard Cable (35 strands @0.10mm diameter/ strand) |

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

SPECIFICATIONS

| | |
|-----------------------------|---|
| Headphone Type | TWS |
| Bluetooth Version | 5.3 |
| Music Playtime | Up to 40 hours (at 60% volume) |
| Number of ENC Equipped Mics | 2 |
| IWP™ Tech | Yes |
| BEAST™ Mode | 50 ms |
| Transmission Range | 10 m |
| Driver Size | 6 mm*2 |
| Supported Codec | AAC/SBC |
| Frequency | 20 Hz-20 kHz |
| Battery | 300 mAh (Case); 40 mAh*2 (Earbuds) |
| ASAP™ Charge | Yes; 10 mins charge = 120 mins playtime |
| Charging Time | 30 mins (Earbuds); Up to 1.5 hours (Case) |
| Charging Interface | USB Type-C |
| Water Resistance | IPX4 |

SAFETY CAUTION

- Please follow the instructions to operate the earbuds smoothly.
- Please don't use the earbuds in extreme temperatures.
- Please don't use the product in water.
- Please keep the product away from heat sources, as the heat may damage it.
- Please don't jam the ports, such as the charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume to protect your hearing and extend the service life of the earbuds.

RECOMMENDATION

The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on your phone/media device.

