



# Airdopes 461

## Twin Wireless Ear-buds


Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 461. Please consider this manual as your guiding map towards the shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

### Package Contents

- 1 1x Pair of Ear-buds
- 2 1x Charging Case
- 3 1x Micro USB Charging Cable
- 4 2x Pairs of Additional Earmuffs (Small & Large)
- 5 User Manual
- 6 Warranty Card
- 7 Catalogue

### Overview

- 1 CTC (Capacitive Touch Control) / Power Button
- 2 Battery Indicator

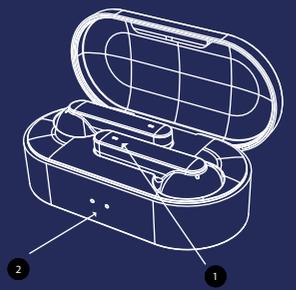

### Power On (First Time User)

Step 1: To automatically switch the earbuds on (Smart Power On) simply open the lid of the carry case. Our IWP (Insta Wake N' Pair) Technology enables the earbuds to power on automatically.

OR  
To manually switch the earbuds on (Manual Power On), long touch the Capacitive Touch Control (CTC) for 1 seconds on both Left and Right earbuds for switching them on until the LED light begins to flash in green

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode, indicated by alternate green and red LED flashes

### Connection Mode:

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 461' and pair accordingly. Enter '0000' as the passkey if asked.

Congratulations! Your earbuds are now connected successfully via Bluetooth

### Power On (Subsequent Usage)

The next time when you open the lid of the case, our IWP (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

Note:

Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above mentioned procedure

Airdopes 461 remembers previously connected devices; once switched on, the ear-buds automatically reconnect to the previously connected device.



### Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use either of the two options; Smart Power On or Manual Power On for switching on the desired earbud


Step 2: The selected earbud will automatically enter the connection mode indicated by alternating red & green LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes 461' to connect

Note:

To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage

You cannot skip tracks or return to the previous tracks in Mono mode

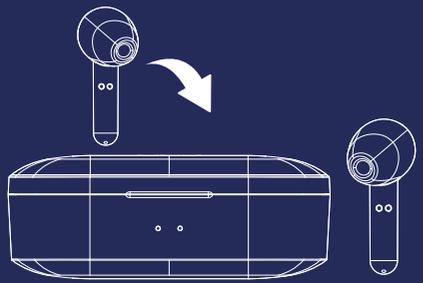


### LED Indicators / Functionalities

1 Second: Long touch CTC on both earbuds for 1 second to manually Power On

2 Seconds: Long touch CTC on either earbud for 2 seconds to activate voice assistant

5 Seconds: Long touch CTC on either earbud for 5 seconds to manually Power Off

10 Seconds: Factory Reset: Long touch the CTC on both earbuds for up to 10 seconds until the LED turns red, then blinks green 3 times and then red again.

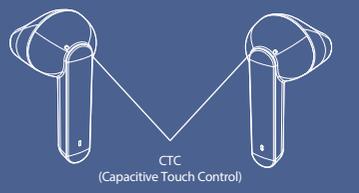

### Charge the Earbuds:

Put the earbuds into the charging case in their correct orientation.

A solid red LED will indicate that the earbuds are being charged. Once fully charged the LED turns into green

Note:

Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging and use a 5V/2A adaptor. When the earbuds are in low power, flashing green LED indicates the same

### Charge The Case:

Step 1: To charge the case, plug one end of the cable into the case and connect the other end to a computer or a wall adapter.

Step 2: The indicator on the case blinks with green LED for representing 0%-30% power; one LED blinks with green LED and the other one turns solid green for representing 30%-90% power while both the LEDs turn into solid green for representing 90%-100% power.

Note: The LED lights located on the charging case indicate the battery status of the case.

### Basic Functions:

Voice Assistant - Long press the CTC on either earbud for up to 2 seconds to activate voice assistant.

Answer/Hang up phone call - Single press the CTC on either earbud to answer any incoming call and once again to hang up once done talking.

Rejecting phone calls - Long touch the CTC for 2 seconds to reject incoming calls

Play/Pause - Single tap the left/right CTC to play or pause a song

Previous track - When playing music, double tap the left CTC to return to the previous song

Next track - When playing music, double tap the right CTC to skip to the next song

Crystal Mode: Airdopes 461 offers Crystal Mode for the ambient sound near you. You can hear the ambient sound clearly even while listening to the earbuds. Tap the right earbud's CTC three times to turn on Crystal Mode, and again to turn it off.

BEAST Mode: Your Airdopes 461 is the right companion for a better gaming experience. Bionic Engine And Sonic Technology offers true real time audio embedded sequence for gaming and entertainment. Tap the left earbud's CTC four times to enter the BEAST mode for a great gaming experience, and once again tap the left earbud's CTC four times to turn it off.

Note: Volume cannot be controlled via earbuds and can only be adjusted via phone/media device

### Voice Assistant:

Step 1: Long touch the CTC on either earbud for 2 seconds to activate the voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease


Tips: You may try the following commands,

- What is the weather?
- Play a song



### Smart Power Off

- After usage, remove both the earbuds from your ears
- Place the earbuds back into the charging case in correct orientation
- The earbuds will automatically switch off (and enter into charging mode)

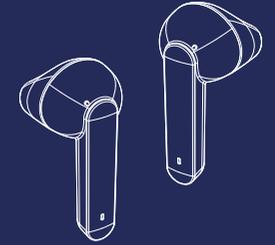

### Manual Power Off

Long touch the CTC on either earbud for 5 seconds until the red indicator LED blinks before earbuds getting turned off, in order to manually switch off the earbuds. Please note that this powers off both the earbuds

Please keep the earbuds back into the charging case to charge the earbuds

### Factory Reset:


Perform the Factory Reset in case you face any difficulty while operating your Airdopes 461

Step 1: Clear the pairing records of Airdopes 461 or forget the device from your phone or media device and turn off the earbuds

Step 2: Long touch the CTC on both earbuds for up to 10 seconds until the LED turns red, then blinks green 3 times and then red again.

Step 3: Keep the earbuds back inside the case and shut the lid of the same

Step 4: Congratulations! Once you open the lid of the case your Airdopes 461 gets reset

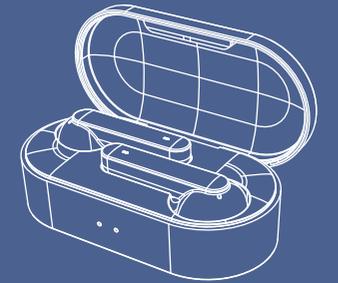


### Common Problems with Solutions:

If only one earbud is functioning:



If only one earbud is functioning: Simply insert the earbuds back into the case and take them out or perform the Factory Reset

If earbuds are not in scan mode:

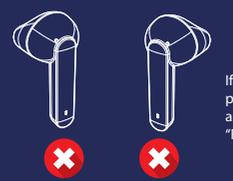

If Earbuds not in Scan mode simply put back both the earbuds in case and take out again or perform "Factory Reset".

### Specifications

Bluetooth Version	V5.0
Water Resistance	IPX5
Music Playtime	Up to 6H per Charge and Up to 40H Additional with Case
Standby Time	120 Hours (approx.)
Transmission Range	10m
Driver Size	6mm
Bluetooth Profile	HFP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20kHz
Battery Earbuds	60mAh x2
Battery Charging Case	600
Charging Time	1.5-2H
Sensitivity	93±3dB
Product Weight	Earbuds 2*5.07g Case 43g


### Charging norms & Precautionary Guidelines: -

- 1) Charger/Brick/Adapter : 5V 2A
- 2) Cable/Wire : Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

### Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset

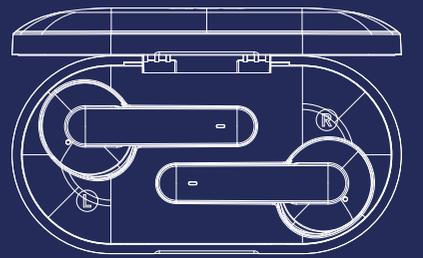

### Warning:

- Please follow the instructions to operate
- Please charge the ear-buds with input power below 5V/2A in order to protect the battery
- Please don't use the ear-buds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switch on at first. This can be done by using the volume control on the phone/ media device.



### Cautions:

- Please do not let the earbuds come into contact with sharp edges, uneven surfaces, and metal parts, in a manner that can lead to some form of permanent external or internal damage.
- Please don't dismantle the product in any way, it can lead to a fire or electrical breakdown and even completely damage the product. As this is extremely unsafe, we ask that any maintenance or servicing of the earbuds is done only through a qualified service provider/manufacturer.
- Please do not remove the battery by yourself, this is a task meant to be managed by a service provider/manufacturer. Replacing the current battery with an ill-fitting set can result in a fire or electric hazard, therefore it is strongly advised against.
- Please clean the earbuds with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earbuds are kept away from extremely hot or cold substances.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are listening to music. After wearing the earbuds, gradually turn up the volume until you reach a comfortable listening level. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.
- Any damage to the earbuds that is NOT a manufacturing issue will make the products warranty null and void. Please take the greatest care of your earbuds to ensure that no such occurrences take place.
- Do not use earbuds when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.