

AIRDOPES 141 Neo

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 141 Neo Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.



PACKAGE CONTENTS

1x Pair of TWS Earbuds 3 1x Charging Case

2 1x Type-C Charging Cable 6 1x User Manual


3 2x Pair of Extra Earmuffs Warranty Card

1x FAQ Card

6 Catalogue

OVERVIEW

 CTC (Capacitive Touch Control) / Power Button

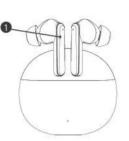

POWER ON (FIRST TIME USER):

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Courtesy our IWP™ (Insta Wake N' Pair) technology, the earbuds power on automatically, get connected and enter the connection mode

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 seconds to manually power on the earbuds

Step 2: After powering on, the earbuds enter the Connection Mode, indicated by alternate red and blue LED flashes on primary earbud and blue LED flashes once every 5 seconds on the secondary earbud




CONNECTION MODE:

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'Airdopes 141 Neo' and pair accordingly. Congratulations! Your earbuds are now connected successfully via



QUICK GLANCE ON FUNCTIONALITIES

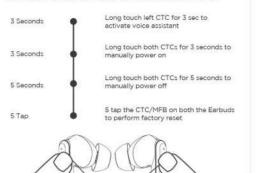

(Capacitive Touch Control)

TWS

V5.3

10m

4

Yes

Yes

Low; 60ms

20HZ-20KHZ

USB Type C

6 months

10mm*2

Up to 7HRS per charge; Up to 43HRS

additional with Case (at 60% volume)

480mAh (Case): 30mAh*2 (Earbuds)

1 hour (Earbuds): 1.5 hours (Case)

SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired

Step 2: The selected earbud will automatically enter the connection mode indicated by red and blue LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdones 141 Neo' to connect

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage
- You cannot skip tracks or return to the previous tracks in Mono (single-earbud) mode

CHARGING THE EARBUDS

Step 1: Please insert the earbuds back inside the charging case in correct orientation and close the lid Step 2: During charging, the earbuds LED indicator stays solid red

Step 3: Once the earbuds get fully charged, the charging case automatically switches off to save power and earbuds red LED turns

- When the earbuds' remaining battery is low, Red LED blinks 3 times when case lid gets opened
- . When the remaining earbuds' battery is between 30%-70%, blue LED blinks 3 times when the case lid gets opened
- Before using the earbuds for the first time, it is recommended to fully charge the earbuds. Also, please keep the lid of the charging case closed while charging

CHARGE THE CASE:

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank etc.

REMAINING CASE BATTERY INDICATIONS

Normal State	Charging State
Red LED blinks 3 times upon opening the case lid	Slowly breathing Red LED
White LED blinks 3 times upon opening the case lid	Slowly breathing White LED
Green LED blinks 3 times upon opening the case lid	Slowly breathing Green LED
LED stays OFF	Solid Green LED
	Red LED blinks 3 times upon opening the case lid White LED blinks 3 times upon opening the case lid Green LED blinks 3 times upon opening the case lid

CASE LED INDICATION WHEN EARBUDS ARE GETTING CHARGED FROM THE CASE

This is to indicate that the earbuds are getting charged from the case (when case lid gets closed):

- CYAN for 5 seconds to indicate LEFT bud is charging from the

BASIC FUNCTIONS

- . Voice Assistant: Long touch the left CTC for 3 seconds to activate default voice assistant.
- . Answer: Single tap the CTC on either earbud to answer an incoming call. . Hang Up / Reject Call: Double tap the CTC on either earbud to end /
- · Play/Pause Music: Single tap either earbud's CTC to play or pause music. . Next Track; When playing music, double tap the right earbud's CTC to
- skip to the next song. Previous Track: When playing music, double tap the left earbud's CTC to return to the previous song.

Note:Volume can only be controlled via the media device

BEAST™ MODE

Long touch the right CTC for 3 seconds to switch to Low Latency mode. also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Long touch the right CTC for 3 seconds once again, to turn it off and return to Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

ENx™ TECH

Our ENx³⁴ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!


VOICE ASSISTANT:

Step 1: Long touch the CTC on left earbud for 3 seconds to activate default smart voice assistant.

Step 2: The respective voice assistant screen pops up and you may place your commands at ease.

Tips: You may try the following commands,

- . What is the weather?
- Play a song
- Set a reminder

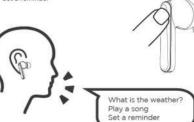

Note: If the voice assistant doesn't get triggered, then the functionality has to be first enabled via your media device settings

SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears.

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid.

The earbuds automatically switch off (and enter charging mode).



MANUAL POWER OFF

Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds.

Step 2: Once the earbuds get turned off, place them back inside the case and close the lid.

FACTORY RESET:

Perform the factory reset in case you feel any difficulty while operating

*NOTE: Before performing reset, clear "Airdopes 141 Neo" from pairing device history by forgetting device

Step 1: Take out both the earbuds from the case and tap 5 times on both the CTCs: red LED blinks quickly for 5 times on the earbuds

Step 2: Place the earbuds inside the case and close the lid

Step 3: After a few seconds take the earbuds out from the case and perform a fresh connection

The reset functionality gets completed once all the above 3 steps are performed.

Congratulations! Your Airdopes 141 Neo has been Reset



SPECIFICATIONS Headphone Type

Music Playtime

Standby Time

Driver Size

ENx³⁸

Number of Mics

BEAST™ Mode

Charging Time

Charging Interface

Water Resistance

Latency

Frequency

Battery

Bluetooth Version

Transmission Range

Please follow the instructions to operate

Please don't use the ear-buds in extreme temperatures

Please don't use the product near water

WARNING

. Please keep the product away from heat sources, as the heat may damage it

. Don't jam the ports such as charger port, LED port, etc.

• It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the phone / media device



Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter	
2) Cable/Wire :	Standard Cable (35 strands @0.10mm diameter/ stran
Any other accessory can b	e paired up with the product as long as the specification
are as per above nomes.	

IPX5