



Rockerz 111


Manual

Thank you for choosing boAt Rockerz 111. Let this manual be your guiding map as you navigate the shores of musical bliss with these wireless neckband earphones. Knowledge of Bluetooth and device connection is essential for the usage of these neckband earphones. Therefore, we strongly recommend that this manual be read thoroughly before use and referred to in times of difficulty.



PACKAGE CONTENTS

- 1 x Rockerz 111
- 1 x USB Type C charging cable
- 2 x Pairs of additional earmuffs (Small & Large)
- 1 x Manual
- 1 x Warranty Card
- 1 x Catalogue

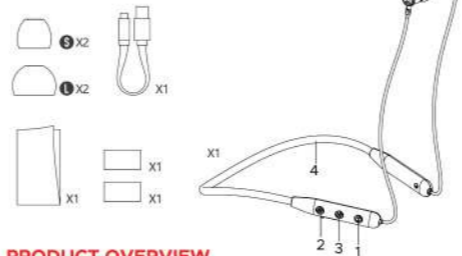

PRODUCT OVERVIEW

1. Volume Down/ Previous Track
2. Volume Up/ Next Track
3. Multifunction Button (MFB)
4. Neckband

TO PAIR WITH BLUETOOTH

Step 1: When switched off, press and hold the MFB for 3 seconds to switch the earphones on. The earphones will automatically enter the pairing mode with a voice prompt. The blue and red LEDs flash alternatively to indicate this.

Step 2: Open the Bluetooth function on your device and search for 'Rockerz 111' in the list of available devices.

Step 3: Choose 'Rockerz 111' from the list. If asked, enter the pairing password "0000" to establish Bluetooth connectivity.

Step 4: Once successfully connected, a voice prompt will sound through the earphones. The blue LED will remain switched on for 3 seconds to indicate the same.

Note:
The neckband automatically turns off if no pairing is established within 5 minutes.



FUNCTIONS

- (1) Power on: When switched off, press and hold the MFB (Multifunctional Button) for 3 seconds. A voice prompt will confirm the same. Also, blue LED will flash for 1 second to indicate this.
- (2) Power off: In any mode, press and hold the MFB for 5 seconds. This is followed by a voice prompt and the red LED flashes for 1 second before the device turns off.
- (3) Play/Pause: Single tap the MFB to play/pause music.
- (4) Volume Up: Tap the volume "+" button in steps to increase the volume to your desired level. A voice tone will indicate maximum volume.
- (5) Volume Down: Tap the volume "-" button in steps to decrease the volume to your desired level. A voice tone will indicate minimum volume.
- (6) Answer/End call: Tap the MFB once to answer an incoming call or end an ongoing call.
- (7) Reject call: Press the MFB twice during an incoming call to reject it.
- (8) Redial: Double tap the MFB to redial the last contacted number.

Front

(9) Previous Track: To go to the previous track, press and hold the volume "-" button for 1.5 seconds.

(10) Next Track: To skip to the next track, press and hold the volume "+" button for 1.5 seconds.

(11) Reset Device (Clear Paired List): Press and hold the volume "+" and "-" buttons simultaneously for 5 seconds to clear the previous list of connected devices. The red and blue LEDs will flash for 1 second to indicate this.

(12) Dual Pairing: To connect 'Rockerz 111' to two devices simultaneously, first connect the earphones to one of the devices. Then, switch both the earphones and the device off. Thereafter, connect the earphones to the second device and switch the first device on again. The earphones will get connected to both the devices. If not, connect the first device manually once again to activate dual pairing.

(13) BEAST™ Mode: Tap the MFB thrice to switch between low latency BEAST™ Mode & Music Mode. A voice prompt will indicate both the activation and de-activation of BEAST™ Mode. Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

(14) ENx™ Tech: Our ENx™ Tech algorithm cancels out the background noise so that you can be heard crystal clear on calls. You don't have to activate ENx separately as the mic is integrated with this technology and activated by default. Deliver your voice without interruptions no matter where you are – workspace, airports, railway stations, roads; literally everywhere!

(15) Voice Assistant: Long touch the MFB for 1.5 seconds to activate the smart voice assistant.

TO CHARGE

Step: To charge the earphones, plug one end of the provided USB Type-C cable into the earphones and connect the other end to either a laptop or an adapter.

(1) Low Battery: When the charge of the earphones is less than 10%, there is a 'low battery' prompt in every 10 minutes. The red LED blinks rapidly to indicate the same.

(2) Charging: Solid red LED indicates that the earphones are being charged. (Please note that the earphones cannot be turned on while charging.)

(3) Fully Charged: Once the earphones are charged completely, the red LED will turn off.

DUAL PAIRING:

Step 1: Switch on the Bluetooth on your first phone/media device and search for 'Rockerz 111'. After the selection is done, the earphones are paired with your phone/media device.

Step 2: Turn off the Bluetooth of your first phone/media device. The earphones are ready to be paired again. The blue & red LED flashes alternatively to indicate this.

Step 3: Now switch on the Bluetooth function on your second phone/media device. Scan and select 'Rockerz 111' to connect.

Step 4: Switch on the Bluetooth of the first phone/media device again. The earphones are reconnected to the first phone/media device.

Step 5: Congratulations! Your earphones are now connected to both your devices successfully via Bluetooth.

Note: If you face issues, connect the first device manually once again to activate dual pairing.

SPECIFICATIONS

Product Type	Wireless Neckband Earphones
Bluetooth Version	v5.3
Operating Range	10 m
Frequency	20 Hz-20 kHz
Driver Size	10 mm*2
Battery	210 mAh
Talk Time	Up to 40 hours
Music Playtime	Up to 40 hours
Charging Time	About 50 min
Charging Technology	ASAP Charge Technology
Driver Impedance	32Ω
Dual Pairing	Yes
Water Resistance	IPX5
Charging Port	USB Type-C
BEAST™ Mode Latency	60 ms
ENx™ Tech (activated by default)	Yes

SAFETY CAUTIONS

• Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.

• Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.

• Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.

• Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.

• To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

CHARGING NORMS & GUIDELINES:

Charger/Adapter at 5V 2A and Standard Cable (35 strands @0.10 mm diameter/strand)



Rockerz 111

Back