


User Guide

MadRabbit Soul Buds Pro

Specification

Model :	MadRabbit Soul Buds Pro
Bluetooth Version :	V 5.1
Bluetooth Range :	15 m
Drive Size :	13 mm
Driver Impedance :	32Ω
Frequency :	20 Hz - 20 kHz
Noise Reduction :	26 - 28db
Audio Codec :	SBC, AAC, APE, FLAC
Music Time :	ANC OFF: 6.5 h, ANC ON : 6 h
Calling Time :	4 h
Standby Time :	4 months (Max)
Charging Time :	1.5 h
Earbuds Battery :	40 mAh
Charging Case Battery :	320 mAh
Charging Interface :	Type-C

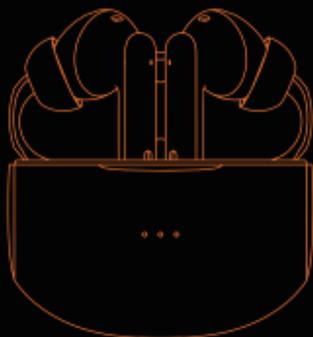


What's in the Box?



Charging Case



Wireless Earbuds

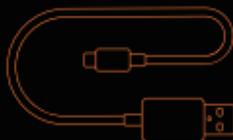

Type-C Charging Cable



User Manual



Ear tips

Product Details



Charging Indicator

Type-C Charging Port



Touch Area

Microphone

Product Usage



Step 1

Open the case to Power On automatically




Step 2

Wait for the earbuds to auto pair



Step 3

Turn ON the Bluetooth device & search 'MadRabbit Soul Buds Pro' to connect

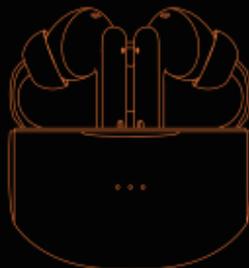

Step 4

Power OFF: Put earbuds back into the case and close the lid

Functions



Short Press

- 👆 1 Tap - Decrease Volume
- 👆 2 Taps - Receive / Hang Up Call
- 👆 2 Taps - Play / Pause
- 👆 Hold for 3 secs - Voice Assistance Activation
- 👆 3 Taps - To Switch to ANC / Transparency Mode
- 👆 Hold for 1.5 secs - Reject Call

Short Press

- 👆 1 Tap - Increase Volume
- 👆 2 Taps - Receive / Hang Up Call
- 👆 2 Taps - Play / Pause
- 👆 3 Taps - Switch to Gaming / Music Mode
- 👆 Hold for 1.5 secs - Reject Call / Next song




Charge

If earbuds lose pairing function, keep the earbuds Power ON--->Turn OFF the Bluetooth on the mobile---->Double-tap the right earbuds to get them paired manually.

Use the original charging cable to charge.
Fast charging is strictly prohibited.

Charging case indicator will stay on while charging the earbuds. Once the earbuds are fully charged, the indicator light will disappear.

Charging case indicator light will flash when being charged. Once fully charged, the indicator light will stop flashing and remain on.

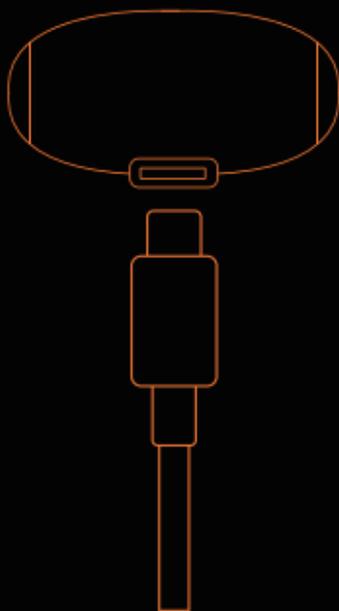

Manual Power On



Long touch on both the earbuds for 10 secs to manually power on the earbuds.



Both the earbuds will automatically pair with each other. The earbuds will enter into Connection Mode.

Manual Power Off



Long touch on any one earbud for 10 secs.



Once the earbuds get turned off, place them back inside the case and close the lid.

Safety Information

Before using and operating the Earbuds, please read and follow the below precautions to ensure the best performance of it and to avoid dangerous or illegal situations.

Electronic Devices

- Do not use this device in the place where wireless devices are prohibited, otherwise it will interfere with other electronic devices or cause other dangers.

Medical Equipment Interference

- In medical and health care places where the usage of wireless devices is prohibited, please follow the rules and turn off the device.
- The radio waves generated by the device may affect the normal operation of implanted or personal medical devices, such as pacemakers, cochlear implants, speaker aids, etc. If you use these medical devices, please consult the manufacturer for restrictions on the use of this device.
- When using this device, kindly keep a distance of at least 15 cm from the implanted medical devices (such as pacemakers, cochlear implants, etc.)

Hearing Loss

- Listening to sound at high volume may permanently damage your hearing. When you use Earbuds to listen to music or calls, it is recommended to use the minimum volume required to avoid hurting your hearing.
- Exposure to high-level volume while driving may distract the driver and cause accidents.

Operating Environment

- Do not use the device in dusty, sharp, compact areas or near magnetic fields, etc., to avoid failure of the internal circuit of the device.
- When installing the device, please keep away from strong magnetic fields or electrical appliances with strong magnetic fields, such as ovens and refrigerators.
- Do not use the device in thunderstorm weather. Thunderstorm weather may cause equipment failure or electric shock hazard.
- Please use the device within a temperature range of $-10\text{ }^{\circ}\text{C} \sim +55\text{ }^{\circ}\text{C}$, and store the device and its accessories within a temperature range of $-40\text{ }^{\circ}\text{C} \sim +70\text{ }^{\circ}\text{C}$. When the ambient temperature is too high or too low, it may cause device function failure. When the temperature is below $5\text{ }^{\circ}\text{C}$, the performance of the battery is limited.



Safety Information

- Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, candles, or other places that generate high temperatures.
- Do not place sharp metal objects such as pins near the device's earpiece or speaker, as the metal objects may adhere and cause injury to you.

Child Health

- This device and its accessories may contain some small parts. Keep the device and its accessories in a place out of children's reach. Children may inadvertently damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.
- This device is not a toy, children should use this device under adult supervision.

Battery Safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery leakage, fire or explosion.
 - Do not drop, crush or puncture the battery. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery. Do not replace the battery yourself to avoid damage to the battery or device.
- Please dispose batteries in accordance with local regulations. Do not dispose batteries as household waste. Improper disposal of the battery may cause the battery to explode.

Charge Safety

- When charging the device, the power socket should be installed near the device and should be easily accessible.
- When charging is completed or when charger not in use, disconnect the charger from the device and unplug the charger from the power outlet.

Environmental Protection

- Do not dispose this device and its accessories as ordinary household garbage.
- Kindly abide by the local laws and regulations on the handling of this device and its accessories, and support recycling operations.



Precautions

- The earphones should be stored in a dry / ventilated environment and avoid contacting it with oil, water vapor, steam, moisture and dust to prevent the performance of the product.
- Avoid using harsh organic solvents or items containing these ingredients to clean
- The earphones should be used correctly according to the requirements. Pay attention to the effect of the environment on the product. Maintain a distance of 2 meters between them for a smooth connection.
- If the earphone fail to connect or in case of poor connection, please do not dismantle them or the accessories privately. Otherwise no warranty.
- When charging the earphones, please use the standard car charger or the charger specified by our company.

Trademarks

Word mark and logo are registered trademarks of Redster Commerce Pvt. Ltd. Reproduction in whole or in part without written permission is strictly prohibited. Other companies and products mentioned herein are trademarks of their respective owners.

MadRabbit Warranty

The device is guaranteed for 12 months from the date of purchase. Repair and maintenance service are free during this period.

The warranty limitation:

- Man-made damage.
- Beyond the warranty period.
- Accessories damage due to improper use and maintenance.
- Disassembling the device without the authority of the manufacturer.

Service Information

- MadRabbit Website : <https://www.madrabbit.in>





Scan To Register A Warranty



Scan For A Video Guide