

 


User Guide


MadRabbit DYNO Buds Series

Specification


Model	MadRabbit Jet Buds
Bluetooth Version	V 5.3
Transmission Distance	10 meters
Driver Size	12 mm
Driver Impedance	32 Ω
Frequency	20 Hz - 20 kHz
Audio Codec	SBC, AAC
Playtime	80 Hours
Standby Time	90 Days
Earbuds Charging Time	1.5 Hours
Case Charging Time	2.5 Hours
Earbuds Battery	40mAh
Charging Case Battery	600mAh
Charging Interface	Type-C
Game Mode	50ms Latency

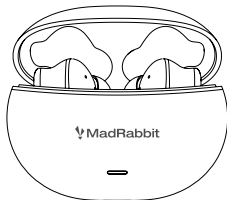


What's in the Box?

 

Charging Case

 

Wireless Earbuds

 

Type-C Charging Cable



User Manual



MadRabbit Stickers

 


Warranty & Thank You Card




Earlips


Product Details



Charging Indicator

 

Type-C Charging Port

 


Touch Area

Bluetooth Pairing




Step 1

 Open the case to Power On automatically.




Step 2

 Wait for the earbuds to auto pair.



Step 3

 Turn ON the Bluetooth device & search 'MadRabbit DYNO Buds' to connect.

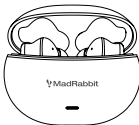

Step 4

 
Power OFF: Put earbuds back into the case and close the lid.

Charge the device for half an hour before using the product for the first time.

Functions


Right Buds

- 👆 1 Tap - Play / Pause
- 👆 1 Tap - Answer / Hang Up Call
- 👆 2 Taps - Increase Volume
- 👆 3 Taps - Next Song
- 👆 Touch & hold for 1.5 secs - Reject Call
- 👆 Touch & hold for 3 secs - Activate Voice Assistant

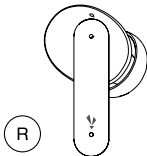


Left Buds

 - 👆 1 Tap - Play / Pause
- 👆 1 Tap - Answer / Hang Up Call
- 👆 2 Taps - Decrease Volume
- 👆 3 Taps - Previous Song
- 👆 Touch & hold for 1.5 secs - Reject Call
- 👆 Touch & hold for 1.5 secs - Gaming Mode
- 👆 Touch & hold for 1.5 secs - Music Mode

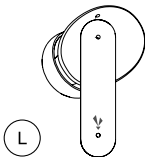

Charging the Earbuds

 - To charge the earbuds, **P**lace them inside the charging case and **c**lose the lid.
- Connect the provided USB cable to a computer or an AC adapter.
- **P**lug the Type-C end into the charging port located at the bottom of the charging case.

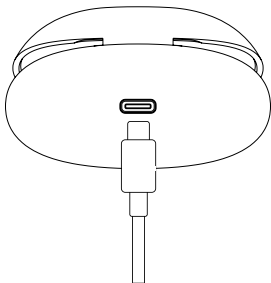


- While charging, the LED indicator **f**lashes white.
- When the charge is **f**ull, the LED indicator turns off.

Common problem with solution

In case of any connectivity issues, reset the device.

To reset the device,

 - Take the earbuds out of the charging case.
- Press and hold left or right buds for 8 seconds.

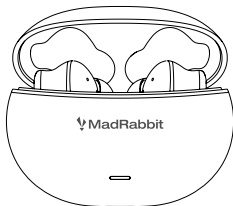

The device is now reset and ready for use.

Safety Information

Before using and operating the earbuds, please read and follow the below precautions to ensure the best performance of it and to avoid dangerous or illegal situations.

Electronic Devices

- Do not use this device in the place where wireless devices are prohibited, otherwise it will interfere with other electronic devices or cause other dangers.

Medical Equipment Interference

- In medical and health care places where the usage of wireless devices is prohibited, please follow the rules and turn off the device.
- The radio waves generated by the device may affect the normal operation of implanted or personal medical devices, such as pacemakers, cochlear implants, aids, etc. If you use these medical devices, please consult the manufacturer for restrictions on the use of this device.
- When using this device, kindly keep a distance of at least 15 cm from the implanted medical devices (such as pacemakers, cochlear implants, etc.)

Hearing Loss

- Listening to sound at high volume may permanently damage your hearing. When you use earbuds to listen to music or calls, it is recommended to use the minimum volume required to avoid hurting your hearing.
- Exposure to high-level volume while driving may distract the driver and cause accidents.

Operating Environment

- Do not use the device in dusty, sharp, compact areas or near magnetic fields, etc., to avoid failure of the internal circuit of the device.
- When installing the device, please keep away from strong magnetic fields or electrical appliances with strong magnetic fields, such as ovens and refrigerators.
- Do not use the device in thunderstorm weather. It may cause equipment failure or electric shock hazard.
- Please use the device within a temperature range of $-10\text{ }^{\circ}\text{C} \sim +55\text{ }^{\circ}\text{C}$, and store the device and its accessories within a temperature range of $-40\text{ }^{\circ}\text{C} \sim +70\text{ }^{\circ}\text{C}$. When the ambient temperature is too high or too low, it may cause device function failure. When the temperature is below $5\text{ }^{\circ}\text{C}$, the performance of the battery is limited.



Safety Information

- Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, candles, or other places that generate high temperatures.
- Do not place sharp metal objects such as pins near the device's earpiece or earbuds, as the metal objects may adhere and cause injury to you.

Child Health

- This device and its accessories may contain some small parts. Keep the device and its accessories in a place out of children's reach. Children may inadvertently damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.
- This device is not a toy, children should use this device under adult supervision.

Battery Safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery leakage, fire or explosion.
- Do not drop, crush or puncture the battery. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery. Do not replace the battery yourself to avoid damage to the battery or device.
- Please dispose batteries in accordance with local regulations. Do not dispose batteries as household waste. Improper disposal of the battery may cause the battery to explode.

Charge Safety

- When charging the device, the power socket should be installed near the device and should be easily accessible.
- When charging is completed or when charger not in use, disconnect the charger from the device and unplug the charger from the power outlet.

Environmental Protection

- Do not dispose this device and its accessories as ordinary household garbage.
- Kindly abide by the local laws and regulations on the handling of this device and its accessories, and support recycling operations.



Precautions

- The earbuds should be stored in a dry / ventilated environment and avoid contacting it with oil, water vapor, steam, moisture and dust to prevent the performance of the product.
- Avoid using harsh organic solvents or items containing these ingredients to clean the earbuds.
- The earbuds should be used correctly according to the requirements. Pay attention to the effect of the environment on the product. Maintain a distance of 2 meters between them for a smooth connection.
- If the ear fail to connect or in case of poor connection, please do not dismantle them or the accessories privately. Otherwise no warranty.
- When charging the earbuds, please use the standard car charger or the charger specified by our company.

MadRabbit Warranty

The device is guaranteed for 12 months from the date of purchase. Repair and maintenance service are free during this period.

The warranty limitation:

- Man-made damage.
- Beyond the warranty period.
- Accessories damage due to improper use and maintenance.
- Disassembling the device without the authority of the manufacturer.

Service Information

- MadRabbit Website : <https://www.madrabbit.in>

