


User Guide



MadRabbit BOXO BAR

Specifications

Model	MadRabbit Boxo Bar
Bluetooth Version	5.3
Bluetooth Range	10M (Without Obstacles)
Frequency Range	60Hz - 20KHz
Speaker Size	52mm x 2
Output Power	8W x 2 = 16W
Battery Capacity	2000mAh
Play Time	20 Hours
Charging Time	3 Hours
Charging Interface	Micro
Support	TF Card/ USB/ AUX/ Bluetooth/ TWS
Dimensions	L 378 x W 55 x H 65 mm
Net Weight	570gms

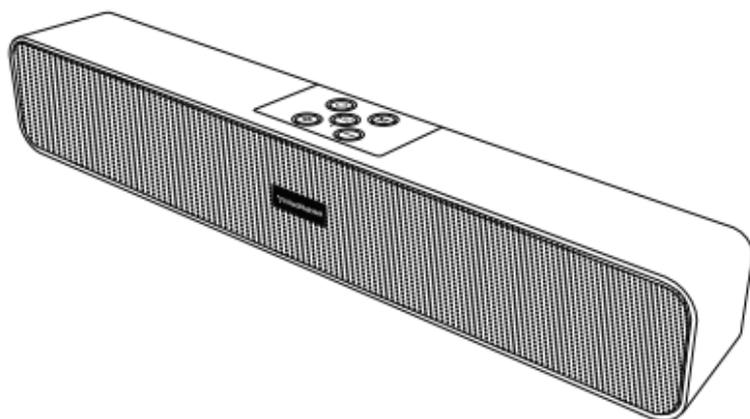


Know Your Soundbar

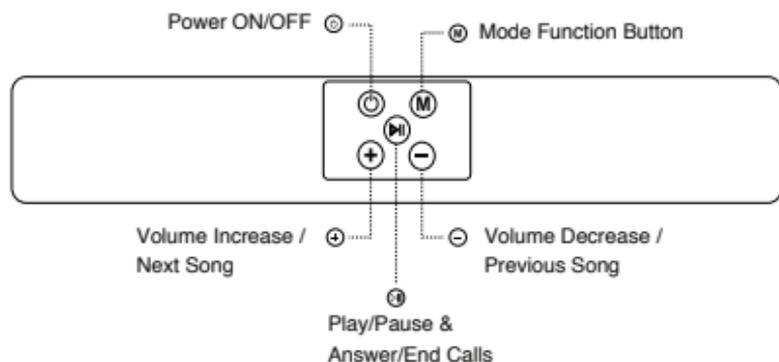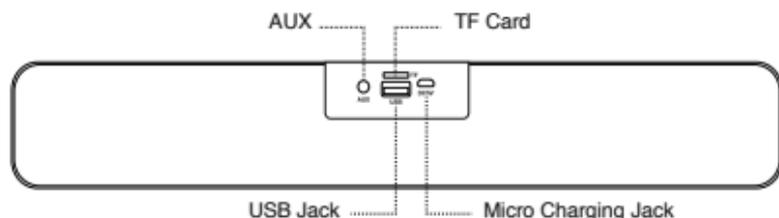


Charging the Soundbar

- Fully charge the device before using the product for the first time.
- Connect the provided charging cable to the soundbar micro charging port and plug-in to a USB AC adaptor.

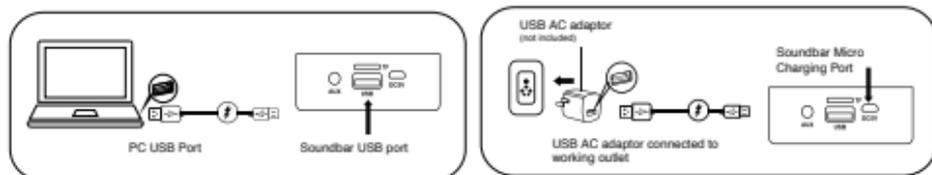


Getting Started: Power ON / OFF

- Press 'POWER' Button for 1.5 secs to Power ON the Speaker.
- Press 'POWER' Button for 1.5 secs to Power OFF the Speaker.

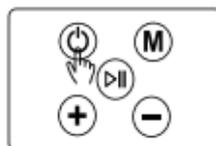


AUX

The soundbar includes AUX-IN port. Simply connect the soundbar and your music player with the provided 3.5mm AUX cable. Successful connection can be noted when the LED indicator flashes blue.

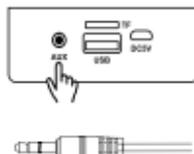


TF CARD

The soundbar has a TF card slot. It can support a memory card of up to 64 GB.

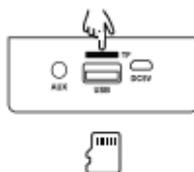

USB MODE

To enable USB Mode, plug in your pen drive to the USB port in the soundbar.

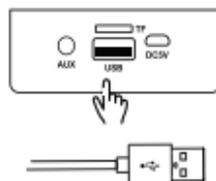

Bluetooth Pairing

Bluetooth Pairing with Your Smartphone, Laptop or Smart TV for the First Time:



- Turn ON the soundbar.
 - On the backside of the soundbar, a Blue LED will flash to indicate Pairing Mode.
 - In your device's Bluetooth menu, scan for new devices and select '**MadRabbit BOXO Bar**'. The flashing Blue LED will become stable to indicate a successful connection.
 - When the soundbar is in Pairing Mode, it will automatically connect to the last paired device. To connect to another device, disconnect from the last paired device.
 - To disconnect the soundbar from the paired device, long press the M Button.
-

Auto OFF

When the speaker is turned on and there is no connection or operation for 5 mins, the speaker will turn off automatically.

LED INDICATOR

- Blue LED light flashes: Waiting for connection
- Blue LED light stabilizes: Successful Bluetooth connection
- Blue LED light flashes: AUX-IN connection
- Red LED light stabilizes: Charging
- Red LED light turns off: Charging Complete

Function

Button	Operating	Function Description
	Long Press	Turn ON / OFF: Long Press for 1.5 secs.
	Short Press	1. Music Playback Status: Short Press to Play/Pause 2. Incoming Calls: Short Press to Connect 3. When on a Call: Short Press to Hang Up
	Long Press	Incoming Calls: Long Press to Reject
	Press Twice	After a Recent Call: Press Twice to Redial Automatically
	Long Press	Reset: Long Press for 3 secs
	Press Twice	Voice Assistant
	Short Press	Volume Up
	Long Twice	Next Song: Long Press for 1.5 secs
	Short Press	Volume Down
	Long Twice	Previous Song: Long Press for 1.5 secs

TWS (Twin Speaker Pairing)

BOXO BAR ①



BOXO BAR ②



Pairing:

Turn on both the soundbars and keep in proximity. Make sure none of the soundbars are connected to any other BT devices. Press and hold the pause/play button on any one soundbar. You will hear a voice prompt. LED indicator on one soundbar flashes blue and LED indicator on the other soundbar stabilizes. Now, you can enjoy the TWS mode.

Unpairing:

Press and hold the pause/play button on any one of the connected soundbars. You will hear a voice prompt. Both the soundbars' LED indicator flashes blue. Now the soundbars are unpaired from TWS mode.

(FOR TWS MODE, YOU WILL NEED TO PURCHASE ANOTHER SOUNDBAR)

Safety Information

Before using and operating the soundbar, please read and follow the below precautions to ensure it's best performance and to avoid dangerous or illegal situations.

Electronic Devices

- Do not use this device in the place where wireless devices are prohibited, otherwise it will interfere with other electronic devices or cause other dangers.

Medical Equipment Interference

- In medical and health care places where the usage of wireless devices is prohibited, please follow the rules and turn off the device.
- The radio waves generated by the device may affect the normal operation of implanted or personal medical devices, such as pacemakers, cochlear implants, speaker aids, etc. If you use these medical devices, please consult the manufacturer for restrictions on the use of this device.
- When using this device, kindly keep a distance of at least 15 cm from the implanted medical devices (such as pacemakers, cochlear implants, etc.)

Hearing Loss

- Listening to sound at high volume may permanently damage your hearing. When you use soundbar to listen to music or calls, it is recommended to use the minimum volume required to avoid hurting your hearing.
- Exposure to high-level volume while driving may distract the driver and cause accidents.

Operating Environment

- Do not use the device in dusty, sharp, compact areas or near magnetic fields, etc., to avoid failure of the internal circuit of the device.
- Preferably use the product in a typical indoor environment.
- When installing the device, please keep away from strong magnetic fields or electrical appliances with strong magnetic fields, such as ovens and refrigerators.
- Do not use the device in thunderstorm weather. It may cause equipment failure or electric shock hazard.



Safety Information

- Please use the device within a temperature range of $-10\text{ }^{\circ}\text{C} \sim +55\text{ }^{\circ}\text{C}$, and store the device and its accessories within a temperature range of $-40\text{ }^{\circ}\text{C} \sim +70\text{ }^{\circ}\text{C}$. When the ambient temperature is too high or too low, it may cause device function failure. When the temperature is below $5\text{ }^{\circ}\text{C}$, the performance of the battery is limited.
- Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, candles, or other places that generate high temperatures.
- Do not place sharp metal objects such as pins near the device's earpiece or speaker, as the metal objects may adhere and cause injury to you.

Child Health

- This device and its accessories may contain some small parts. Keep the device and its accessories in a place out of children's reach. Children may inadvertently damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.
- This device is not a toy, children should use this device under adult supervision.

Battery Safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery leakage, fire or explosion.
- Do not drop, crush or puncture the battery. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery. Do not replace the battery yourself to avoid damage to the battery or device.
- Please dispose batteries in accordance with local regulations. Do not dispose batteries as household waste. Improper disposal of the battery may cause the battery to explode.

Charge Safety

- When charging the device, the power socket should be installed near the device and should be easily accessible.
- When charging is completed or when charger not in use, disconnect the charger from the device and unplug the charger from the power outlet.

Environmental Protection

- Do not dispose this device and its accessories as ordinary household garbage.
- Kindly abide by the local laws and regulations on the handling of this device and its accessories, and support recycling operations.



Safety Information

- Please use the device within a temperature range of $-10\text{ }^{\circ}\text{C} \sim +55\text{ }^{\circ}\text{C}$, and store the device and its accessories within a temperature range of $-40\text{ }^{\circ}\text{C} \sim +70\text{ }^{\circ}\text{C}$. When the ambient temperature is too high or too low, it may cause device function failure. When the temperature is below $5\text{ }^{\circ}\text{C}$, the performance of the battery is limited.
- Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, candles, or other places that generate high temperatures.
- Do not place sharp metal objects such as pins near the device's earpiece or speaker, as the metal objects may adhere and cause injury to you.

Child Health

- This device and its accessories may contain some small parts. Keep the device and its accessories in a place out of children's reach. Children may inadvertently damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.
- This device is not a toy, children should use this device under adult supervision.

Battery Safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery leakage, fire or explosion.
- Do not drop, crush or puncture the battery. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery. Do not replace the battery yourself to avoid damage to the battery or device.
- Please dispose batteries in accordance with local regulations. Do not dispose batteries as household waste. Improper disposal of the battery may cause the battery to explode.

Charge Safety

- When charging the device, the power socket should be installed near the device and should be easily accessible.
- When charging is completed or when charger not in use, disconnect the charger from the device and unplug the charger from the power outlet.

Environmental Protection

- Do not dispose this device and its accessories as ordinary household garbage.
- Kindly abide by the local laws and regulations on the handling of this device and its accessories, and support recycling operations.

