TCL


TSR1

2.0 TCL Roku TV Wireless Soundbar Quick Start Guide



Register Your Product

Register your TCL Roku TV Wireless Soundbar to receive the latest news on product releases, promotional offers, and more!*

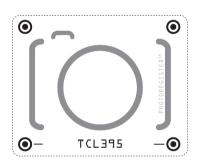

Text to Register Text a photo of the camera icon to 71403

 
Or register online at register.tcl.com

Need help? Visit photoregister.com/help or text HELP to 71403

Enjoy exclusive benefits with registration:



Expedited support and service




Ę Exclusive offers and promotions


Verification of ownership μ

*Only Available to U.S. Customers



Make sure you read all the safety information before you use this product.

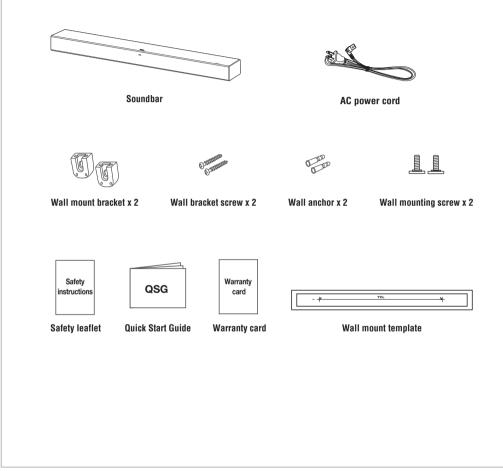

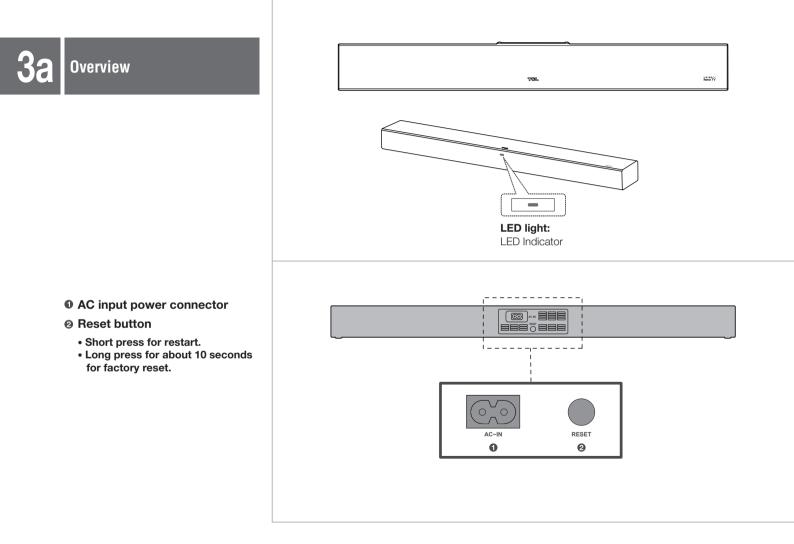



| LED Expression | Product State | Color |
|--|----------------------|-------|
| | | |
| Solid | Powered On | White |
| | Setup (waiting) | |
| | Booting up | |
| | Ready | |
| Blinking | Setup (working) | |
| | Working / Busy | |
| | Looking for Roku TV™ | |
| | Software Update | |
| Solid moving to a slow blink | Restart | |
| Blink 3 times, then solid moving to a slow blink | Factory Reset | |



Position your soundbar

The ideal place to position the soundbar is centered underneath your Roku TV.

We also recommend moving the soundbar as close to the edge of the stand as possible, for better sound.




'**U** | ""


Wall mount your soundbar

Required tools:



- Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches below the center of the Roku TV.
- 2 Use a level to make sure the wall mount template is positioned accurately.
- ③ Use the tape to stick the wall mount template firmly on the wall.
- Mark on the wall using each marking on the template through the mounting holes.
- **6** Take away the wall mount template.
- **6** Drill a screw hole at each marking on the wall.

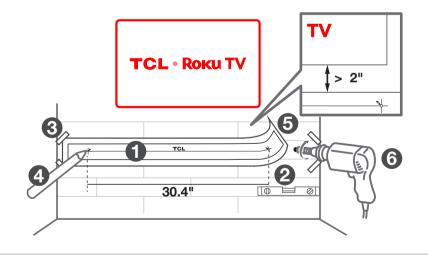


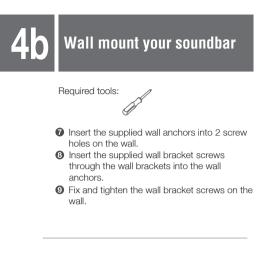


Required tools:



- O Unscrew the screws from the back of the soundbar and set them aside for potential use in the future.
- Tighten the supplied wall mounting screws into the screw holes in the back of the soundbar.

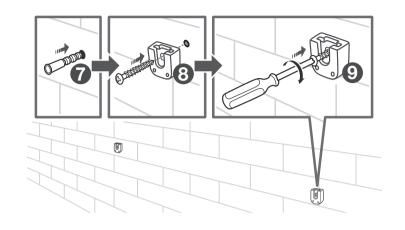


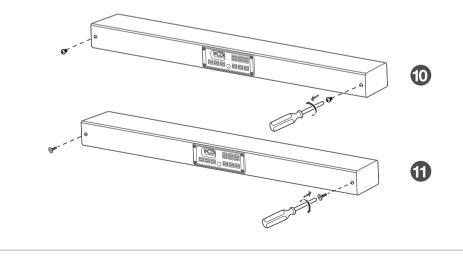



Wall mount your soundbar


Hang the soundbar on the wall mount brackets.

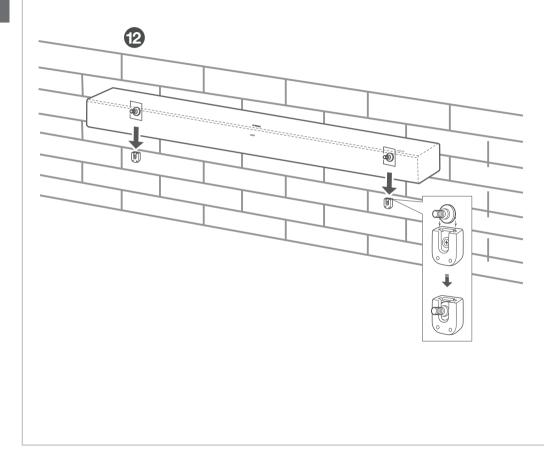

Connect to your Roku TV

What you'll need:

- Roku TV connected to the internet.
- Your Roku TV remote.

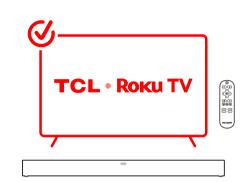


Let's get started:

 Power up your soundbar.
Press and hold

 on your Roku TV remote


 for 5 seconds to open the setup menu.

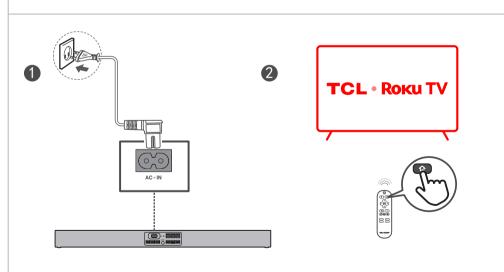

5

Connect to your Roku TV

Sollow the on-screen setup. Choose Wireless soundbar and select Continue to begin the pairing process.

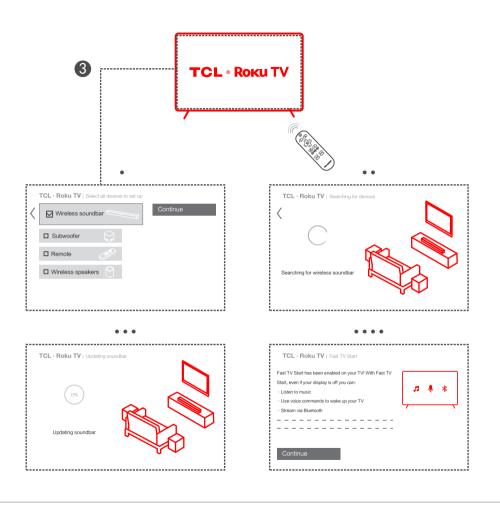

Pair with your Bluetooth® device


You can stream music from your mobile device via Bluetooth.

Make sure your soundbar is connected to your TV before you start. (Refer to section 5)

- Press the Home button a on your Roku remote.
- Select Settings, followed by Remotes & devices.
- Select Pair Bluetooth device.
- When you see the Bluetooth pairing screen, go to your smartphone, tablet, or computer and follow the next several steps.
- > Open Bluetooth settings on your smartphone, tablet, or computer.
- > Wait a moment for your Bluetooth device to scan for devices and discover your Roku TV.
- > Select your Roku TV from the list of available devices.
- · Pairing is successful.

A Bluetooth device (phone, tablet, etc.) only needs to follow the pairing process once.

Once it's been paired, you can reconnect any time by choosing the Roku TV from the list of Bluetooth devices on your smart phone, tablet, etc.

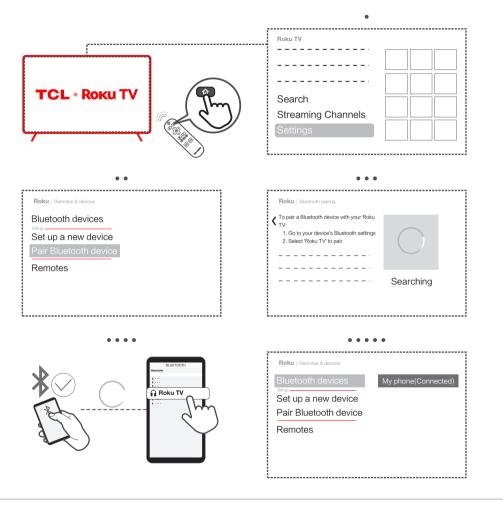

FAQ

Does this soundbar work with any TV?

No, the soundbar is only compatible with Roku TV. All Roku TVs will have a "Roku TV" logo in the lower right corner of the TV bezel and the home screen of the TV will say Roku TV.

Does this soundbar work with other Roku streaming players or wireless devices at the same time?

No, the soundbar and other Roku wireless devices are mutually exclusive.

How to use sound settings?

- While streaming video or music, press 💌 .
- Select Sound Settings.
- Turn on the settings you want.

 
How to turn off the LED light of soundbar on your Roku TV?

- Press the Home button 💿 on your Roku TV remote.
- Settings > System > Power.
- Follow the on-screen setup to turn off Standby LED.

* All technology names mentioned are the trademarks or registered trademarks of their respective companies.

DO NOT RETURN TO STORE

WE ARE READY TO HELP contact us first with any questions



TCL SUPPORT: support.tcl.com 1-877-300-9223

TAKE CARE WHEN REMOVING THE SOUNDBAR

Bluetooth[®]

The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TTE Corporation is under license. Other trademarks and trade names are those of their respective owners.

Roku

Roku and Roku TV are the trademarks or registered trademarks of Roku, Inc.

Copyright © 2021 TCL. All rights reserved.

TSR1_NA_USA_QSG_V1.1