

# Manual

Thank you for choosing boAt Rockerz 650. This manual is meant to guide you through the functionality of the wireless on-ear headphone. Knowledge of Bluetooth and device connection is essential for the usage of the headset. Therefore, we strongly advise that this manual is thoroughly read before use, and referred to in times of difficulty, so that you can always be easily guided towards the shores of musical bliss.

### **Package contents**

- 1 x Rockerz 650
- 1 x USB Type C charging cable
- 1 x Manual
- 1 x Warranty Card
- 1 x Catalogue



## **Charging norms & Precautionary Guidelines: -**

- 1) Charger/Brick/Adapter: 5V 2A 2) Cable/Wire: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

### To Pair with Bluetooth

- automatically enter pairing mode with a prompt, the blue and red LEDs flash alternatively to indicate the same.
- (2) Open Bluetooth on your device and search for "Rockerz 650" in
- (3) Choose "Rockerz 650" from the list and if asked enter the



#### **Functions**

**Next Track:** 

| Power on:        | When switched off, press and hold the MFB for 3 seconds. A voice prompt will confirm the same. The red and blue LEDs will flash to indicate the same.   |
|------------------|---|
| Power off:       | In any mode, press and hold the MFB for 5 seconds.<br>A voice prompt will confirm the same. The red LED<br>will flash for 1 second before the device turns off.   |
| Play/Pause:      | Play/Pause: Single tap the MFB to play/pause music OR You can lock in the headphones to your ears in order to play a song or remove them to pause a song. This headphone is equipped with In-ear Detection feature that detects whenever the user puts on the headphone for listening and vice versa. |
| Volume up:       | Tap the volume "+" button in steps to increase the volume. A beep will indicate maximum volume.   |
| Volume down:     | Tap the volume "-" button in steps to decrease the volume. A beep will indicate minimum volume.   |
| Answer/End call: | Tap the MFB once when answering or ending a call to complete the action   |
| Reject call:     | Press and hold the MFB for 2 seconds during an incoming call to reject the call   |
| Previous Track:  | To go to the previous track, press and hold the "-" button for 2 seconds.   |
|                  |   |

| Reset Device<br>(Clear Paired List):   | simultaneously for 5 seconds to clear the previous<br>list of connected devices. The red and blue LEDs wil<br>flash 3 times to indicate the same.   |  |
|--|---|--|
| Dual Pairing:  | To connect Rockerz 650 to two devices simultaneously, firstly connect the headphone to one of the devices. Then, switch both the headphone and the device off. Thereafter, connect the headphone to the second device, and again switch the first device on. The headphone will get connected to both devices. If not, connect the first device manually once again to activate dual pairing. |  |
| Voice Assistant:   | Long press the MFB for 2 seconds to wake up smart voice assistant   |  |
| Redial:  | Triple tap the MFB for redialing the last contacted number  |  |
| You can switch between Signature Sound mo (Bass Mode) and Balanced Mode by short pretthe EQ button.  Signature Sound Mode is boAt's default bass while Balanced Mode is more suitable for poonews and voice based media. |   |  |

| Press and hold the "+" and "-"buttons

## To Charge

Use a USB Type C charging cable to charge the headphone through either a laptop or an adaptor.

(1) Low Battery: When the remaining talk time is less than 10 minutes, there is a 'low battery' prompt and red LED flashes quickly to indicate the same

- (2) **Charging:** Solid red LED indicates that the headphone is being charged (please note that the headphone cannot be turned on while
- (3) Fully charged: Solid blue LED indicates the same.

### **Specifications:**

| Bluetooth Version   | V5.0                   |
|---------------------|------------------------|
| Operating Range:    | 10m                    |
| Frequency:          | 20Hz~20000Hz           |
| Driver Size         | 40mm*2 Drivers         |
| Battery:            | 1000mAh                |
| Talk time:          | Up to 60 hours         |
| Music time:         | Up to 60 hours         |
| Charging Time :     | About 60 Min           |
| Charging Technology | ASAP Charge Technology |
| Charging Port       | Type C                 |
| Driver Impedance    | 16Ω                    |
| Sensitivity         | 102dB ±3dB             |
| Dual Pairing        | Yes                    |
| In-ear Detection    | Yes                    |

## **Safety Cautions**

Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the headphones should be done only through a qualified service provider/manufacturer.

- Please clean the headphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the headphones are kept away from extremely hot or cold substances.
- Any damage to the headphones that is NOT a manufacturing issue will make the product's warranty null and void.
- Do not use headphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the headphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.



