

boAt

Manual

Thank you for purchasing boAt Stone 350 Pro. You are now just a step away from the realm of pure audio bliss. Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via Bluetooth wireless technology, TF card, and AUX wire compatibility. This portable speaker has been designed with a smooth interface that requires minimum efforts.

PACKAGE CONTENTS

- 1x boAt Stone 350 Pro
- 1x User Manual
- 1x Type-C Charging Cable
- 1x Audio Cable





STONE 350 PRO



PRODUCT OVERVIEW:

Button Functions

	Long press to switch the speaker ON/OFF Single press to switch between RGB light modes.
	Short press to change the connectivity mode (BT/AUX/TF Card) Long press to switch on or switch off the RGB light.
	Short press in steps to increase the volume
	Short press in steps to decrease the volume
	Short press to play/pause the track
	Long press to return to the previous track
	Long press to skip to the next track
	Short press to answer an incoming call
	Short press to end an ongoing call
	Long press to reject an incoming call
	Quickly press twice to redial the last contacted number
	Double press to activate the default voice assistant (Google voice assistant/Siri)
	Double press to disconnect the current connected device. Double press again to reconnect the speaker with the previously paired device.

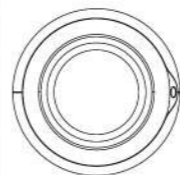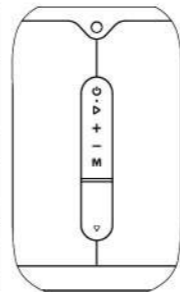

BLUETOOTH PAIRING

- Long press the power button to switch on the speaker. The speaker enters Bluetooth pairing mode automatically with blinking white LED to indicate the same.
- Activate the Bluetooth on your smartphone and search for "Stone 350 Pro" to connect.
- Select "Stone 350 Pro" from the list of available devices.

Congratulations! Stone 350 Pro speaker is now connected to your phone via Bluetooth indicated by a tone prompt.

Note:

- Stone 350 Pro remembers previously connected devices; once switched on, the speaker automatically reconnects to the previously connected devices within the working range.
- If pairing is unsuccessful, please remove "Stone 350 Pro" from the list of paired devices on your phone, bring the phone closer to the speaker and try pairing again.

OPERATING INSTRUCTIONS

AUX MODE

- Connect one end of the appropriate cable to the AUX input of the speaker and the other to the external device.
- Short press the **M** button to select the AUX connectivity mode.
- In AUX mode you can control the audio playback via the media device/phone.

Note:

- In AUX mode it is necessary to carry out the operation directly from the connected external device.
- Please note that you cannot accept/reject incoming calls in AUX mode.

Front

TWS FUNCTION

Turn on the two Stone 350 Pro speakers that you require to be forged into one, both in Bluetooth mode. You only need to set one of the two units and follow the steps below-

- Press and hold the button on one of the speakers for about 2 seconds until you hear a beep.
- Release the button and wait for a few seconds for the two speakers to connect.
- Enable Bluetooth on your mobile phone and search for "Stone 350 Pro" to pair.
- Select "Stone 350 Pro" to play music through the two paired speakers.

TF CARD MODE

- Long press the power button to switch on the speaker.
- Insert a Micro SD card into the TF card slot and it will switch to TF card mode automatically.
- Short press the button to play/pause audio.
- Short press the button to increase the volume level and long press it to skip to next track. Short press the button to decrease the volume level and long press it to return to previous track.

RESET FUNCTIONALITY

Perform the Reset function if the speaker doesn't turn off or doesn't respond properly. Step: Press and hold the power button for 8 seconds. The Bluetooth connection history of the speaker will be cleared and go back to the default settings.

Use a pointed object to prick the reset button near the TF Card Slot to set the speaker to default settings.

CHARGING

- When the battery is low, the speaker will make a beep sound once every 5 minutes. After 3 such indications, the speaker will automatically switch OFF.
- Insert the provided charging cable to charge the speaker.
- When the speaker is in charging mode, the LED remains solid red. The LED indicator turns off once the speaker is fully charged.

Note:

Please avoid using the speaker while it is charging, as this may decrease the battery's performance.

SPECIFICATIONS

Product Type	Portable Wireless Speaker
Bluetooth Version	v5.3
Bluetooth Profiles	BT v5.3+BR+EDR+BLE
Working Range	10 m
Driver Size	2"
Compatibility	BT/AUX/TF Card
TWS Function	Yes
Frequency	20Hz-20KHz
Signal to Noise Ratio	≥60dB
Input Voltage	5 V/1 A
Output Power	14W
Play Time	Up to 12 hours (At 60% volume)
Talk Time	Up to 32 hours
Standby Time	32 hours
Charging Time	2 to 2.5 hours
Battery Capacity	3600 mAh @3.7V
Water Resistance	IPX5

*Playtime may vary accordingly to the music type & the volume level

CHARGING NORMS & GUIDELINES

Charger/Brick/Adapter	5 V/1 A
Cable/Wire	Standard Cable (35 strands @0.10 mm diameter/strand)

Note:

Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

WARNING:

- Please charge the speaker according to the charging norms mentioned to protect the battery.
- Please do not disassemble, repair, or modify this product by yourself without authorization.
- Please do not submerge the product in water.
- Please keep this product safe from coming in contact with liquids.
- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to extreme temperatures.
- Please keep this product away from heat sources, such as radiators, stoves, etc.
- When cleaning this product, please use a soft cloth or slightly damp cloth if necessary. Please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.



Back