



GOSURROUND 430

2.0 Soundbar

Get ready for MORE, for a LIFE of WOW with your all new GOVO GOSURROUND 430. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

PACKAGE CONTENTS

- 1 x Soundbar
- 1 x AUX Cable
- 1 x Audio Cable
- 1 x User Manual
- 1 x Remote Control
- 1 x Warranty Card

SPECIFICATIONS

Speaker Type	2.0 Soundbar
Input ratings	110-240V AC 50/60Hz
Output power	80W
Soundbar Drivers	4 x 2"
Product Dimension	L900*H63*D95mm
Bluetooth version	5.0

PRODUCT USE


- Firstly, plug the AC power cable of soundbar to the external socket. The unit is now turned on.
- Use one set audio cable (3.5mm to 3.5mm) to connect external audio source (DVD, mobile, TV).
- Press '↔' on panel or "USB" key in remote control exchange to "USB" mode, to play the USB card.
- Press '↔' on panel or 'BT' key in remote control exchange to "BT" mode, open mobile phone, search BT name "GOSURROUND 430" to connect.

BATTERY INSTALLATION

- 1 Open the battery case.
- 2 Insert 2 batteries without the polarity reversed.
- 3 Close the battery case.
- 4 Keep within 5 meter range, 30 degree angle while aiming at the unit.



DESCRIPTION FOR REMOTE CONTROL

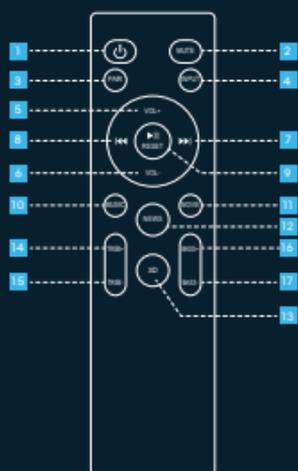


- 1 "Power" Key: Standby mode for power ON/OFF.
- 2 "MUTE" Key: MUTE ON/OFF.
- 3 "PAIR" Key: Bluetooth disconnect/connect, long press to disconnect Bluetooth, long press again to reconnect to Bluetooth.
- 4 "INPUT" Key: The input mode switch, BT, OPT, HDMI (ARC), USB, AUX-IN input mode cycle switch. (Attention: When connected to the Bluetooth of the Phone, the volume of the Soundbar will be the same as the phone.)

- 5 Volume + Key: BT, OPT, HDMI (ARC), USB, AUX IN mode adjust the volume +.
 - 6 Volume - Key: BT, OPT, HDMI (ARC), USB, AUX IN mode adjust the volume -.
 - 7 **▶▶** Key: Bluetooth mode short press is next, in USB Mode short press is the next song, the Long press is fast forward.
 - 8 **◀◀** Key: Bluetooth mode short press is previous, in USB Mode short press is the previous song, the Long press is fast backward.
 - 9 **▶|◀** Key: Bluetooth and USB mode, short press to pause/play, AUX-IN mode, short press is MUTE / PLAY, long press is reset function, "RESET" key: reset MAS. VOL (default "U 15"), BASS (default "SU 8"), TRE (default "HI 8"), default volume.
 - 10 "MUSIC" Key: The music effect key. Each boot is the default music mode. Display E1.
 - 11 "MOVIE" Key: The movie sound effect key. Display E2.
 - 12 "NEWS" Key: The news sound effect key. Display E3.
 - 13 "3D" Key: The 3D sound effect key. Display E4.
 - 14 TREB + : Adjust the treble +.
 - 15 TREB - : Adjust the treble -.
 - 16 BASS + : Adjust the bass +.
 - 17 BASS - : Adjust the bass -.
- ERP low power consumption mode No signal input for 30 minutes, Soundbar will automatically enter the Standby mode.

BUTTON CONTROL

- 1 **◀◀** Key: Press to turn to the previous track, hold it to adjust volume down in all modes.
- 2 **▶▶** Key: Press to turn the next track, hold it to adjust volume up in all modes.
- 3 Play/Pause: Press it to pause/play in BT/USB mode, hold it to disconnect or connect the device in BT mode.
- 4 Standby: Press it to enter Standby ON/BT/OTP/HDMI/USB/AUX, hold it to be Standby OFF.
- 5 Input: USB input.

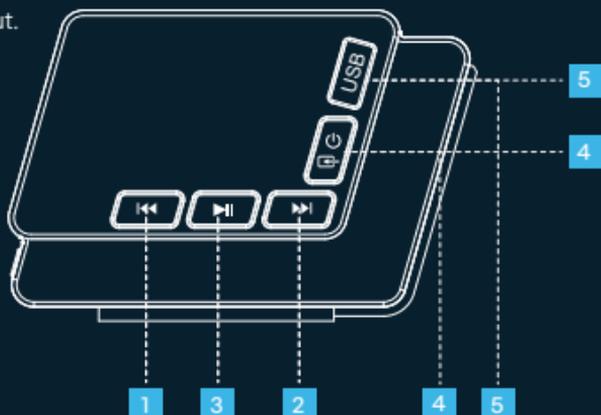

SOUNDBAR (BACK)



- 1 AUX IN.
- 2 OPTICAL INPUT
- 3 HDMI (ARC) INPUT

WALL MOUNTING

- Measure 24.41 inch (620mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the sound bar to the screws on the wall and press and push the sound bar to the right 1/8 inch each to lock.

SAFETY INSTRUCTIONS

- 1 Read these instructions before using the product.
- 2 Read all warnings carefully.
- 3 Follow all instructions carefully.
- 4 Do not use this apparatus near water.
- 5 Clean only with dry cloth.
- 6 Do not block any ventilation openings. Install in accordance with the govo's instructions.
- 7 Do not install the speaker system near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 8 Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- 9 Only use attachments/accessories specified by the manufacturer.
- 10 Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When a cart is used, be cautious while moving the cart unit combination to avoid injury from tip-over.

Explanation of the symbols on the device



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

SOUNDBAR (BACK)



- 1 AUX IN.
- 2 OPTICAL INPUT
- 3 HDMI (ARC) INPUT

WALL MOUNTING

- Measure 24.41 inch (620mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the sound bar to the screws on the wall and press and push the sound bar to the right 1/8 inch each to lock.

SAFETY INSTRUCTIONS

- 1 Read these instructions before using the product.
- 2 Read all warnings carefully.
- 3 Follow all instructions carefully.
- 4 Do not use this apparatus near water.
- 5 Clean only with dry cloth.
- 6 Do not block any ventilation openings. Install in accordance with the govo's instructions.
- 7 Do not install the speaker system near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 8 Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- 9 Only use attachments/accessories specified by the manufacturer.
- 10 Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When a cart is used, be cautious while moving the cart unit combination to avoid injury from tip-over.

Explanation of the symbols on the device



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.