

GO VO

GoSurround 910 2.1 CH Dolby Soundbar



User Manual



Bass ka Boss

AC POWER

IMPORTANT NOTES

- Make sure the power supply is correct and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting to AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard, never use a power cord after it has been damaged.

9

- Do not block any ventilation openings.
- Do not install the speaker system near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When cart is used, be cautious while moving the cart unit combination to avoid injury from tip-over.

Explanation of the symbols on the device



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

8

Get ready for MORE, for a LIFE of WOW with your all new GoSurround 910. We strongly recommend you go through this manual completely before beginning to use the product as it contains important technical information to ensure you have a seamless audio experience. It can also be referred to in times of difficulty.

DOLBY AUDIO

It is equipped with Dolby Audio technology, providing an enthralling and breathtaking auditory experience. Dolby Audio features greatly improved sound, more channels, less compression, and a more realistic audio experience compared to standard-definition audio formats. At higher bit rates, it is virtually indistinguishable from the source audio.

PACKAGE CONTENTS

- 1 x Soundbar
- 1 x Subwoofer
- 1 x Remote Control
- 1 x Aux Cable
- 1 x User Manual
- 1 x Warranty Card

SPECIFICATIONS

Input voltage	110-240V AC 50/60Hz
Output Power	240W
Soundbar	4 x 2.25"
Subwoofer Driver	6.5"

1

Subwoofer (Dimension)	W190*D310*H370
Soundbar (Dimension)	L900*D90*H79mm
Satellite (Dimension)	L87*D87*H182mm
Bluetooth version	5.3

PRODUCT USE

- Plug the power cable of the soundbar to the external socket. The Unit is in standby mode.
- Please plug the RCA cable of the woofer to the SUB output jack in the soundbar.
- AUX: Use 3.5mm AUX in cable to connect external audio sources (DVD, Mobile, TV). Press **⏮** on panel or INPUT key in the remote control to select AUX IN mode.
- HDMI: Use your HDMI cable to connect the soundbar with your HDMI (ARC) device. Press **⏮** on panel or INPUT key in the remote control to select HDMI mode.
- USB: Insert your USB disk into the USB socket in the soundbar, it will switch to USB mode directly. You can also press **⏮** on the panel or INPUT key in the remote control to switch to USB mode.
- BT: Press **⏮** on panel or INPUT key in remote control to enter BT mode. Turn on your BT device to find Bluetooth name "GoSurround 910" and pair with it.
- OPT: Use your optical cable to connect soundbar with your OPT device. Press **⏮** on panel or INPUT key in the remote control to select OPT mode.

2

WALL MOUNTING

SOUNDBAR

- Measure 24.41 inches (620mm) and drill 2 parallel holes (1/4 inch each) in the wall.
- Firmly apply a dowel into each hole in the wall (dowel only required for solid wall).
- Attach the soundbar to the screws on the wall and press and push the soundbar to the right 1/8 inch each to lock.

SATELLITE SPEAKERS

- Drill 1 hole (1/4 inch) in the wall. Firmly apply the dowel into the hole and attach the satellite speaker to the screw on the wall.

SAFETY INSTRUCTIONS

- Read these instructions before using the product.
- Read all warnings carefully.
- Follow all instructions carefully.
- Do not use this apparatus near water.
- Clean only with dry cloth.

7

BUTTON CONTROL




- "⏻": Short press standby ON/OFF. On standby, display brightness of the LED display will be reduced by 30%. (Attention: During operation, display brightness of the digital tube will be grayed out to normal, if there is no operation after 10 seconds, the display brightness will be reduced by 30%.)
- "⏮": Short press to switch through BT, AUX, HDMI (ARC), USB, OPT function.
- "⏪": Press to turn to previous track, hold it to adjust volume down in all modes.
- "⏸/▶": Short press to PAUSE/PLAY in Bluetooth, USB and AUX IN modes. Long press to DISCONNECT/CONNECT in Bluetooth mode.
- "💡": Short press to ON/OFF Light.
- "⏩": Press to turn to next track, hold it to adjust volume up in all modes.

6

REMOTE BATTERY INSTALLATION

- Open the battery case.
- Insert 2 batteries with the polarity reversed.
- Close the battery case.
- Keep within 5 meter range, 30 degree angle while aiming at the unit.

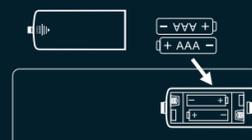


NOTE:

Please remove the batteries in case you don't use the remote for a long period of time.

3

DESCRIPTION OF THE REMOTE CONTROL

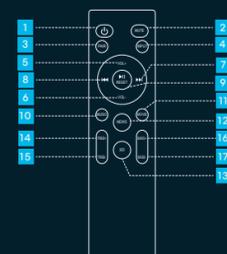

- "⏻" Key: Standby mode for power ON/OFF.
- "MUTE" Key: MUTE ON/OFF.
- "PAIR" Key: Bluetooth disconnect/connect, long press to disconnect Bluetooth, long press again to reconnect to Bluetooth.
- "INPUT" Key: The input mode switch, BT, OPT, HDMI (ARC), USB, AUX-IN input mode cycle switch. (Attention: When connected to the Bluetooth of the iPhone, the volume of the Soundbar will be the same as the phone.)
- Volume + Key: BT, OPT, HDMI (ARC), USB, AUX IN mode adjust the volume +.
- Volume - Key: BT, OPT, HDMI (ARC), USB, AUX IN mode adjust the volume -.
- "▶▶" Key: Bluetooth mode short press is next, in USB Mode short press the next song, the Long press is Fast Forward.

4

- "◀◀" Key: Bluetooth mode short press is previous, in USB Mode short press the previous song, the Long press is fast backward.
- "⏸/▶" Key: Bluetooth and USB mode, short press to pause/play, AUX-IN mode, short press is MUTE / PLAY, long press is reset function, "RESET" key; reset MAS. VOL (default "U15"), BASS (default "SU 8"), TRE (default "HI 8"), default volume.
- "MUSIC" Key: The music effect key. Each boot is the default music mode. Display E1.
- "MOVIE" Key: The movie sound effect key. Display E2.
- "NEWS" Key: The news sound effect key. Display E3.
- "3D" Key: The 3D sound effect key. Display E4.
- TREB + : Adjust the treble +.
- TREB - : Adjust the treble -.
- BASS + : Adjust the bass +.
- BASS - : Adjust the bass -.

CONNECTIVITY PORTS



- USB PORT
- AUX IN
- OPTICAL
- HDMI (ARC)
- SUB OUTPUT

5