



DwOTS 545  
earbuds



### Appearance:

- 1 Left Earbud
- 2 Right Earbud
- 3 Charging Case
- 4 Left Earpiece Charging Socket
- 5 Right Earpiece Charging Socket
- 6 Type-C Charging Interface
- 7 Multi-Function Touch Area

### What You Will Find In The ACwO Box?

- Charging Case
- Pair Of Earbuds
- Type-C Charging Cable
- Warranty Card
- Scan Me Card
- ACwO X Sunil Chhetri Catalogue
- Comfortable Ear Tips

### Kindly Note:

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the DwOTS 545 Wireless Earbuds at least 70% before the first usage.

### Charging:

#### Charging Case:

Connect the type-c charging cable to the charging case to charge your DwOTS 545 Wireless Earbuds.

#### Earbuds:

Place the earbuds in the charged Charging Case to charge the DwOTS 545 Wireless Earbuds.

### Bluetooth Pairing Process:

- 1 Take out the DwOTS 545 Earbuds from the Charging Case and place them in your ears.
- 2 Go to the Bluetooth settings of your device and switch it on.
- 3 Scan available devices.
- 4 Search For "ACwO DwOTS 545" from the list of available devices.
- 5 Pair "ACwO DwOTS 545" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS 545 will seamlessly connect to your device every time you open the charging case thereafter.

### Kindly Note :

If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

### Bluetooth Reset Process:

- 1 In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
- 2 Clear all Bluetooth data named "ACwO DwOTS 545" from your device and disable Bluetooth.
- 3 Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

### Product Features:

- HYPER BOOST™ Quick Charging Technology (15Mins Charge - 150Mins Playtime)
- 4 Mics With SONIC SHIELD™ ENC
- 3 Dedicated Bass, Gaming, And Normal Equaliser Modes
- Voice Assistant ("Ok Google" & "Hey Siri")
- NFS™ 45ms Super Low Latency
- IPX5 Water & Sweat Resistant
- 48 Hours Of Music Playtime
- Type-C Charging Interface
- Battery Indicator Display
- Sensory Touch Controls
- Instant Auto Connect
- Bluetooth Version 5.3

### How To Use Your ACwO DwOTS 545?

#### Touch Controls:

The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

#### Wearing Earbuds:

The earbud labeled "L" is intended for the left ear, while the earbud marked "R" is intended for the right ear.

#### Safety Guidelines:

• Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.

• When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.

• Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.

• Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.

• To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.

• Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

### Smart Touch Function:

#### Play/Pause:

Single tap on the Multi-Function Touch Area of either earbud.

#### Repeat Track:

Triple tap on the Multi-Function Touch Area of the left earbud.

#### Next Track:

Triple tap on the Multi-Function Touch Area of the right earbud.

#### Bass Mode On/Off:

Tap four times onto the Multi-Function Touch Area of either earbud.

#### Switch Between Normal And Gaming Mode:

Tap five times on the Multi-Function Touch Area of either earbud.

#### To Increase Volume:

Double tap on the Multi-Function Touch Area of the right earbud.

#### To Decrease Volume:

Double tap on the Multi-Function Touch Area of the left earbud.

#### To Answer Calls:

Single tap on the Multi-Function Touch Area of either earbud.

#### To Hang Up Calls:

Single tap on the Multi-Function Touch Area of either earbud.

#### To Decline Calls:

Tap and hold for 2 seconds on the Multi-Function Touch Area of either earbud.

#### Call Voice Assistant:

Tap and hold for 2 seconds the Multi-Function Touch Area of either earbud.

#### Power Off Both Earbuds:

Tap and hold for 5 seconds on the Multi-Function Touch Area of either earbud.

#### Power On Right Earbud:

Tap and hold for 5 seconds on the Multi-Function Touch Area of the right earbud.

#### Power On Left Earbud:

Tap and hold for 5 seconds on the Multi-Function Touch Area of the left earbud.

One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances no matter how noisy your environment is.



TRUSTED BY THE CAPTAIN OF  
INDIAN FOOTBALL TEAM

Sunil Chhetri