

ACWO<sup>®</sup>

# DwOTS Decibel

User Manual



## Appearance:

1. Left Earbud
2. Right Earbud
3. Charging Case
4. Right Earpiece Charging Socket
5. Left Earpiece Charging Socket
6. Multi-Function Touch Area
7. Type-C Charging Interface
8. Reset Button



## What You Will Find In The ACwO Box?

- Charging Case
- Pair Of ANC Earbuds
- Type-C Charging Cable
- Warranty Card
- Scan Me Card
- ACwO X Sunil Chhetri Catalogue
- Comfortable Ear Tips

## **Kindly Note:**

Please take off the sticker peels attached below the earbuds before you charge them.

Charge the charging case and the DwOTS Decibel Wireless Earbuds at least 70% before the first usage.

## **Charging:**

### **Charging Case:**

Connect the type-c charging cable to the charging case to charge your DwOTS Decibel Wireless Earbuds.

Earbuds:

Place the earbuds in the charged Charging Case to charge the DwOTS Decibel Wireless Earbuds.

## **Bluetooth Pairing Process:**

- 1) Take out the DwOTS Decibel Earbuds from the Charging Case and place them in your ears.
- 2) Go to the Bluetooth settings of your device and switch it on. Scan available devices.
- 3) Search For "ACwO DwOTS Decibles" from the list of available devices.
- 4) Pair "ACwO DwOTS Decibles" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Decibles will seamlessly connect to your device every time you open the charging case thereafter.



### **Kindly Note:**

If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

### **In-Built Bluetooth Reset Process:**

- 1) In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
- 2) Clear all Bluetooth data named "ACwO DwOTS Decibles" from your device and disable Bluetooth.
- 3) Place your earbuds in the charging case, and keep the lid of the charging case open.
- 4) Now press the button between the earbuds for 5 to 10 seconds to reset the earbuds.
- 5) Once the earbuds resets successfully, initiate the Bluetooth pairing process once more.

## Product Features:

HYPER BOOST™ Charging Technology  
(15 Mins Charge - 15 Hours Playtime)

4EQ Modes (BALANCED, BASS, GAMING, THEATRE)

Quad Mic SONIC SHIELD™ ENC Technology

60 Hours Of Music Playtime (With ANC Off)

Voice Assistant (Ok Google, Hey Siri)

IPX5 (Water And Sweat Resistant)

nFS™ 45ms Low Latency

BasS BooM X™ Drivers

Bluetooth Version 5.3

Instant Auto Connect

ANC Up To 35Db

# How To Use Your ACwO DwOTS Decibel?

## Touch Controls:

The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle. Wearing Earbuds

The earbud labeled "L" is intended for the left ear, while the earbud marked "R" is intended for the right ear.

## Safety Guidelines:

Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.

When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.

Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.

Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.



To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.

Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

## **Smart Touch Function:**

### **Play & Pause**

Single tap on the Multi-Function Touch Area of either earbud.

### **ANC Mode On/Off**

Double tap on the Multi-Function Touch Area of either earbud.

### **Switch Between Theatre/Bass/Gaming/ Balanced Modes**

Long press 2 seconds on the Multi-Function Touch Area of either earbud.

### **Next Track**

Triple tap on the Multi-Function Touch Area of the right earbud.

### **To Answer Calls:**

Single tap on the Multi-Function Touch Area of either earbud

### **To Hang Up Calls:**

Single tap on the Multi-Function Touch Area of either earbud.

### **To Decline Calls:**

Tap and hold for 2 seconds on the Multi-Function Touch Area of either earbud.

### **Call Voice Assistant:**

Tap four times on the Multi-Function Touch Area of either earbud.

### **Power Off Left/Right Earbud**

Tap and hold for 5 seconds on the Multi-Function Touch Area of either earbud.

### **Power On Right Earbud**

Tap and hold for 5 seconds on the Multi-Function Touch Area of the right earbud

### **Power On Left Earbud**

Tap and hold for 5 seconds on the Multi-Function Touch Area of the left earbud

One need not activate Environmental Noise Cancellation as the built-in mic is already equipped with the same and activated by default to make your conversations smoother and clear without any disturbances no matter how noisy your environment is.