



## Musicbot Lite Bluetooth Speaker - Product Manual



**Important:** pTron Musicbot Lite is set at 50% default volume. Please adjust the volume through the control panel on the speaker.



### **Power On & Pairing**

1. Power On the speaker by sliding the Power button towards the left side.
2. Open Bluetooth function on your Device and Search for the Available Bluetooth devices.
3. Click on “pTron BT Speaker” to connect.

### **Power Off**

Power Off the speaker by sliding the Power button towards the right side.

### **Bluetooth Connectivity - Automatic**

Just Turn On the Speaker. It will Automatically Connect to the Last Connected Device.

**Note:** The last connected device must be in 10 meters wireless range and Bluetooth function must be On.

### **Use TF Card**

Insert a TF card into the slot to activate the TF card mode.

### **Use USB Drive**

Insert a USB stick or pen drive into the slot to activate the USB drive mode.

### **Mode Button**

If a TF card/USB drive is already plugged into the speaker but you want to play a song via Bluetooth then just press the Mode button to enable playback thru Bluetooth connected device. To switch back to playback from TF card/USB drive, just press the Mode button again.

### **Call & Music Functions**

Answer/Hangup a Phone Call: Press MFB (>) Once

Reject a Phone Call: Press MFB (>) for 2 seconds

Music Play/Pause: Press MFB (>) once

Next Song: Press "+" button once

Previous Song: Press "-" button once

Volume Up: Long Press "+" key

Volume Down: Long Press "-" key

Re-dial: Press MFB (>) twice in standby mode

**Note:** MFB stands for Multi-function Button Play/Pause button (>) is MFB.

### **Charging the Speaker**

1. Connect the Micro USB cable to the charging port on the speaker's backside.
2. Connect the USB end of the Charging cable to a Power Source such as a USB Charger or other Charging Devices of 5V Output.
3. Red LED light will be Steady during Charge.

### **Troubleshooting Scenario 1: Connectivity Issue**

1. Turn OFF the Speaker and charge 100%.
2. Un-pair with the connected Bluetooth device.
3. Restart the Bluetooth device.
4. After 100% charging switch ON the speaker and pair it with the Bluetooth device again.

### **Safety Precautions**

1. Please keep this device away from extreme heat, liquids, humidity or corrosive environment.
2. Please don't over-charge the product as it will decrease the service life of battery.
3. Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.
4. This product or the Bluetooth function should not be used during charging.
5. Don't jam the ports such as charger port, LED port, etc.
6. It is recommended to utilize the product below the maximum volume in order to protect your hearing.
7. Please don't open/temper the product or product's battery.
8. Please keep the product out of children's reach.
9. Dispose the product responsibly and adhere to your local authority guidelines.

### **Disclaimer**

The colors and specifications shown or mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or on trade names of their respective owners.

Customer Care Details: [support@ptron.in](mailto:support@ptron.in) and 040-040 - 67138888

Product Registration/Warranty Registration: <https://ptron.in/apps/product-registration>

Service Centers List: <https://ptron.in/pages/ptron-service-centers>