



Musicbot Evo Wireless Soundbar - Product Manual



Important: pTron Musicbot Evo is set at 60% default volume. Please adjust the volume through the key panel on the soundbar.

Buttons Description:



Power On/Off Slider
3.5mm Aux Port
USB Port
TF Card Slot
DC5V Micro USB Charging Port



M - Mode Button
+ Volume Up & Next Song
- Volume Down & Prev. Song
>|| Play/Pause Button

Power On & Pairing

1. Power On the soundbar by sliding the Power key towards the right side. You can see Blue LED light will start blinking.
2. Open the Bluetooth function on your Device and Search for the Available Bluetooth device.
3. Click on "pTron BT Speaker" to connect.

Power Off

Power Off the soundbar by sliding the Power key towards the left side.

Bluetooth Connectivity - Automatic

Just Turn On the soundbar. It will Automatically Connect to the Last Connected Device.

Note: The last connected device must be turned on, Bluetooth function must be active and both the devices must within 10 meters wireless range.

Modes - There are 5 modes in the soundbar

1. Bluetooth mode
2. Play by TF card
3. Play by USB Drive
4. AUX Mode
5. TWS Mode.

Note:

1. TF card mode will be active only when a TF card is inside the TF card port.
2. USB Drive mode will be active only when a USB drive is inserted.

Aux Function

1. Just turn ON the soundbar.
2. By default Bluetooth mode will open.
3. Connect the Aux cable with the soundbar & the phone.
4. As you will connect the Aux cable, soundbar will prompt 'Aux mode'.
5. Now, you can use this function.

TWS Function (Pairing 2 Musicbot Evo Soundbars together)

1. Just turn on both the soundbars.
2. By default Bluetooth mode will open in both the soundbars.
3. Now, press the Play/Pause button twice on both the soundbars to activate TWS mode.
4. Now, both the soundbars will get connected to each other wirelessly.

NOTE:

1. Need to keep both the soundbars closer for pairing.
2. This function can be used also when a soundbar is connected to any device in Bluetooth mode. At that time also we can connect 2 soundbars. There is no need to power off or to unpair or disconnect.

Call & Music Functions

Answer/Hangup a Phone Call: Press Play/Pause Once.

Reject a Phone Call: Press Play/Pause for 2 seconds.

Music Play/Pause: Press Play/Pause once.

Next Song: Press "+" button once.

Previous Song: Press "-" button once.

Volume Up: Long Press "+" key.

Volume Down: Long Press "-" key.

Charging the Soundbar

1. Connect the Micro USB cable with the soundbar.
2. Connect the USB end of the Charging cable to a Power Source such as USB Charger or other Charging Devices of 5V Output.
3. The Red LED light will be Steady if the soundbar is OFF during Charging and even after full charging light will remain steady Red for a couple of minutes before turning off.
4. If the soundbar is On the LED light will be steady Blue during charging on the front of the soundbar and the LED light near the charging port will be steady Red on the backside of the soundbar.

Troubleshooting: Connectivity Issue

1. Turn OFF the soundbar and charge it 100%.
2. Unpair with the connected Bluetooth device.
3. Restart the Bluetooth device.
4. After 100% charging switch ON the soundbar and pair it with the Bluetooth device again.

Safety Precautions

1. Please keep this device away from extreme heat, liquids, humidity or corrosive environment.
2. Please don't over-charge the product as it will decrease the service life of battery.
3. Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.
4. This product or the Bluetooth function should not be used during charging.
5. Don't jam the ports such as charger port, LED port, etc.
6. Please don't open/temper the product or product's battery.
7. Please keep the product out of children's reach.
8. Dispose the product responsibly and adhere to your local authority guidelines.

Disclaimer

The colors and specifications shown/mentioned in the user manual may differ from the actual product. The images shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.