User Guide

Ψ MadRabbit Fly Wireless

Specification

Model :	MadRabbit Fly Wireless
Headphone Type :	Semi In - Ear
Water Resistant :	IPX5
Bluetooth :	V 5.0
Bluetooth Range :	10 m
Frequency Range :	20 Hz-20 KHz
Speaker Size :	14.2 mm
Battery Capacity :	110 mAh
Input Rating	5V⎓1A
Charging Time:	1 - 2 h
Music Time :	8 h at 60% Volume
Standby Time :	300 h
Charging Port :	Type-C
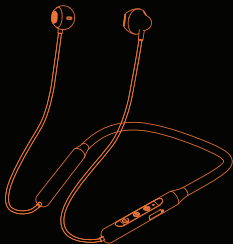
What's in the Box?
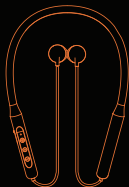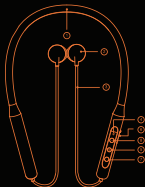
MadRabbit Fly Wireless

User Guide

Charging Cable

Earhooks

Catalogue

Product Information

1. Neck Line
2. ABS Plastic front and back of the metal cavity
3. TPE Cable
4. LED / MIC
5. Turn On / Turn Off / Answer / End Call
   / Reject Call / Play / Pause
6. USB Connector
7. Volume Down / Previous Track
8. Volume Up / Next Track

How to Pair?

1. When the neckband is off, Press and Hold the Multifunction Button for 3 secs to enter Pairing Mode. A voice prompt 'Power On' will be heard and the LED indicator will flash White and Red alternately indicating the neckband are in Pairing Mode. The neckband will turn off if there is no connection within 5 mins.

2. Enable Bluetooth function on your device. Search and find 'MadRabbit Fly Wireless' in the Bluetooth connection list. Tap on the name to connect. A voice prompt "Connected" will be heard once successfully connected. The White LED indicator will flash twice every 4 secs.

How to Reset?

Press and Hold Volume + and Volume - Buttons simultaneously for 5 secs. The White and Red indicator will flash three times.

How to Use?

Power

Power On: When the neckband is off, Press and Hold the Multifunction Button for 3 secs to turn on the neckband. A voice prompt "Power On" will be heard and the White and Red LED indicator will turn on for 1 sec.

Power Off: Press and Hold the Multifunction Button for 3 secs to turn off the neckband. A voice prompt "Power Off" will be heard and the White and Red indicator will turn on for 1 sec.

Volume Adjustment

To increase the Volume: Press the Volume + Button. Maximum volume will be heard when you reach the highest volume.

To reduce the Volume: Press the Volume - Button. Minimum volume will be heard when you reach the lowest volume.

Control Music Tracks

For Previous Track: Press and Hold the Volume - Button for 1.5 secs.
For Next Track: Press and Hold the Volume + Button for 1.5 secs.

Control Phone Calls

To Answer: Press the Multifucnction Button once.
To Hang Up: Press the Multifunction Button once.
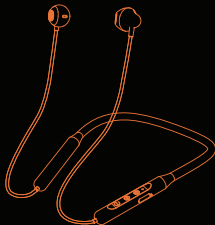To Decline Incoming Calls: Press and Hold the Power Button for 1.5 secs.

Play and Pause Music

To Play: Press the Multifunction Button once.
To Pause: Press the Multifunction Button once.

Voice Assistant

Press the Multifunction button 2 times.

Charge

Connect your neckband to a power source using the included Type-C Charging Cable. A voice prompt "Battery Low" will be heard and the Red LED indicator will flash once every second when battery runs low (playtime less than 10 mins or voltage lower than 3.3 V). The Red LED indicator will turn on when charging (the neckband will not get turned on during charge). The White LED indicator will turn on when fully charged.

Red LED keeps on when charging

White LED keeps on when fully charged
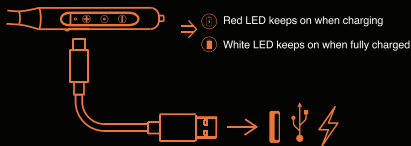
Warning

1. Never dismantle or alter this product by yourself to avoid damages and fire hazards.
2. Do not store this product in extreme temperatures (below 0 °C or above 60 °C). Working temperature: 0 °C - 45 °C.
3. Do not use this product in thunderstorm weather. It may cause product malfunctions and electric shock.
4. Children below 6 years should be under adult supervision when using this product.
5. If discomfort occurs while wearing this product, please consult a doctor to know whether you are suitable to use in-ear neckband.

Trademarks

ᚶ**MadRabbit** word mark and logo are registered trademarks of Redster Commerce Pvt. Ltd. Reproduction in whole or in part without written permission is strictly prohibited. Other companies and products mentioned herein are trademarks of their respective owners.

Made in China.

MadRabbit Warranty

• The device is guaranteed for 12 months from the date of purchase. Repair and maintenance service are free during this period.

• The warranty limitation:
  • Man-made damage.
  • Beyond the warranty period.
  • Accessories damage due to improper use and maintenance.
  • Disassembling the device without the authority of the manufacturer.

• Service Information
  • MadRabbit Website : www.madrabbit.in

TM

Scan To Register A Warranty

Scan For A Video Guide