

User Guide

Touch ANC Headphones

Specifications

Model :	MadRabbit Touch ANC Headphones
Type	Over-Ear
Bluetooth	V5.0
Speaker size	40mm
Audio decoding	SBC
Frequency response range	20Hz-20KHz
Connection method	Type-C charging cable
Support mode	BT 5.0, HSP v1.2, HFP v1.6, A2DP v1.2, AVRCP v1.4+A91
Bluetooth frequency	2.402-2.480GHz
Bluetooth power	<8.0dBm
Battery capacity	1200 mAh
Input Rating	5V ---1A
Charging time	3 hours
Headphone playback time	70H (ANC ON)/85H (ANC OFF)
Charging port	Type C
Product weight	230g




What's in the Box?




Power On/Off



The Product

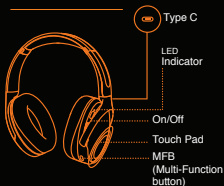

Pairing

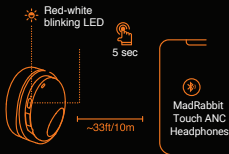

Reset



Note:

- Method one: Press and hold On/Off button for 5 sec until the led blinks white and red to power on Touch ANC and activate the pairing mode.
- Method two : While the product is powered on double tap the On/Off button until the LED blinks white and red to activate the pairing mode.

Play Music



= VOICE ASSISTANT
Press and hold for 2 sec



X 1
PLAY/PAUSE
= Single tap



= NEXT TRACK
Slide forward



= PREVIOUS TRACK
Slide back



= VOLUME UP
Slide up



= VOLUME DOWN
Slide down



SWITCH TO
AMBIENT MODE
/ACTIVE NOISE
CANCELLATION
Press and hold
with two fingers





Note:


Hybrid Noise Canceling technology optimize passive isolation which cancels noise in a wide audio frequency that let you experience smooth sound and provides you a quiet world of comfort.


Call



 ^{x 2} = ANSWER/
HANG UP
Double tap


 = REJECT CALL
Press and hold
for 2 sec

 ^{x 2} = HOLD CURRENT
CALL/
PICK UP NEXT
Double tap


 = REJECT SECOND
CALL/KEEP
CURRENT CALL
Press and hold
for 2 sec

Battery Indication and Charging



 = LOW BATTERY
Red blinking light

 = CHARGING
Red light

 = FULLY CHARGED
White light

Note:

- 70 hours of playback time with Active Noise Cancellation on and up to 85 hours with Active Noise Cancellation off.
- 10 min charge provides around 2 hours of playback time.
- Touch ANC Headphones can be fully charged in 3 hours

Safety Information

Before using and operating the headphones, please read and follow the below precautions to ensure the best performance of it and to avoid dangerous or illegal situations.

Electronic Devices

- Do not use this device in the place where wireless devices are prohibited, otherwise it will interfere with other electronic devices or cause other dangers.

Medical equipment interference

- In medical and health care places where the use of wireless devices is prohibited, please follow the rules and turn off the device.
- The radio waves generated by the device may affect the normal operation of implanted medical devices or personal medical devices, such as pacemakers, cochlear implants, hearing aids, etc. If you use these medical devices, please consult the manufacturer for restrictions on the use of this device.
- When using this device, please keep at least 15 cm away from implanted medical devices (such as pacemakers, cochlear implants, etc.)

Hearing Loss

- Listening to sound at high volume may permanently damage your hearing. When you use headphones to listen to music or calls, it is recommended to use the minimum volume required for music or calls to avoid hurting your hearing.
- Exposure to high-level volume while driving, driving attention may be distracted and cause accidents.

Operating environment

- Do not use the device in dusty, sharp, compact or near magnetic fields to avoid failure of the internal circuit of the device.
- When installing the device, please keep away from strong magnetic fields or electrical appliances with strong magnetic fields, such as ovens and refrigerators.
- Do not use the device in thunderstorm weather. Thunderstorm weather may cause equipment failure or electric shock hazard.
- Please use the device within a temperature range of $-10^{\circ}\text{C} \sim +55^{\circ}\text{C}$, and store the device and its accessories within a temperature range of $-40^{\circ}\text{C} \sim +70^{\circ}\text{C}$. When the ambient temperature is too high or too low, it may cause device function failure. When the temperature is below 5°C , the performance of the battery is limited.



Safety Information

- Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, candles, or other places that may generate high temperatures.
- Do not place sharp metal objects such as pins near the device's earpiece or speaker, otherwise the metal objects may adhere and cause injury to you.

Child health

- This device and its accessories may contain some small parts. Keep the device and its accessories in a place out of children's reach. Children may inadvertently damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.
- This device is not a toy, children should use this device under adult supervision.

Battery safety

- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery leakage, excessive, fire or explosion.
- Do not drop, crush or puncture the battery. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery. Do not replace the battery yourself to avoid damage to the battery or device.
- Please dispose batteries in accordance with local regulations. Do not dispose batteries as household waste. Improper disposal of the battery may cause the battery to explode.

Charge safety

- When charging the device, the power socket should be installed near the device and should be easily accessible.
- When charging is completed or not charging, disconnect the charger from the device and unplug the charger from the power outlet.

Environmental protection

- Do not dispose this device and its accessories as ordinary household garbage.
- Please abide by the local laws and regulations on the handling of this device and its accessories, and support recycling operations.



Trademarks

MadRabbit word mark and logos are registered trademarks of Redster Commerce Pvt Ltd. Reproduction in whole or in part without written permission is prohibited. Other companies and products mentioned herein are trademarks of their respective owners.

Made in China.

MadRabbit Warranty

- The device is guaranteed for 12 months from the date of purchase. Repair and maintenance service are free during period.
- The warranty limitation:
 - Man-made damage.
 - Beyond the Warranty period.
 - Accessories damage due to improper use and maintenance.
 - Disassemble the device without manufacturer authority.
- Service Information
 - MadRabbit Website : <https://www.madrabbit.in>



TM



Scan for Register Warranty



Scan for Video Guide