


User Guide


† MadRabbit Trip Wireless Pro

Specification

Model :	MadRabbit Trip Wireless Pro
Headphone Type :	In - Ear
Water Resistant :	IPX5
Bluetooth :	V5.0
Bluetooth Range :	10 m
Frequency Range :	20 Hz - 20 KHz
Impedance :	16Ω
Speaker Size :	10 mm
Battery Capacity :	600 mAh
Charging Time:	1 h
Music Time :	65 h
Standby Time :	620 h
Charging Port :	Type-C
Input :	5 V \approx 500mA

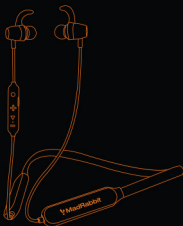

What's in the Box?

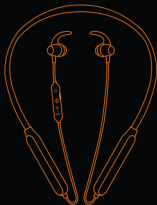

MadRabbit Trip Wireless Pro



User Guide



Charging Cable




Eartips



Catalogue

Product Information

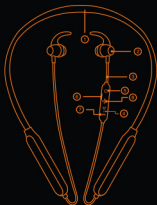

1. Neck Line
2. ABS Plastic Front and Back of the Metal Cavity
3. TPE Cable
4. LED / MIC
5. Turn On / Turn Off / Answer / End Call / Reject Call / Play / Pause
6. Type-C Connector
7. Volume Down / Previous Track
8. Volume Up / Next Track

How to Pair?

In case of no prior connection history

- The neckband will automatically enter into pairing mode once you separate the magnetic earbuds, Red and White light will blink.
- While the neckband is in pairing mode, Turn ON the Bluetooth and search for 'MadRabbit Trip Wireless Plus' and Click to 'Connect'.

In case of active connection history

- Turn ON Bluetooth on your device.
- Search for 'MadRabbit Trip Wireless Plus' in the Bluetooth connection list.
- Click to 'Connect'.
- A voice prompt "Connected" will be heard when successfully connected.

How to Reset?

1. Press and Hold the '+' Button and '-' Button simultaneously for 3 secs.
2. The White and Red indicator will flash.



How to Use?

Power ON

The Neckband will turn on when you separate the earbuds.

Power OFF

The Neckband will turn off when you join the earbuds.

Volume Adjustment

- **To Increase Volume**
Press the Volume '+' Button.
- **To Reduce Volume**
Press the Volume '-' Button.

Control Music Tracks

- **For Previous Music Track**
Press and Hold the Volume '-' Button for 2 secs.
- **For Next Music Track**
Press and Hold the Volume '+' Button for 2 secs.

Control Phone Calls

- **Answer/Hang Up Calls**
Press the Multifunction Button once.
- **Decline Calls**
Press and Hold the Multifunction Button for 2 secs.

Play and Pause Music

Press the Multifunction Button once.


Dual Pairing

(To Connect 'MadRabbit Trip Wireless Pro' to two devices simultaneously)

- Connect the Neckband to one of the devices.
- Switch OFF the Bluetooth of the Neckband and the device.
- Connect the Neckband to the second device and then Switch ON the Bluetooth of the first device.
- The Neckband gets connected to both devices.
- If not, Connect the first device manually once to activate dual pairing.


Voice Assistant

Press and Hold the Voice Assistant Button for 2 secs.

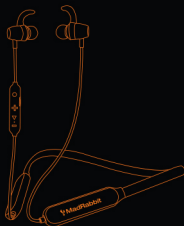

Charge

1. Connect your Neckband to a power source using the included Type-C Charging Cable.
2. A voice prompt "Battery Low" will be heard and the Red LED indicator will flash once every second when the battery runs low (playtime less than 10 mins or voltage lower than 5V DC).
3. The Red LED indicator will remain on while charging (the Neckband can't be turned on during charge).
4. The White LED indicator will remain on once fully charged.

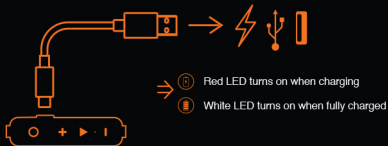

Warning

1. Never dismantle or alter this product by yourself to avoid damages and fire hazards.
2. Do not store this product in extreme temperatures (below 0 °C or above 60 °C). Working temperature: 0 °C - 45 °C.
3. Do not use this product in thunderstorm weather in case of product malfunctions and electric shock.
4. Children below 6 years should be under adult supervision while using this product.
5. For your safety, please do not use it while riding a motorcycle / bike, driving, or crossing the road. For health reasons, avoid listening at a high volume for an extended period. The symbol on the device, batteries (if included), and / or the packaging, indicates that the device and its electrical accessories (for example, an earphone, adapter or cable), and batteries (if included) should not be disposed as household garbage.

MADE IN CHINA



Trademarks

MadRabbit word mark and logo are registered trademarks of Redster Commerce Pvt. Ltd. Reproduction in whole or in part without written permission is strictly prohibited. Other companies and products mentioned herein are trademarks of their respective owners.

MadRabbit Warranty

- The device is warranty for 12 months from the date of purchase. Repair and maintenance service are free during this period.
- The warranty limitation:
 - Man-made damage.
 - Beyond the warranty period.
 - Accessories damage due to improper use and maintenance.
 - Disassembling the device without the authority of the manufacturer.
- Service Information
 - MadRabbit Website : www.madrabbit.in



TM



Scan To Register A Warranty.



Scan For A Video Guide.